



## **HARDWARE INCLUDED**

QTY	PART #	DESCRIPTION	
3	00060-1123	10 x 5/8 sheet metal screw	
3	00060-1370	10-16 x 3/4 tek screw	
2	00060-1064	10-32 x 1/2 machine screw	
2	00060-1155	10-32 hex nut	
2	00060-1166	1/4 washer	
2	08601-2087	36" double sided tape	

1

Place the top shelf into the gondola at the desired height. For example, if you want to build a 16" x 48" x 30" security case you would place the top shelf about 30" from the bottom of the shelf bracket to the shelf or deck below (see below).

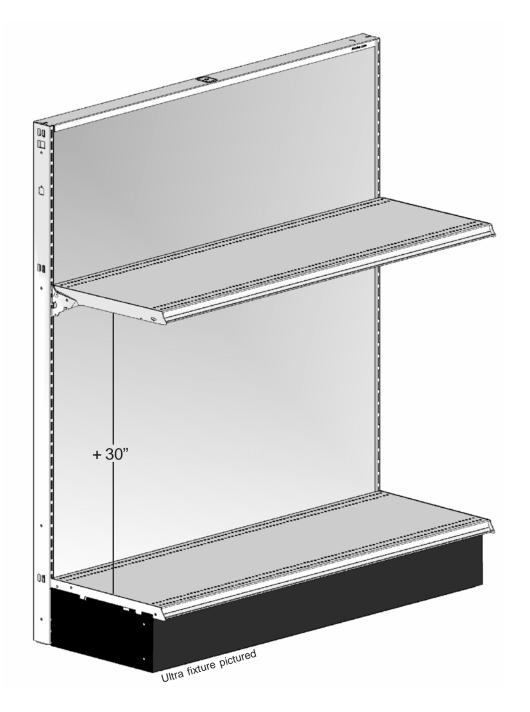


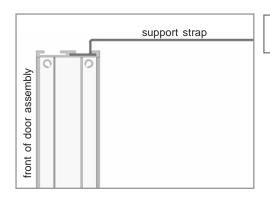


With the front of the door assembly facing away from you (door handles are away from you) slide the support straps into the channel closest to you about 8" from each end.



2

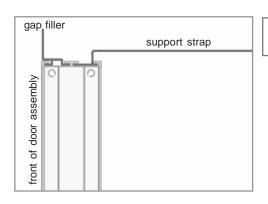



With the front of the door assembly facing you slide the gap filler in from one end to the other so the gap filler is centered in the frame of the door assembly.

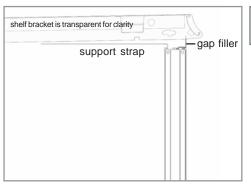

4


With the front of the door assembly facing you tip the top in slightly and insert the gap filler behind the ticket moulding, then slide the bottom of the door assembly in so it sits vertical on the bottom shelf or deck.

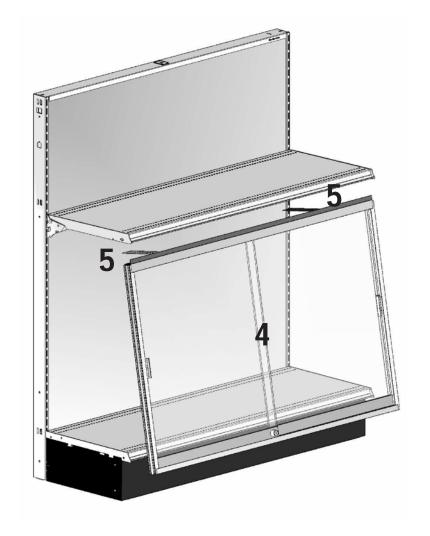

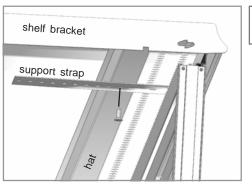


5


Attach the support strap on the backside of the door assembly to the outer—most hat on the top shelf using one (1) 10-16 x 3/4" tek screw per support strap.

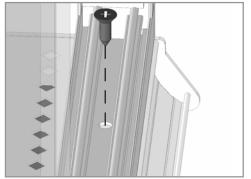


6


Attach the bottom of the door assembly to the bottom shelf or deck with two (2) 10 x 5/8" sheet metal screws, 1 per end end of the door assembly.

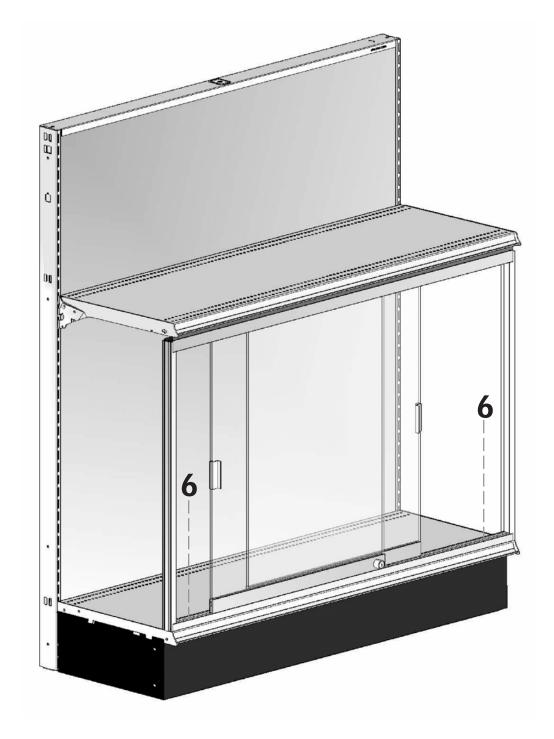

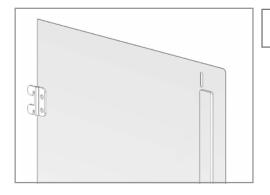


Apply one piece of double face tape to the inside of each end panel (end panel hooks face in). If the height of the end panel is shorter then the length of tape trim the tape to run between the two holes in the end panel. If the end panel is taller then the length of tape cut the tape in half and apply each half one just below the top hole and the other just above the bottom hole as pictured to the left and below.

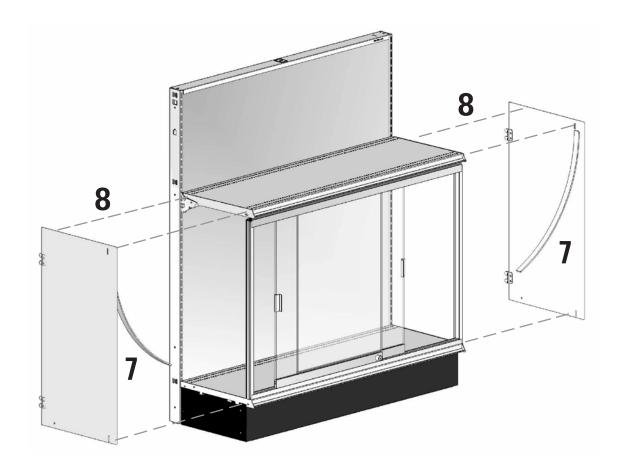

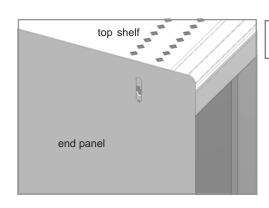

Hook the end panels into the slots on the uprights so the hole in the end panel aligns with the keyed hole on the shelf as pictured to the left. When installed the end panel should overlap the top shelf slightly as well as the bottom shelf or deck.

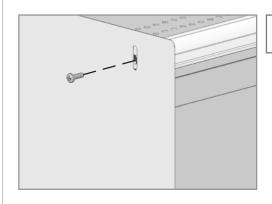

Secure the end panel to the top shelf using one (1) 10-32 x 1/2" machine screw, washer and hex nut per end panel. The washer goes inside the security case with the nut.

