

4FT E READER DISPLAY PARTS LIST:
 1- 25X48 EXTENDED PEGBOARD HOLDER
 1- 25X48 WHITE PEGBOARD PANEL
 1- TOP CORNICE
 33- 3" PLASTIC PEGHOOKS
 1- POSA DISPLAY 1048
 7- 46 1/4" PEG STRIP W/ FAST TRACK
 1- 46 3/4" DIGITAL CARD SIGNHOLDER


4FT E BOOK CARD DISPLAY PARTS LIST:
 2- 25X48 EXTENDED PEGBOARD HOLDER
 2- 25X48 WHITE PEGBOARD PANEL
 1- TOP CORNICE
 66- 3" PLASTIC PEGHOOKS
 4- 8 1/2x11 SIGN FRAME
 6- 46 1/4" PEG STRIP W/ FAST TRACK
 1- 5x7 SIGN FRAME
 1- 46 3/4" DIGITAL CARD SIGNHOLDER

Walmart Part No.


100637714
100637713

Walmart Description

4FT E BOOK CARD DISPLAY
4FT E READER DISPLAY

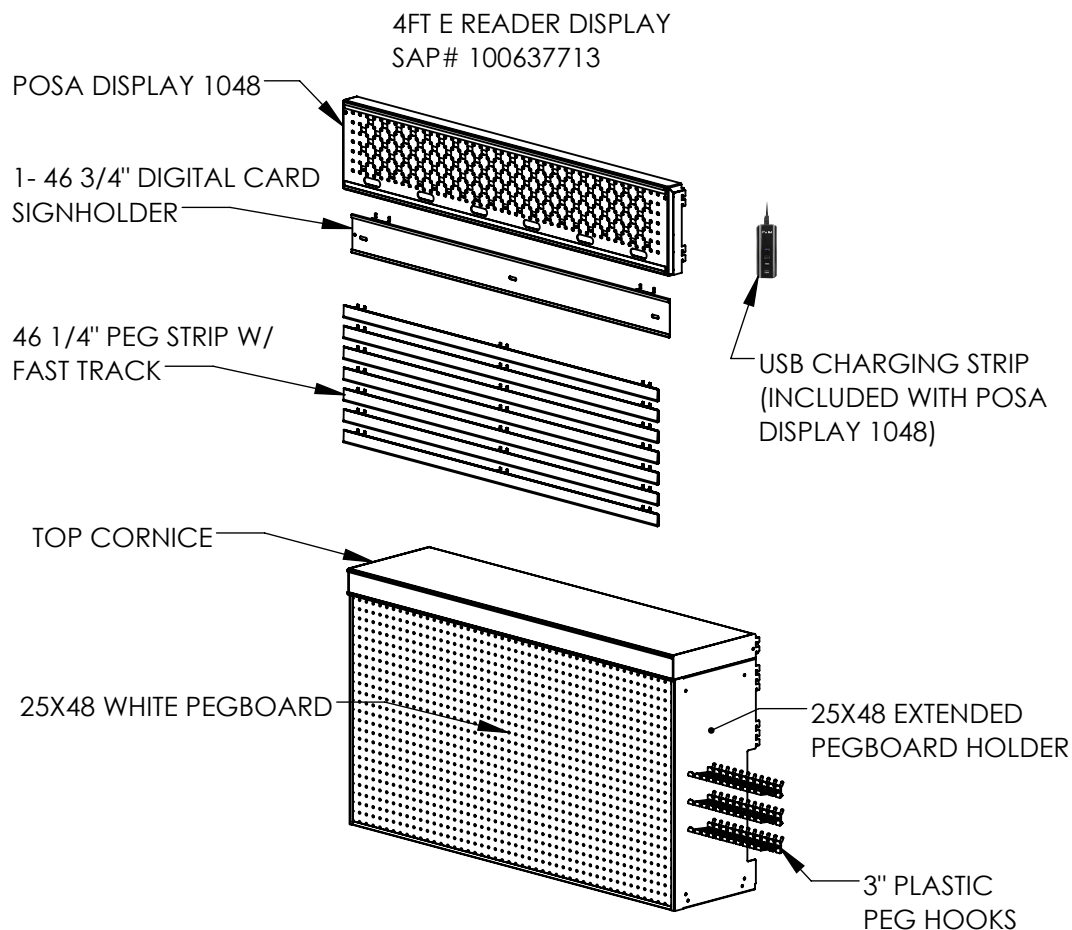

4FT E BOOK CARD DISPLAY
SAP# 100637714

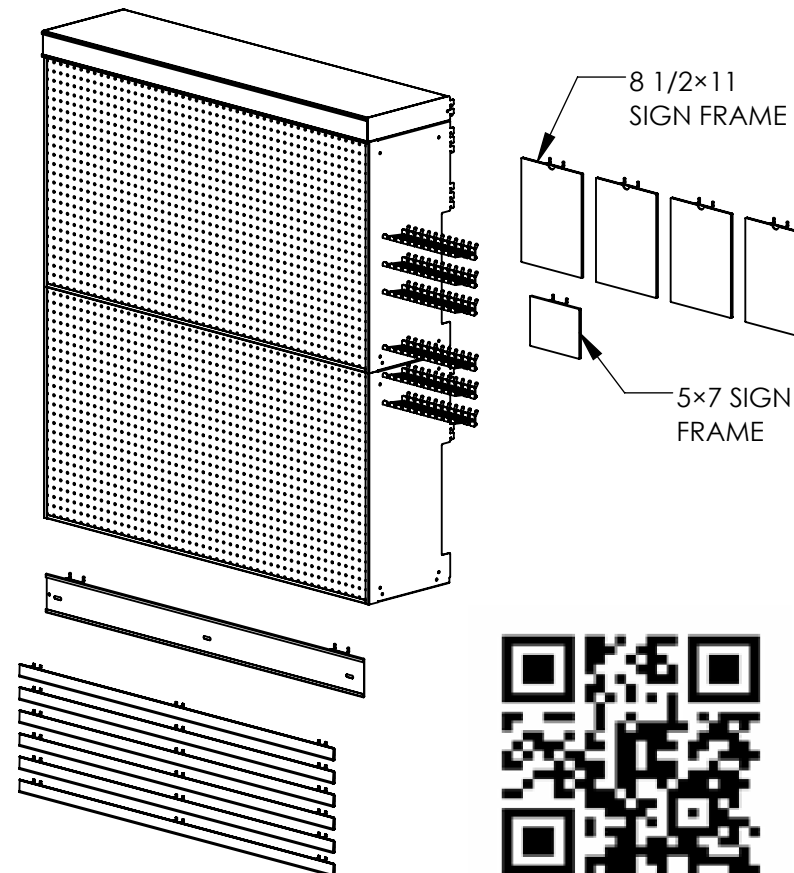


STEP 1: INSTALL 1 EXTENDED PEGBOARD HOLDER INTO GONDOLA AS SHOWN IN DETAIL A

STEP 2: INSTALL 1 PIECE OF PEGBOARD AS SHOWN IN DET A


STEP 3: INSTALL 2ND EXTENDED PEGBOARD HOLDER AS SHOWN IN DET B

STEP 4: INSTALL 2ND PIECE OF PEGBOARD AS SHOWN IN DET B


STEP 5: INSTALL TOP CORNICE AS SHOWN IN DETAIL C

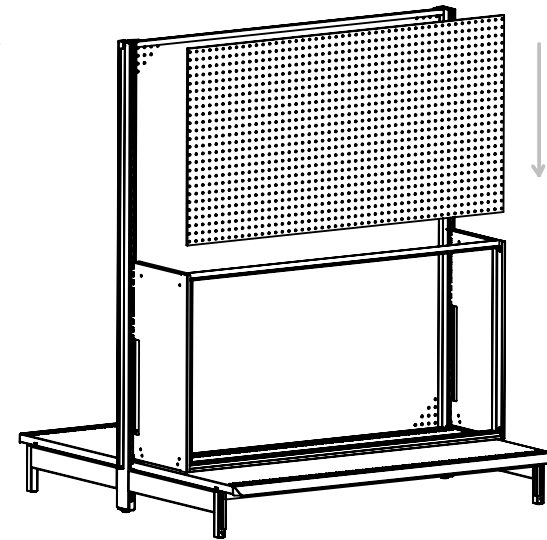

DETAIL A

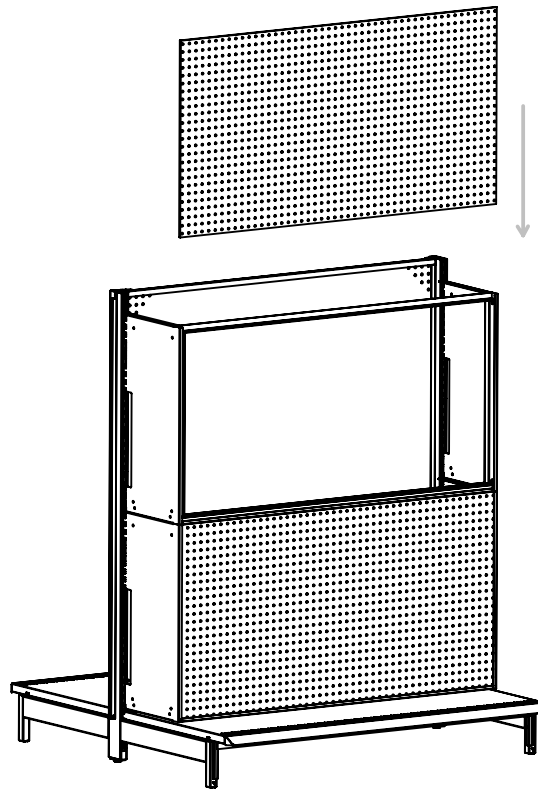

DETAIL B

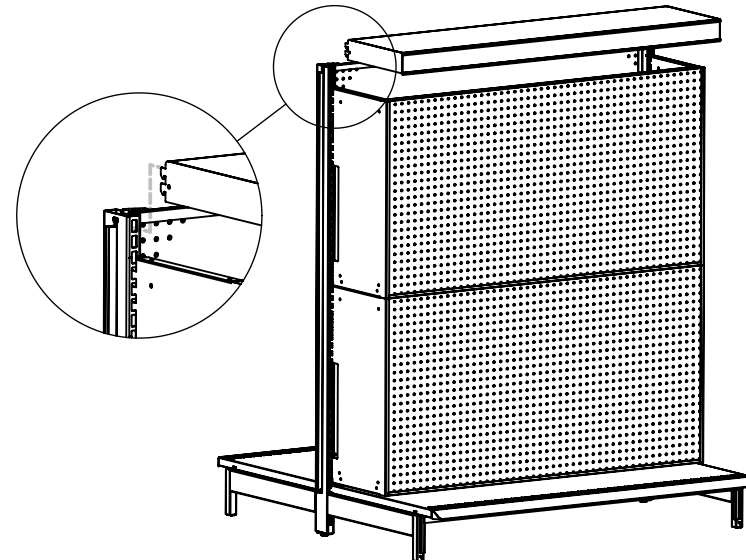

DETAIL C


NOTE! SKIP STEPS 6-8 IF YOU ARE NOT INSTALLING THE E-READER DISPLAY

STEP 6: INSTALL 1 EXTENDED PEGBOARD HOLDER, 1 PIECE OF PEGBOARD, AND TOP CORNICE INTO GONDOLA SECTION NEXT TO E-BOOK CARD DISPLAY AS SHOWN IN DETAIL D


STEP 7: REMOVE SECURITY SCREWS FROM POSA DISPLAY AND INSTALL IT ABOVE THE TOP CORNICE AS SHOWN IN DETAIL D
INSTALL USB CHARGING STRIP IN POSA DISPLAY TO POWER E-READERS.

STEP 8: CLOSE POSA DISPLAY AND REINSTALL SECURITY SCREWS TO SECURE IT TO GONDOLA

STEP 9: INSTALL PEGHOOKS, SIGNHOLDERS, AND SIGNAGE PER MODULAR (EXAMPLE LAYOUT SHOWN IN DETAIL E)

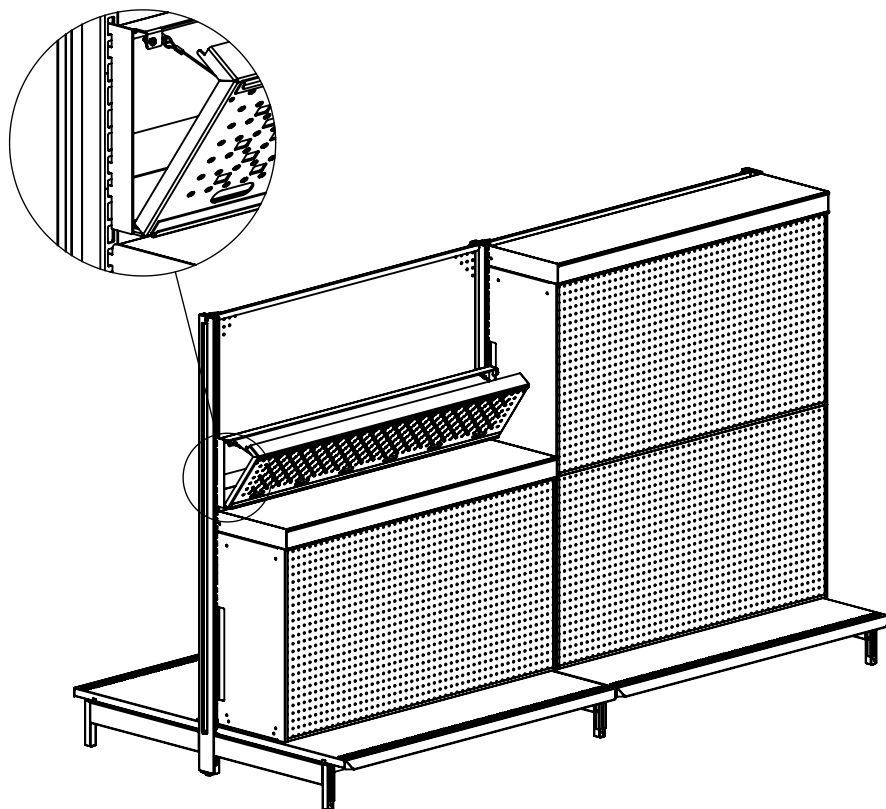

DETAIL D

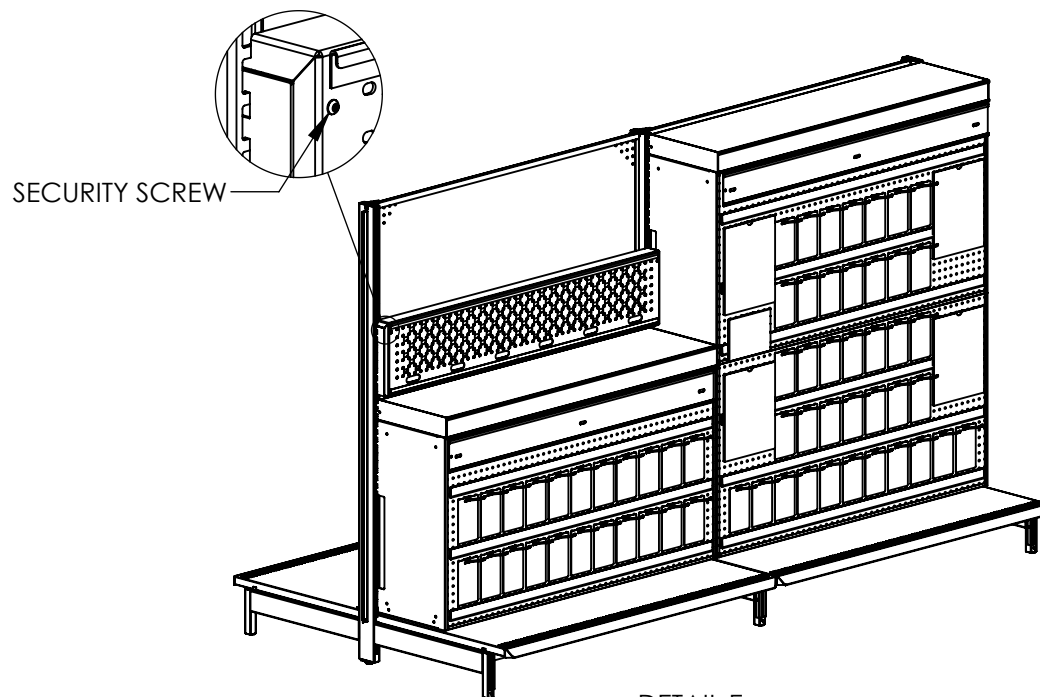

DETAIL E