

Step 1: After assembling all Photo Kiosk cabinets, use screws from hardware bag to attach bumper tracks and end caps to exposed end of 5' Fuji Kiosk cabinet 5" and 24" from the floor.

Note: Screws are self drilling and do not have to line up with the holes in the cabinet or bumper end caps.

Step 2: Snap bumper covers onto bumper tracks.

Walmart Part No. **100619277**

Walmart Description

5FT FUJI KIOSK CABINET

