

### IMPORTANT SAFETY INSTRUCTIONS

## WARNING - When using checkout lane 35387000, basic precautions should always be followed, including the following:

- Read all the instructions before using checkout lane
- To reduce the risk of injury, close supervision is necessary when lane is used near children.
- Do not contact any moving parts (belts, pulleys, etc.).
- Only use attachments/peripherals recommended or sold by LA Darling
- Do not use outdoors.
- For cord-connected peripherals on checkout lane following shall be included:
- O To disconnect, turn all controls to the off ("O") position, then remove plug from outlet.
- O Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Unplug from outlet when not in use and before servicing or cleaning.
- O Do not operate any peripheral with a damaged cord or plug, or after the peripheral malfunctions or is dropped or damaged in any manner. Return peripheral to the ECRS RMA Department for examination, repair, or electrical or mechanical adjustment.
- For a permanently connected peripheral Turn the power switch to the off position when the appliance is not in use and before servicing or cleaning.
- For a grounded peripheral Connect to a properly grounded outlet only.
- For a stationary type To Reduce the Risk of Electric Shock Connect to a receptacle that is protected by a ground fault circuit interrupter (GFCI).
- For a fixed type Connect to a branch circuit that is protected by a ground fault circuit interrupter (GFCI).

#### SAVE THESE INSTRUCTIONS


#### **GROUNDING INSTRUCTIONS**

This appliance must be grounded. In the event of malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. RAPTOR is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**DANGER** - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. The conductor with insulation having an outer surface that is green with or without yellow stripes is the equipment-grounding conductor. If repair or replacement of the cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.



# Step 1: Remove protective film from stainless steel surfaces. Step 2: Position the Belted Cabinet per floor plan.

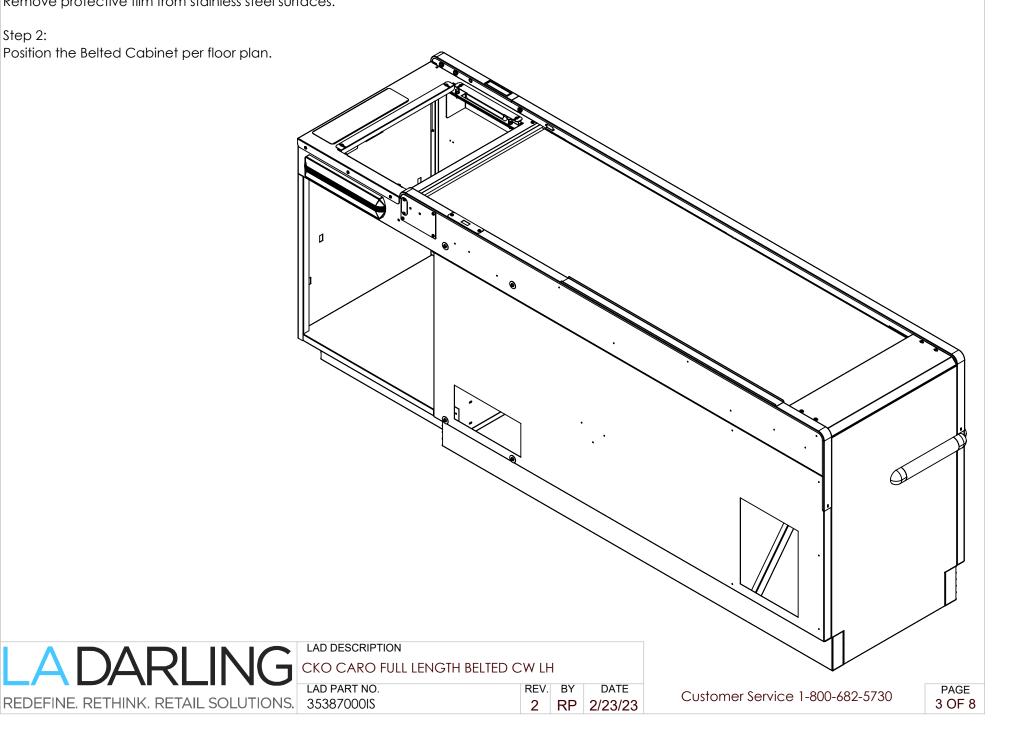


Step 3:

Place the Bag Carousel at the scanning end of the Belt Cabinet.


Carousel opening is adjacent to Cabinet opening.

Attach using provided hardware.

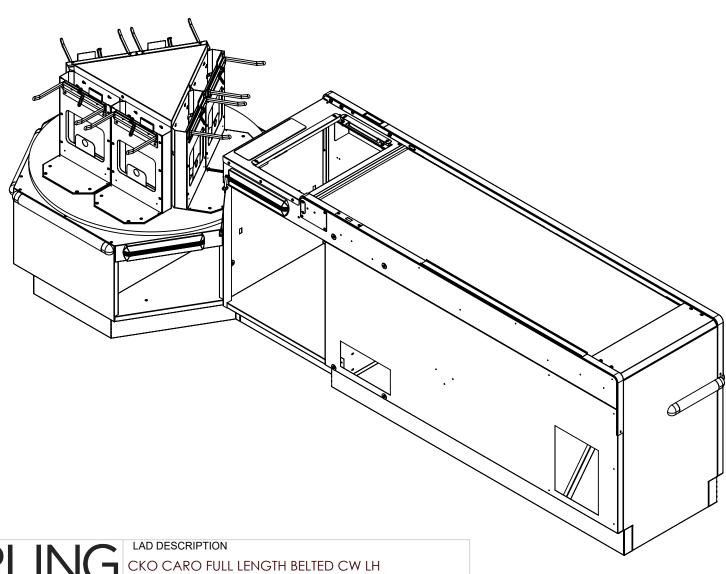

Step 4:

Position the Cash Stand with its Security Shield opposite the Belt Cabinet. Attach using provided hardware.

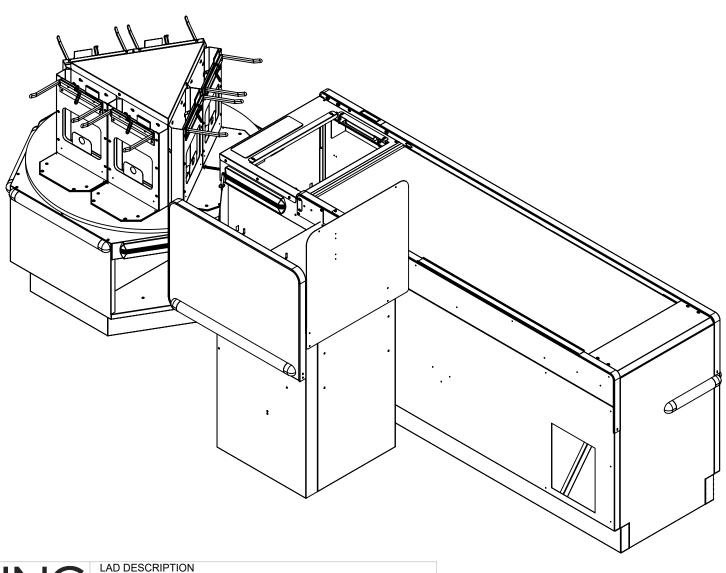

LADARLI	ING	(
REDEFINE, RETHINK, RETAIL S	SOLUTIONS.	

CKO CARO FULL LENGTH BELTED CW LH

LAD PART NO. 35387000IS

REV. BY 2 RP

BY DATE RP 2/23/23

Customer Service 1-800-682-5730

PAGE 5 OF 8 Step 5: Attach the (2) Filler Panels using provided hardware. LAD DESCRIPTION

REDEFINE. RETHINK. RETAIL SOLUTIONS. 35387000IS

CKO CARO FULL LENGTH BELTED CW LH


LAD PART NO.

REV. BY

DATE RP 2/23/23

Customer Service 1-800-682-5730

PAGE 6 OF 8

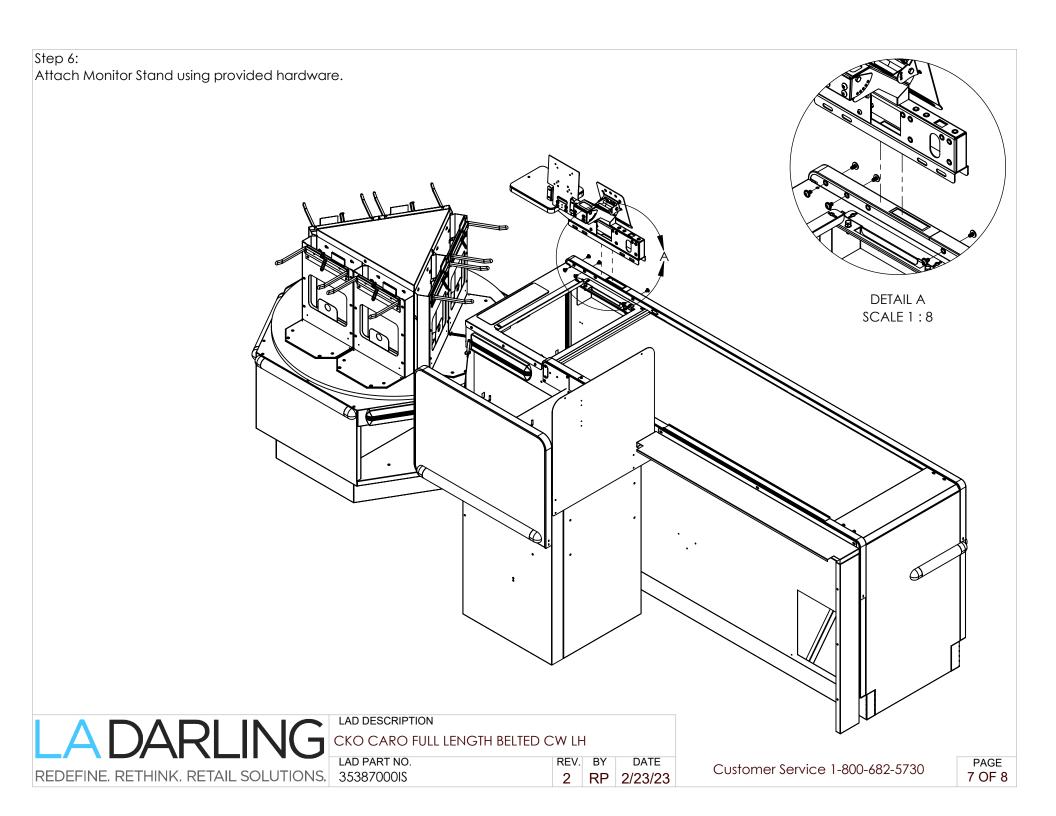

Step 7:

Attach BOB Mirror.

Step 8:

Remove protective film from bumpers.
Attach Power Pole to Scanner Cabinet.

Step 9:

Have electrician run conduit to power pole and connect all electrical devices

