


Walmart Part No. **100682487**


Walmart Description

**APPAREL DIGITAL TOWER
DISPLAY 48X19X120**

Installed on T-system gondola

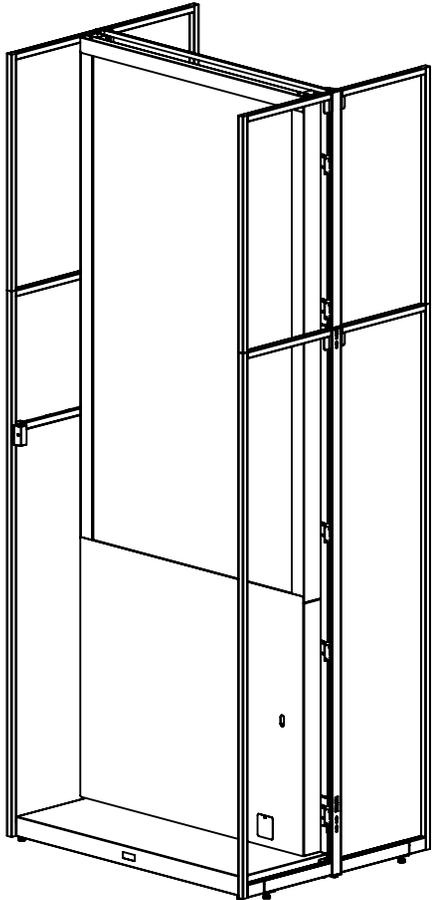

LA Darling provided items

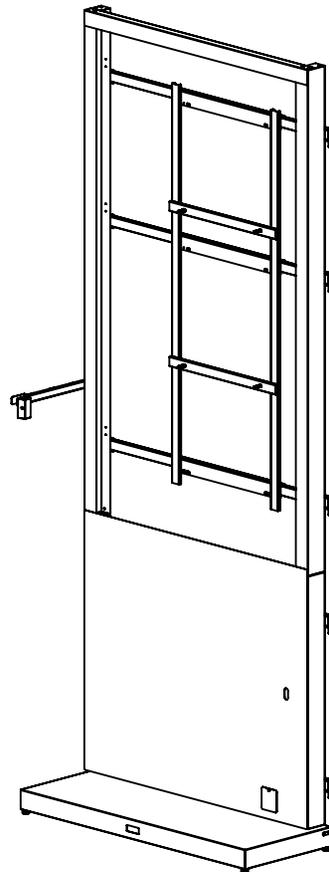

Scan the QR code or visit
www.ladarling.com/digital-tower/ for the
latest copy of the instruction sheets.

Customer Service 1-800-682-5730

PAGE
1 OF 5



Step 1: Install hangbars in locations shown below.

Step 2: Slide mounting plate behind hangbars so that it hooks over the second hangbar from the floor. Position it 7 1/2" from the right end of the hangbar.

Note! Electrical wires are not shown in these views.

Step 3: Install USB breakouts and mains inlet on mounting channel.

Step 4: Attach tech stack box and mounting channel to mounting plate with #8 screws.

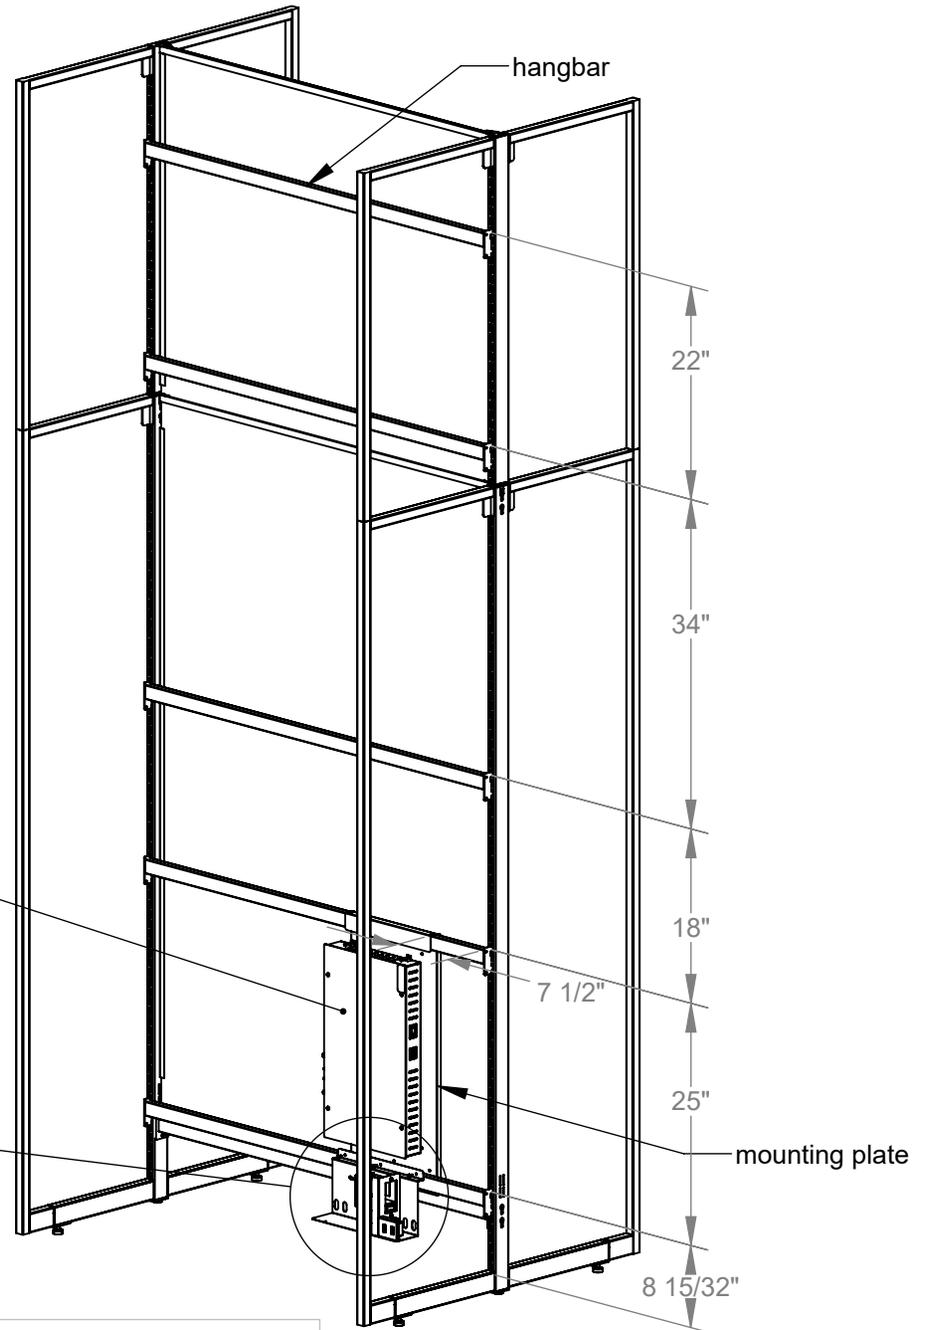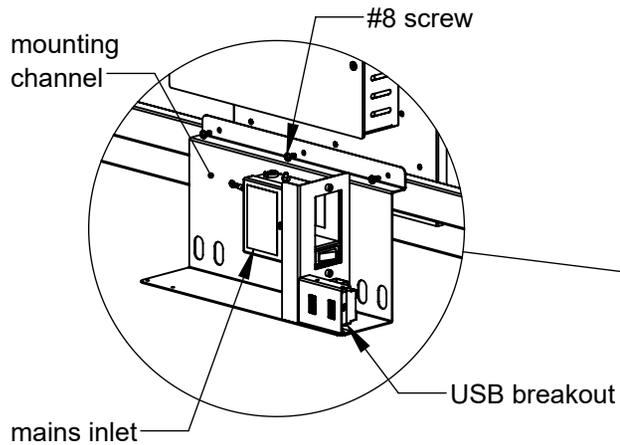


Step 5: Mount 85" TV to mounting frame with M8 screws.

Step 6: Hang TV and mounting frame onto top three hangbars. Snap button will lock TV frame to lower hangbar.

Step 7: Hook IR camera and housing into front of camera mtg bracket kit.


Step 8: Route IR camera USB cable through mtg bracket hole, and along mtg bracket. Attach bracket cover panel over USB cable.

Step 9: Hook camera mtg bracket kit into upright slots approx. 64" above the floor.

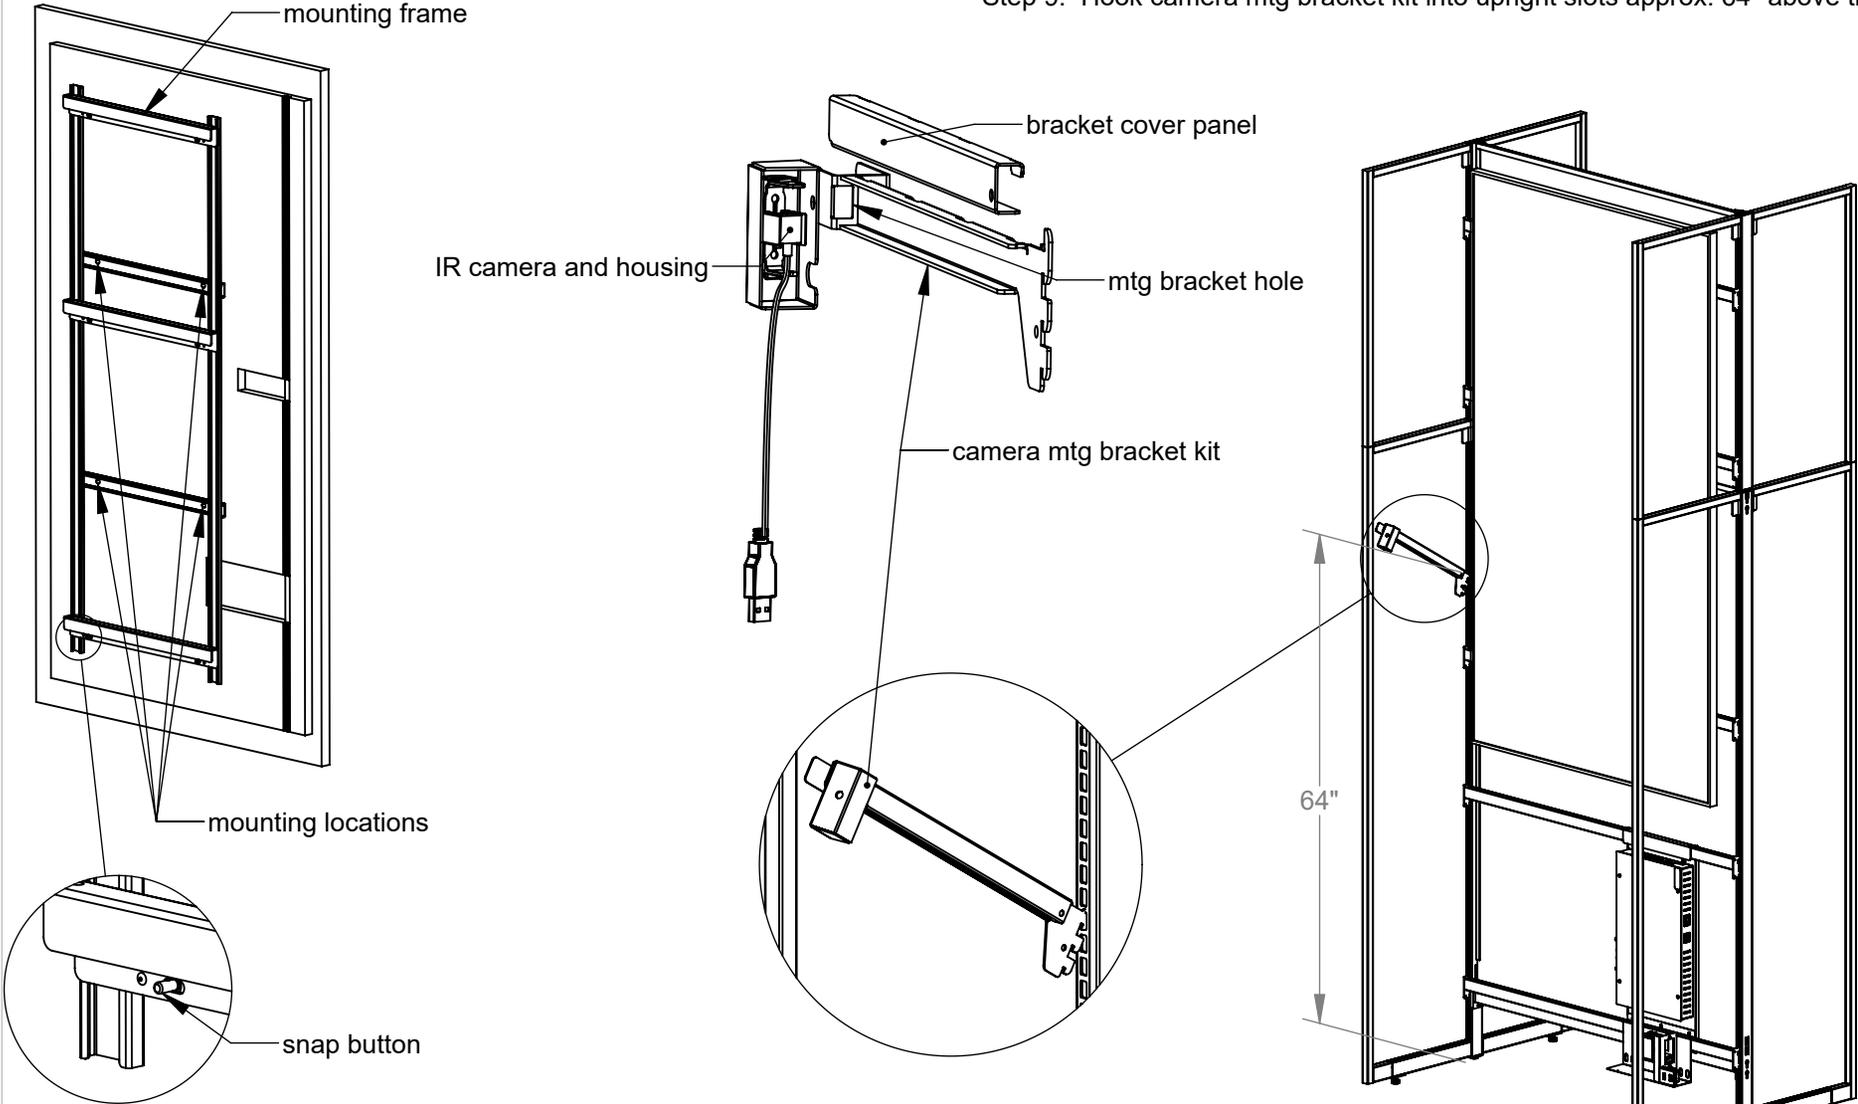

Step 10: Assemble LH and RH tower channels with two 1/4"-20 screws, each.

Step 11: Hook LH and RH tower channels onto hangbars.


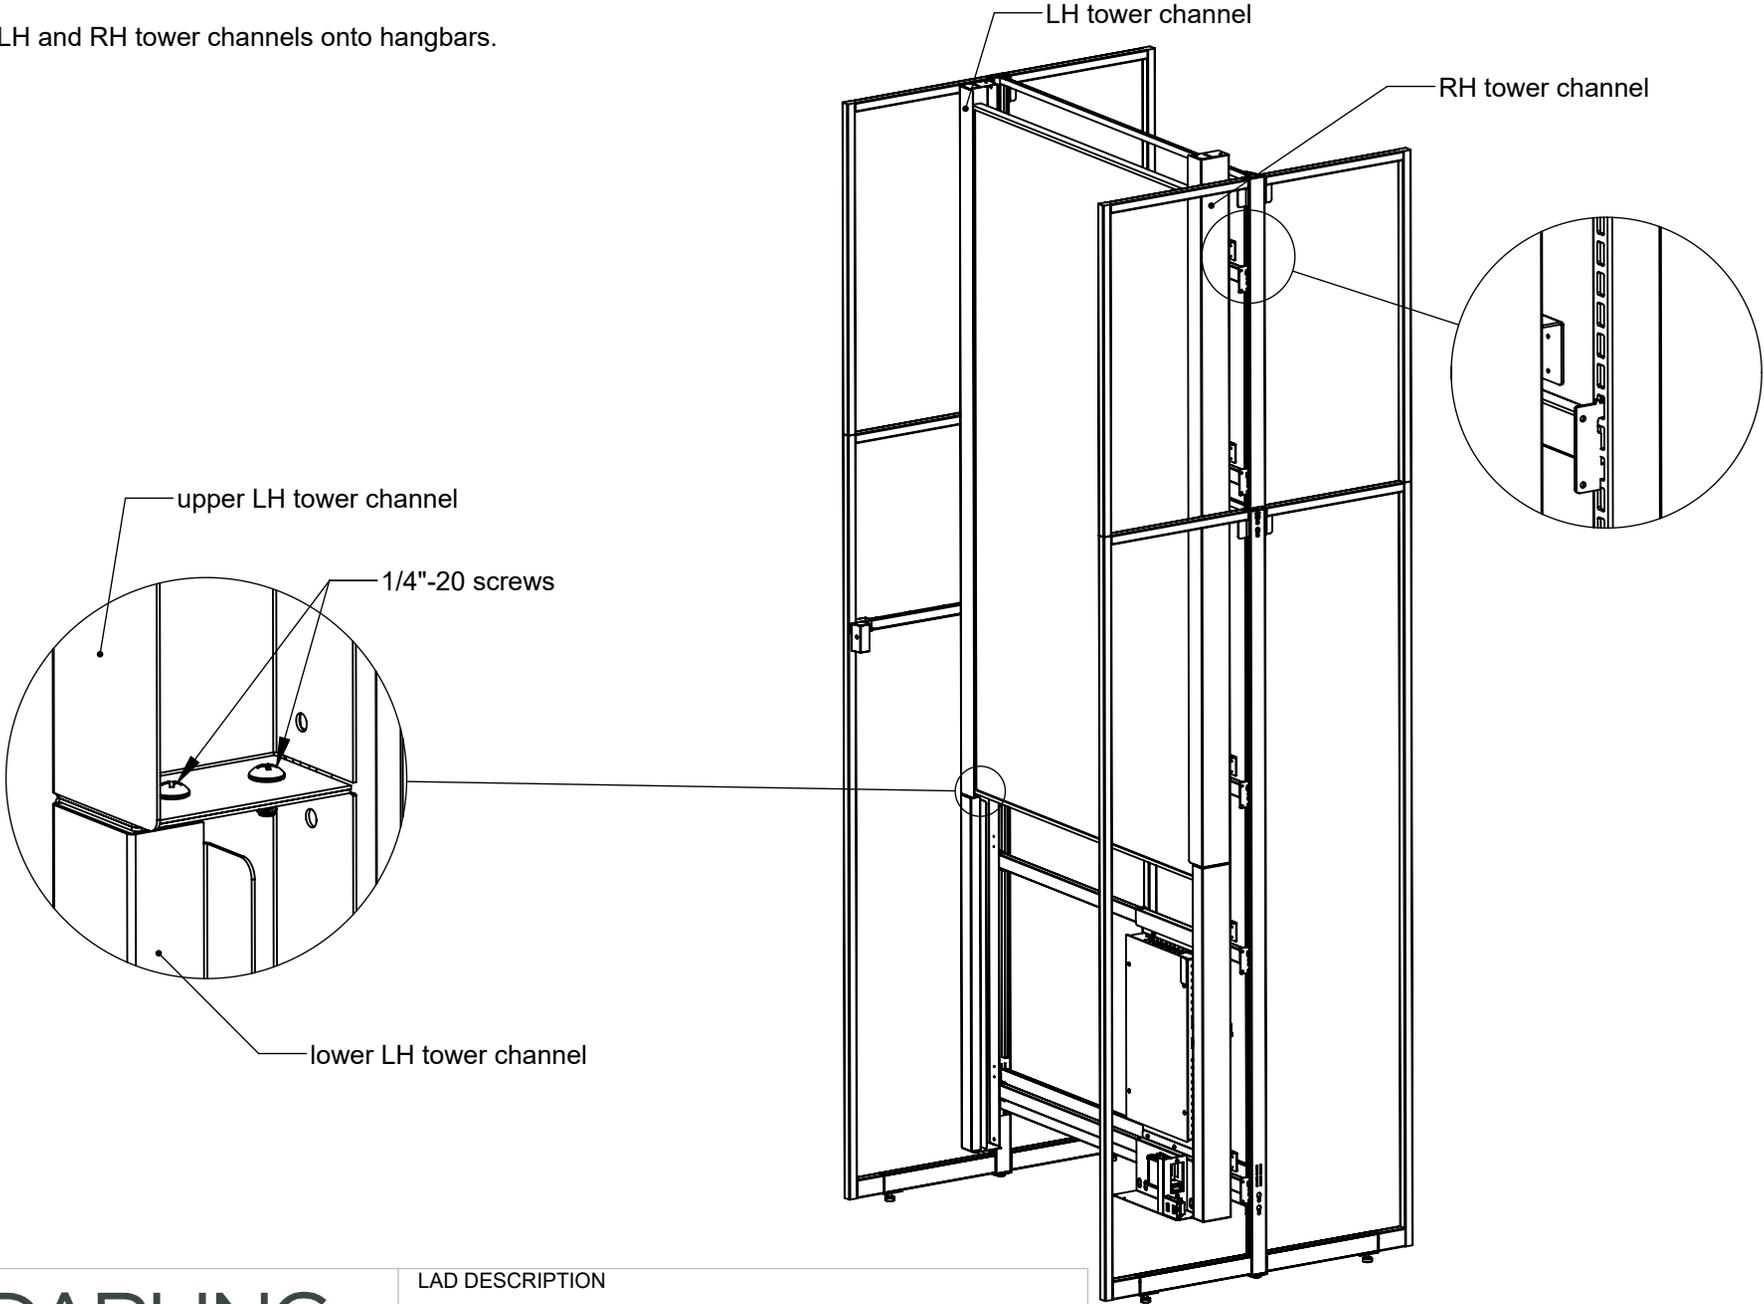


Step 12: Insert top rail into slots on LH and RH tower channels. Secure top rail to tower channels with a TEKS screw on each end.

Step 13: Attach presence sensor to bracket at front of base with #6 screw. Slide bronze acrylic cover in front of sensor and secure with #8 screw.

Step 14: Slide base back so that base hooks lock into bottom slots on uprights. Ensure that levelers on base are touching the floor.

Step 15: Attach cover panel with magnets to LH and RH tower channels.

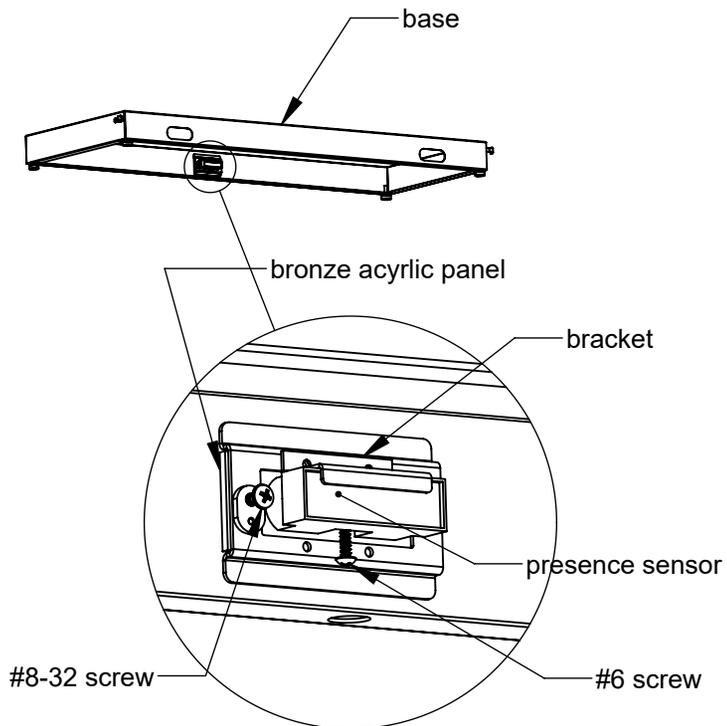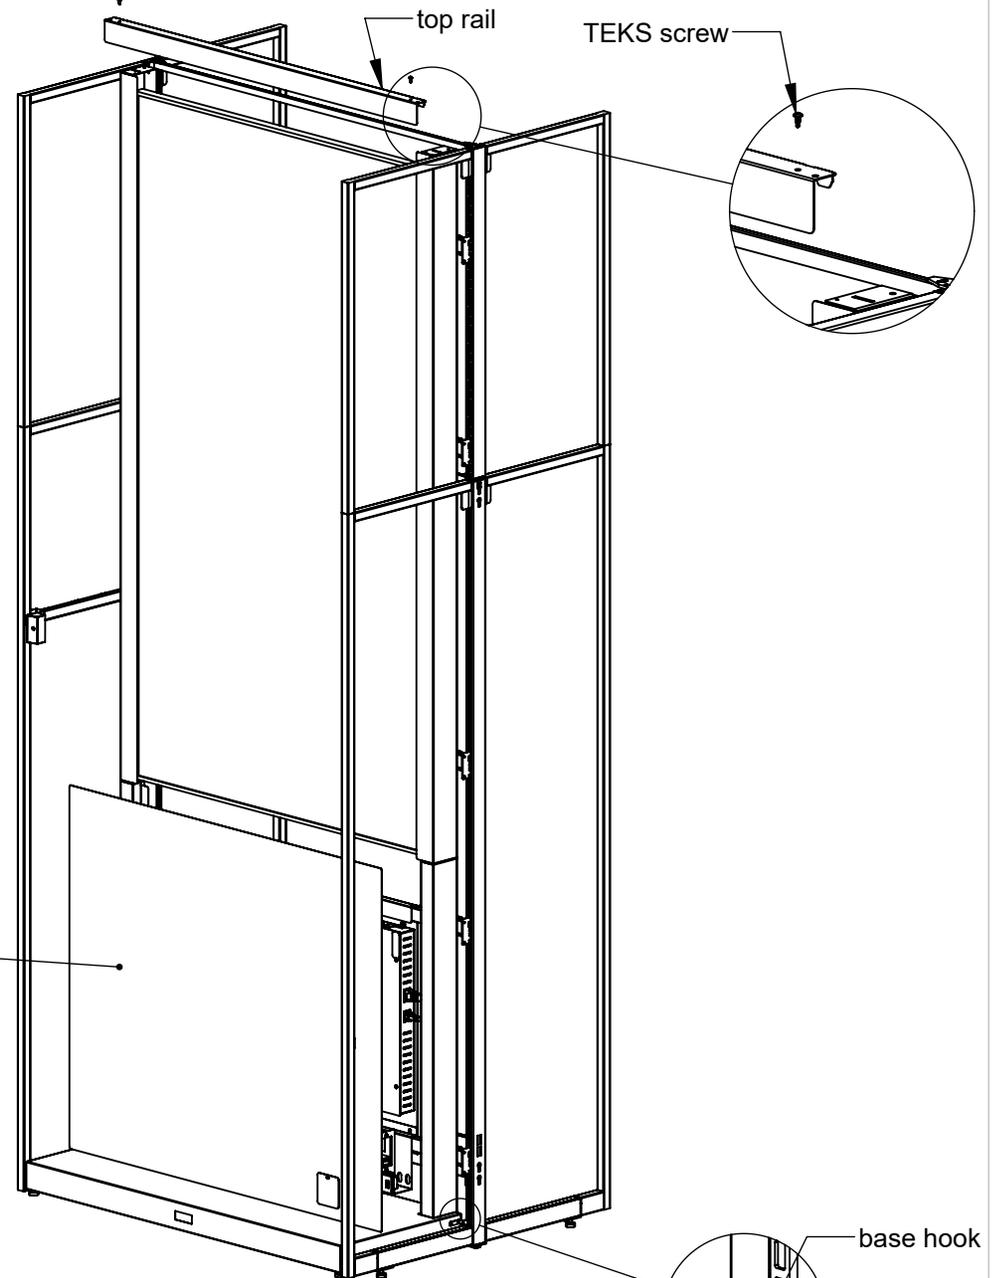

cover panel with magnets