

# WAL-MART MONEY CENTER INSTALLATION/ PRODUCT MANUAL

## **PAGE # - CONTENTS:**

- 2 - EXAMPLE LAYOUT
- 3 - DESK MONEY CENTER 1-SIDED
- 4 - DESK MONEY CENTER 2-SIDED
- 5 - MONITOR STAND CONNECTION
- 6 - MONEY CENTER SERVICE COUNTER 96X28
- 7 - CABINET INSTALLATION INSTRUCTIONS
- 8 - MC CKO MOD CAB FIN SERVICE
- 9 - KIT END DIVIDER PANEL
- 10 - KIT END DIVIDER PANEL
- 11 - SERVICE COUNTER WITH WEDGE LH
- 12 - SERVICE COUNTER WITH WEDGE RH
- 13 - BUMPER KIT BLACK 2PC
- 14 - INSTALLATION BUMPER KITS
- 15 - KNOCKOUT HOLE LOCATIONS




Visit [www.ladarling.com/resources](http://www.ladarling.com/resources) or scan the QR code above for the latest assembly instructions.


LAYOUT EXAMPLE - REFER TO FLOOR  
PLANS FOR YOUR LAYOUT.

53587001C072 - KIT END  
DIVIDER PANEL (WMT  
SAP#100586326)

ADA CLEAR SPACE REQUIRED  
(36" L X 27" D)  
DO NOT INSTALL ANY FIXED ITEMS  
IN THIS AREA  
(E.g. Mounting Brackets, Divider Panels, etc.)  
DO NOT OBSTRUCT THIS AREA

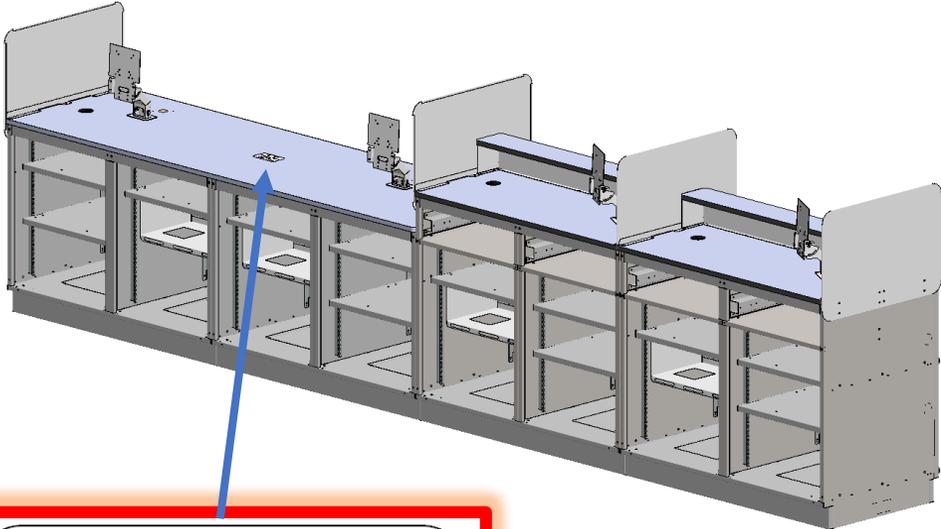

ADA CLEAR SPACE REQUIRED  
(36" L X 27" D)  
DO NOT INSTALL ANY FIXED ITEMS  
IN THIS AREA  
(E.g. Mounting Brackets, Divider Panels, etc.)  
DO NOT OBSTRUCT THIS AREA

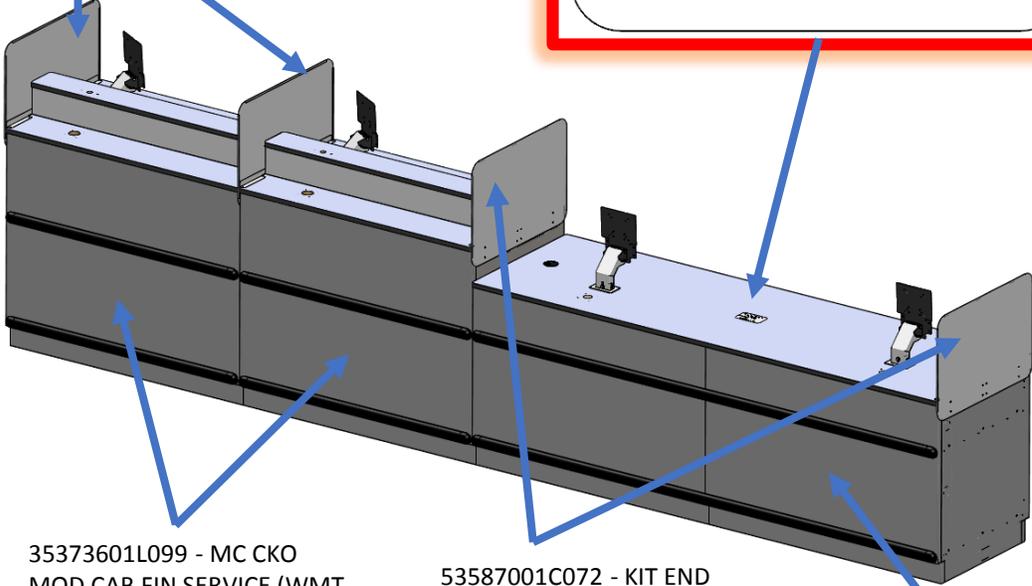

35373601L099 - MC CKO  
MOD CAB FIN SERVICE (WMT  
SAP# 100581448)

53587001C072 - KIT END  
DIVIDER PANEL (WMT  
SAP#100586326)

35373401L099 -MC Service  
Counter 96x28 (WMT SAP#  
100585574)

LAD Part #  
35373801C072

Desk Money  
Center Single Sided

WMT SAP#  
100590966

**NOTE:**  
REMOVE BOTTOM  
SHIPPING PANEL  
AFTER INSTALLATION.

63 1/2"

10 7/8"

1 1/2" TYP

1 1/2" TYP

45 19/32"

41 1/2"

22"

61 3/4"

10 9/16"

9 13/32"

Money Services

1

2

3

4

5

6

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION	FINISH
1	2	35373802	SINGLE PEDESTAL ASSEMBLY	PTC
2	1	35373716	LEDGE ASSEMBLY	PTC
3	1	35373711	SHIPPING BRACE	PTC
4	14	O121	MACH SCR 1/4-20 X 1/2" RDHD	N006
5	2	53689201	SECURE-A-PEN W/ ADHESIVE BASE	N000
6	1	53682001	REMOVE PANEL LABEL	N017
7	1	53254901	MONEYCENTER DECAL	N000
8	4	0054499	SCREW, 1/4 - 14 X 3/4" LG - PAN HEAD DRILLING	N006

ALL INSIDE RADII TO BE 1/32" - 1/32" UNLESS OTHERWISE SPECIFIED

REV	DATE	BY	CHK	ENG	DESCRIPTION
1	03/06/18	CRM	CRM		RELEASE FOR PRODUCTION
2	07/19/18	DSB	DSB		ADDED ITEM 8 QTY 2 EA.
3	07/27/18	CRM	CRM		ADDED ITEM 7
4	02/18/19	CH	CH		UPDATED 35373716 ADDED 0054499 FOR CONNECTION OF TOP

THIS DRAWING, INCLUDING ALL INFORMATION SET FORTH THEREON, IS THE PROPERTY OF L.A. DARLING. IT IS LOANED IN CONFIDENCE SUBJECT TO RETURN BY INDICATED DATE UPON REQUEST AND UNDER THE UNDERSTANDING THAT NO DISSEMINATION OF THIS INFORMATION CONTAINED THEREON SHALL BE MADE WITHOUT THE PRIOR WRITTEN CONSENT OF L.A. DARLING. ALL RIGHTS TO DESIGN AND INVENTION ARE RESERVED.

L.A. DARLING COMPANY

9139

9139

PTC

35373801


1 OF 2

**LAD Part #  
35373701C072**

**Desk Money  
Center Double Sided**

**WMT SAP#  
100591111**



**NOTE:  
REMOVE BOTTOM  
SHIPPING PANEL  
AFTER INSTALLATION.**

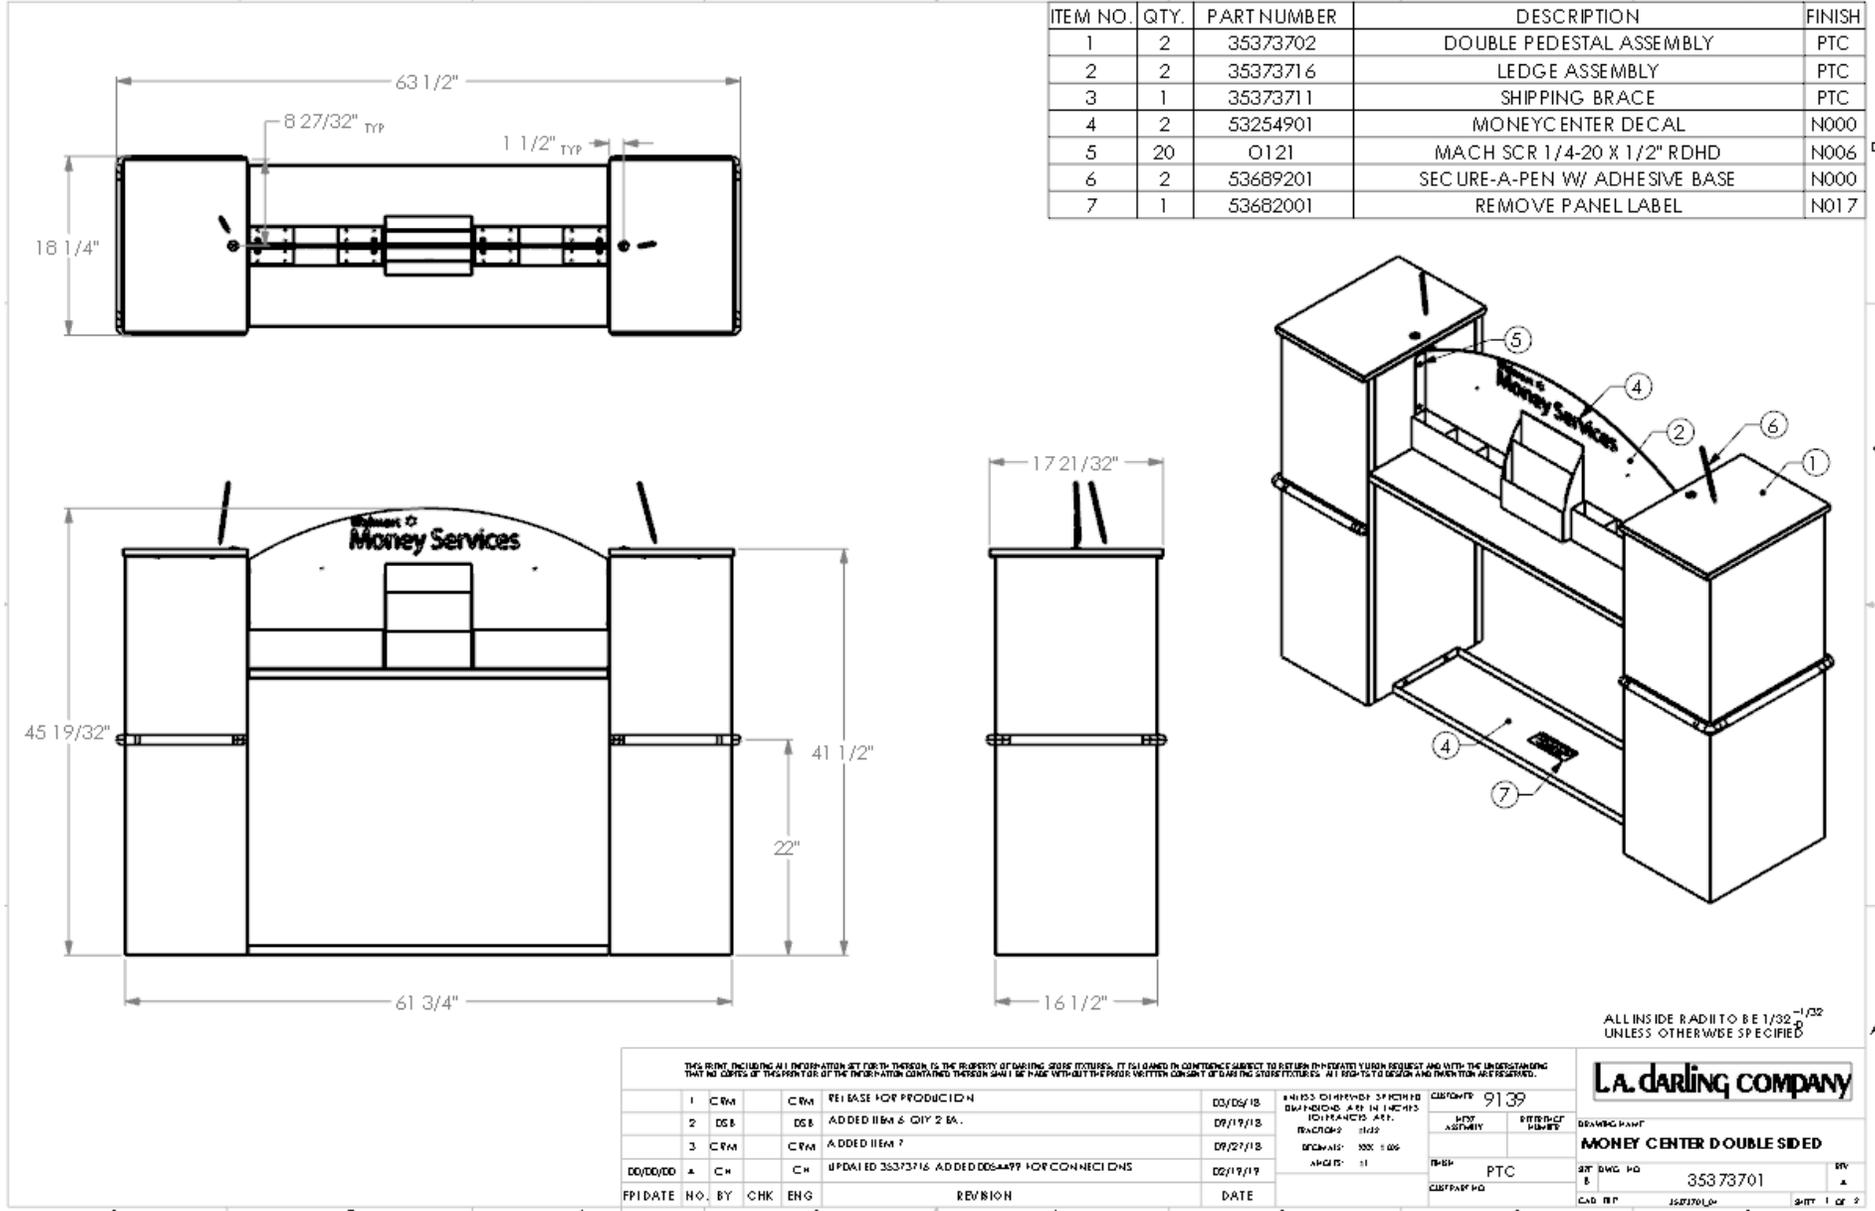


**NOTE:**  
**LOWER SECTION OF MONITOR STAND SHOULD ALREADY BE ATTACHED TO UNDERSIDE OF COUNTERTOP.**

**SECURE UPPER SECTION OF MONITOR STAND USING (3) 1/4-20 X 1/2" HEX HEAD BOLTS AND (3) 1/4" FLAT WASHERS PROVIDED.**


53627901BH – SINGLE MONITOR HARDWARE KIT CONSIST OF:  
 #1 - 4EA RD HD MS #8 X 1/4"  
 #2 – 4EA RD HD MS #8 X 3/4"

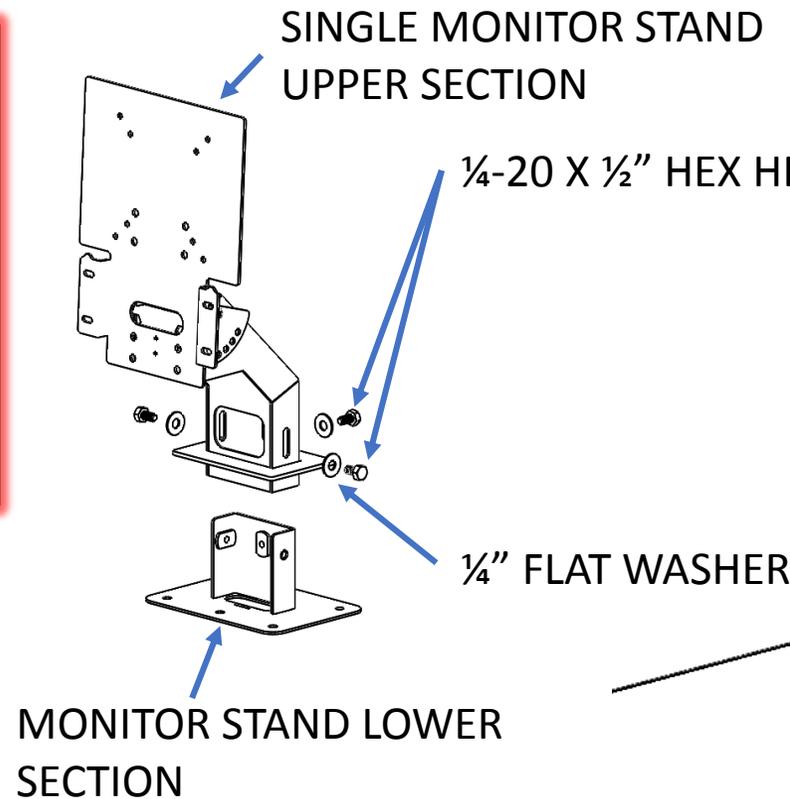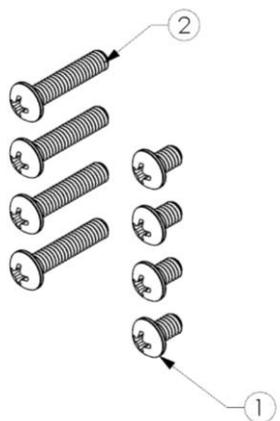

MONITOR STAND LOWER SECTION ALREADY INSTALLED TO UNDERSIDE OF COUNTERTOP

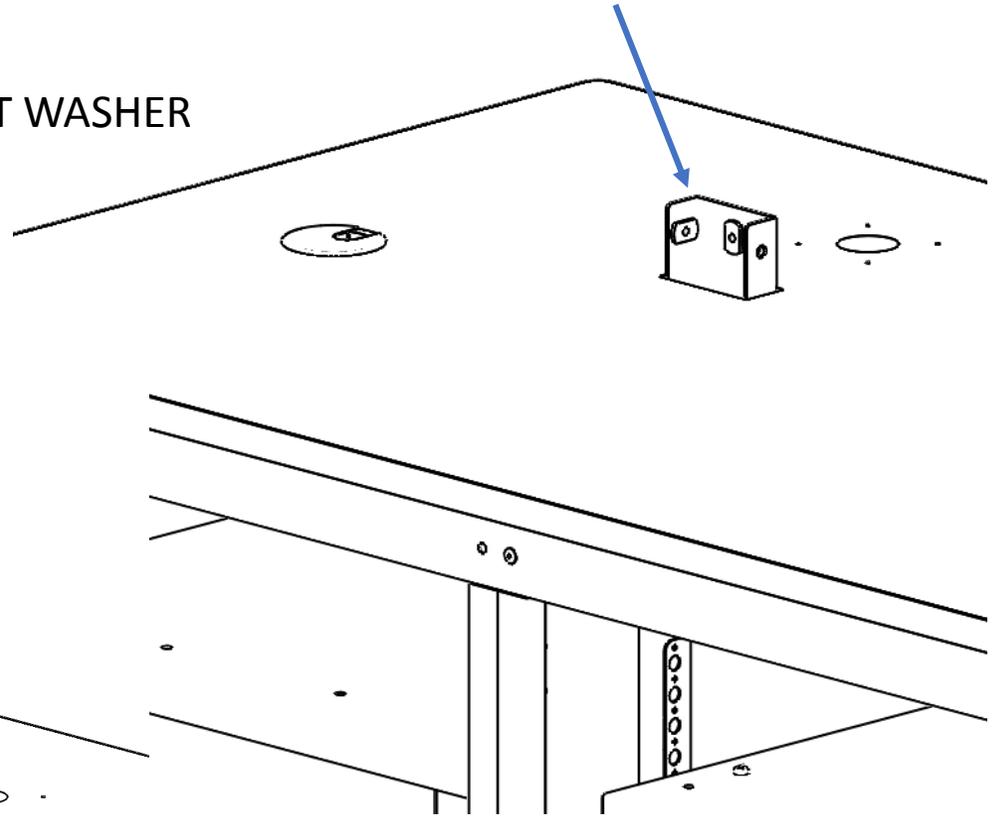



MONITOR STAND AFTER COMPLETED ASSEMBLY

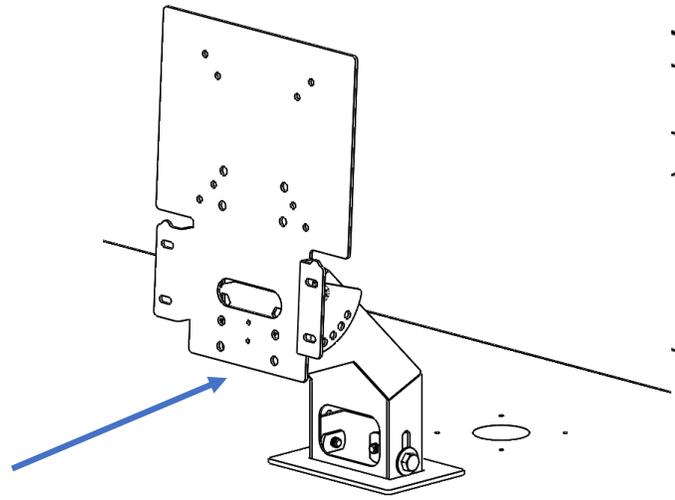


LAD Part #  
35373401L099

MC Service Counter 96x28

WMT SAP#  
100585574

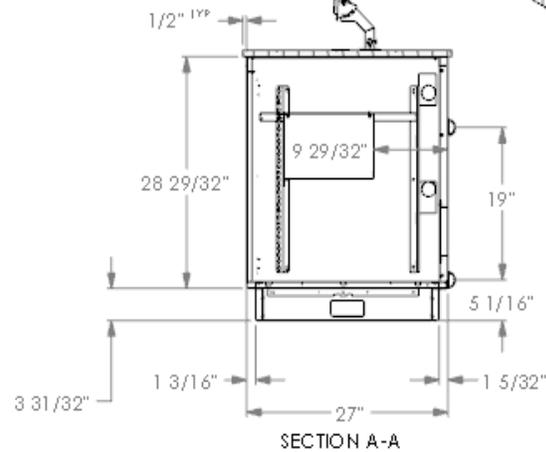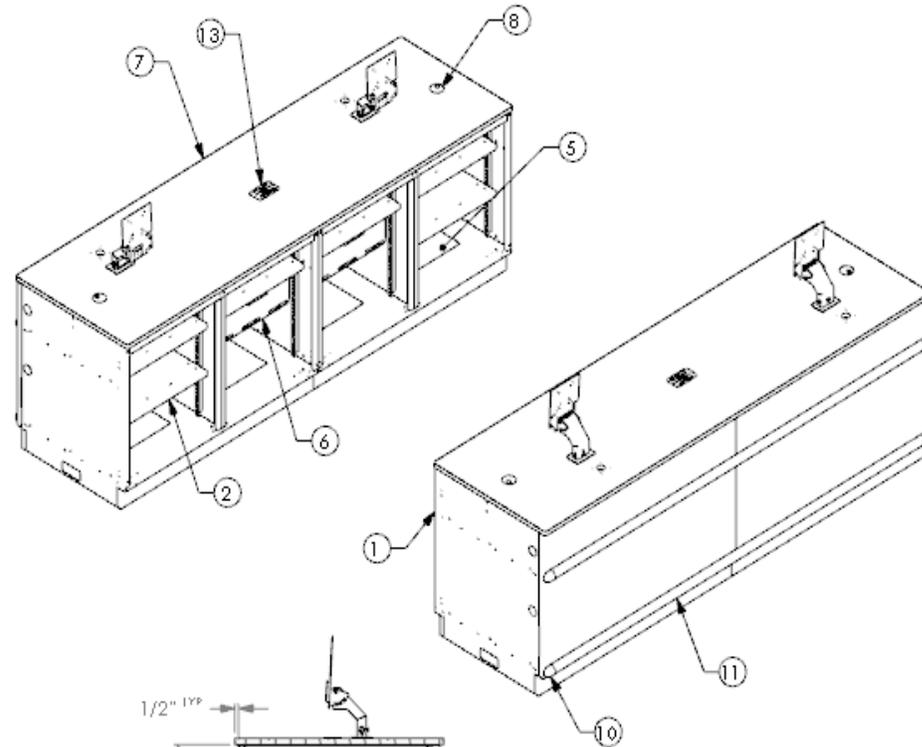

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION	FINISH
1	2	35351048	BASE CABINET ASSY - 48	PTC
2	6	53545001	ADJUSTABLE SHELF - 24	PTC
3	12	R344	RMET .125RD .125 GRIP POP	N006
4	12	53423901	SNAP BUTTON 3/8"	N006
5	4	53408712	A ACCESS PANEL 12"	PTC
6	2	53627501	TRAY, SHELF LOWER	PTC
7	1	82922901	COUNTERTOP, 8 FT POS CABI	L099
8	2	GRM0026	2 BLACK ROUND GROMMET WIRE MGMT	N017
9	1	53627901	CHECK WRITING STAND	PTC
10	4	52274901	END CAP 2" BLACK MCCUE	N017
11	2	52275092	BUMPER 2" BLACK MCCUE 92"	N017
12	2	522657931516	BASE 2" BLACK MCCUE 93 15/16"	N017
13	1	53628901	PLA CARD, DO NOT OBSTRUCT	N000
14	12	53602501	INSERT, 1/4-20 UNC X .512" LG, FOR WOOD	N006
15	12	O121	MACH SCR 1/4-20 X 1/2" RDHD	N006
16	8	52091001	10-32 WING NUT	N006
17	8	O112	MACH SCR #10-32 X 1/2" RDHD	N006
18	1	35373401BH	MC CABINET 96X28 HD WR PK	N000
19	1	53627901	CHECK WRITING STAND	PTC

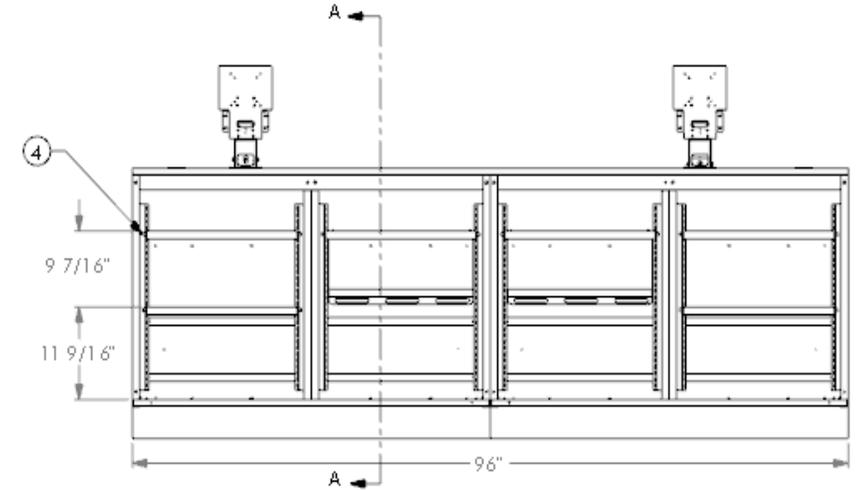

ALL INSIDE RADIUS BE 1/32" UNLESS OTHERWISE SPECIFIED

REVISION				DATE	BY	CHK	ENC	REV
1	036	12	036	11/13/18				1
2	C21		C21	01/11/19				2
00/00/00	3	CH	CH	01/31/19				3


UNLESS OTHERWISE SPECIFIED	9139 C
DATE: 01/13/18	BY: [Signature]
DATE: 01/11/19	BY: [Signature]
DATE: 01/31/19	BY: [Signature]

<b>L.A. DARLING COMPANY</b>	
MC CABINET BLK/MYS DAWN 96X28	
REV. NO. 3	35373401
REV. DATE 01/31/19	REV. BY [Signature]

## Cabinet Installation Instructions:

- Step #1 From floor plan, place 1<sup>st</sup> cabinet in location as specified from construction floor plans.
- Step #2 Using a level, level the cabinets side to side and total length using shims placed between floor and base of cabinet.
- Step #3 From the floor plan, place the second cabinet in the location specified and repeat Step #2 for this cabinet.
- Step #4 From inside end of 1 of these 2 cabinets, use a cordless drill & a #2 Phillips bit to secure the 2 cabinets together using self tapping screws provided in hardware package. See detail at right.
- Step #5 Secure adjacent cabinets as required per floor plans repeating above steps.
- Step #6 Secure cabinets to floor using a ¼" bead of clear silicone where base of cabinets meets the floor. Allow 24 hour period for silicone to fully cure securing cabinet to floor.

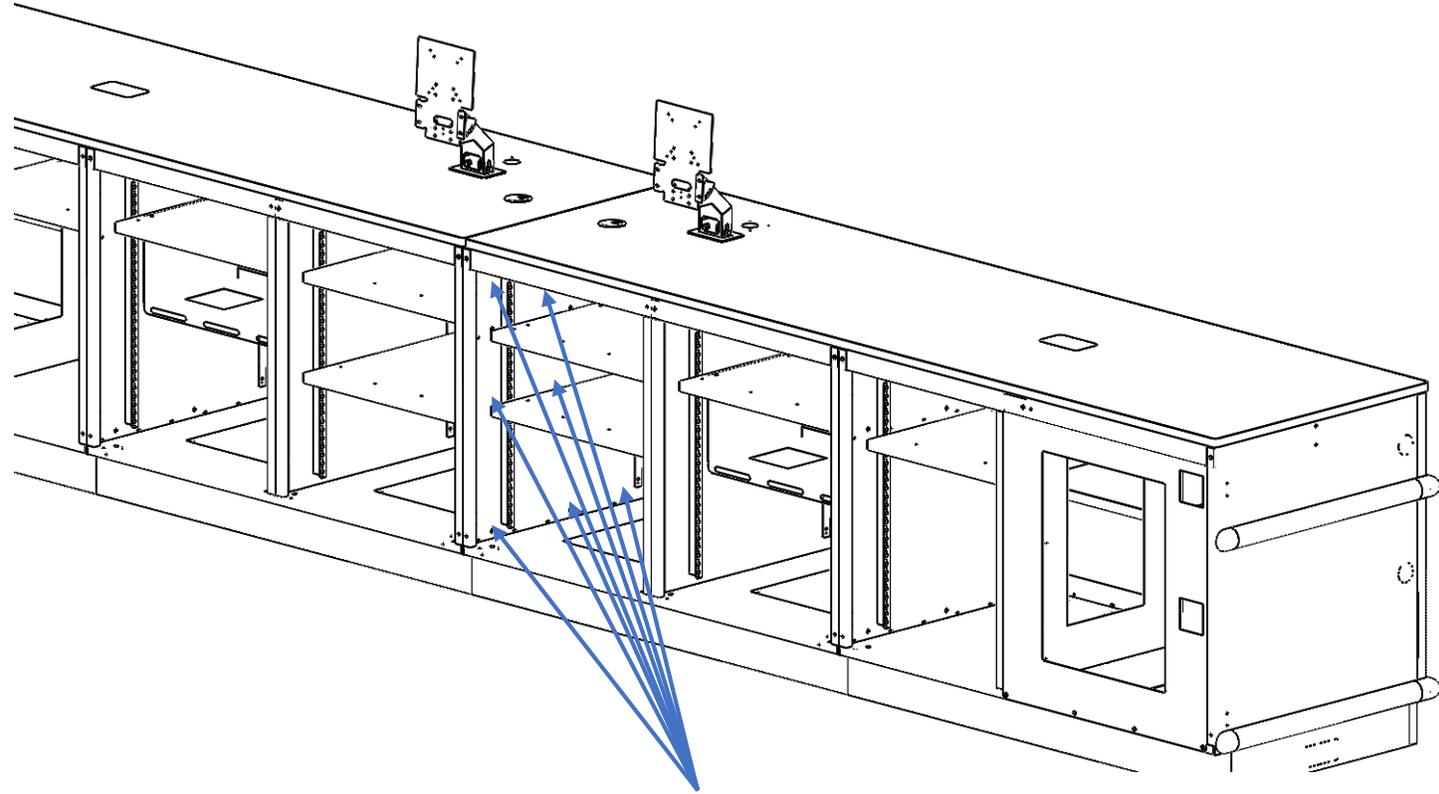


#8 X ½" SELF  
DRILLING SCREWS

SECURE CABINETS AT JOINTS  
USING 10 - SELF DRILLING SCREWS  
PROVIDED

LAD Part #  
35373601L099

MC CKO MOD CAB  
FIN SERVICE

WMT SAP#  
100581448

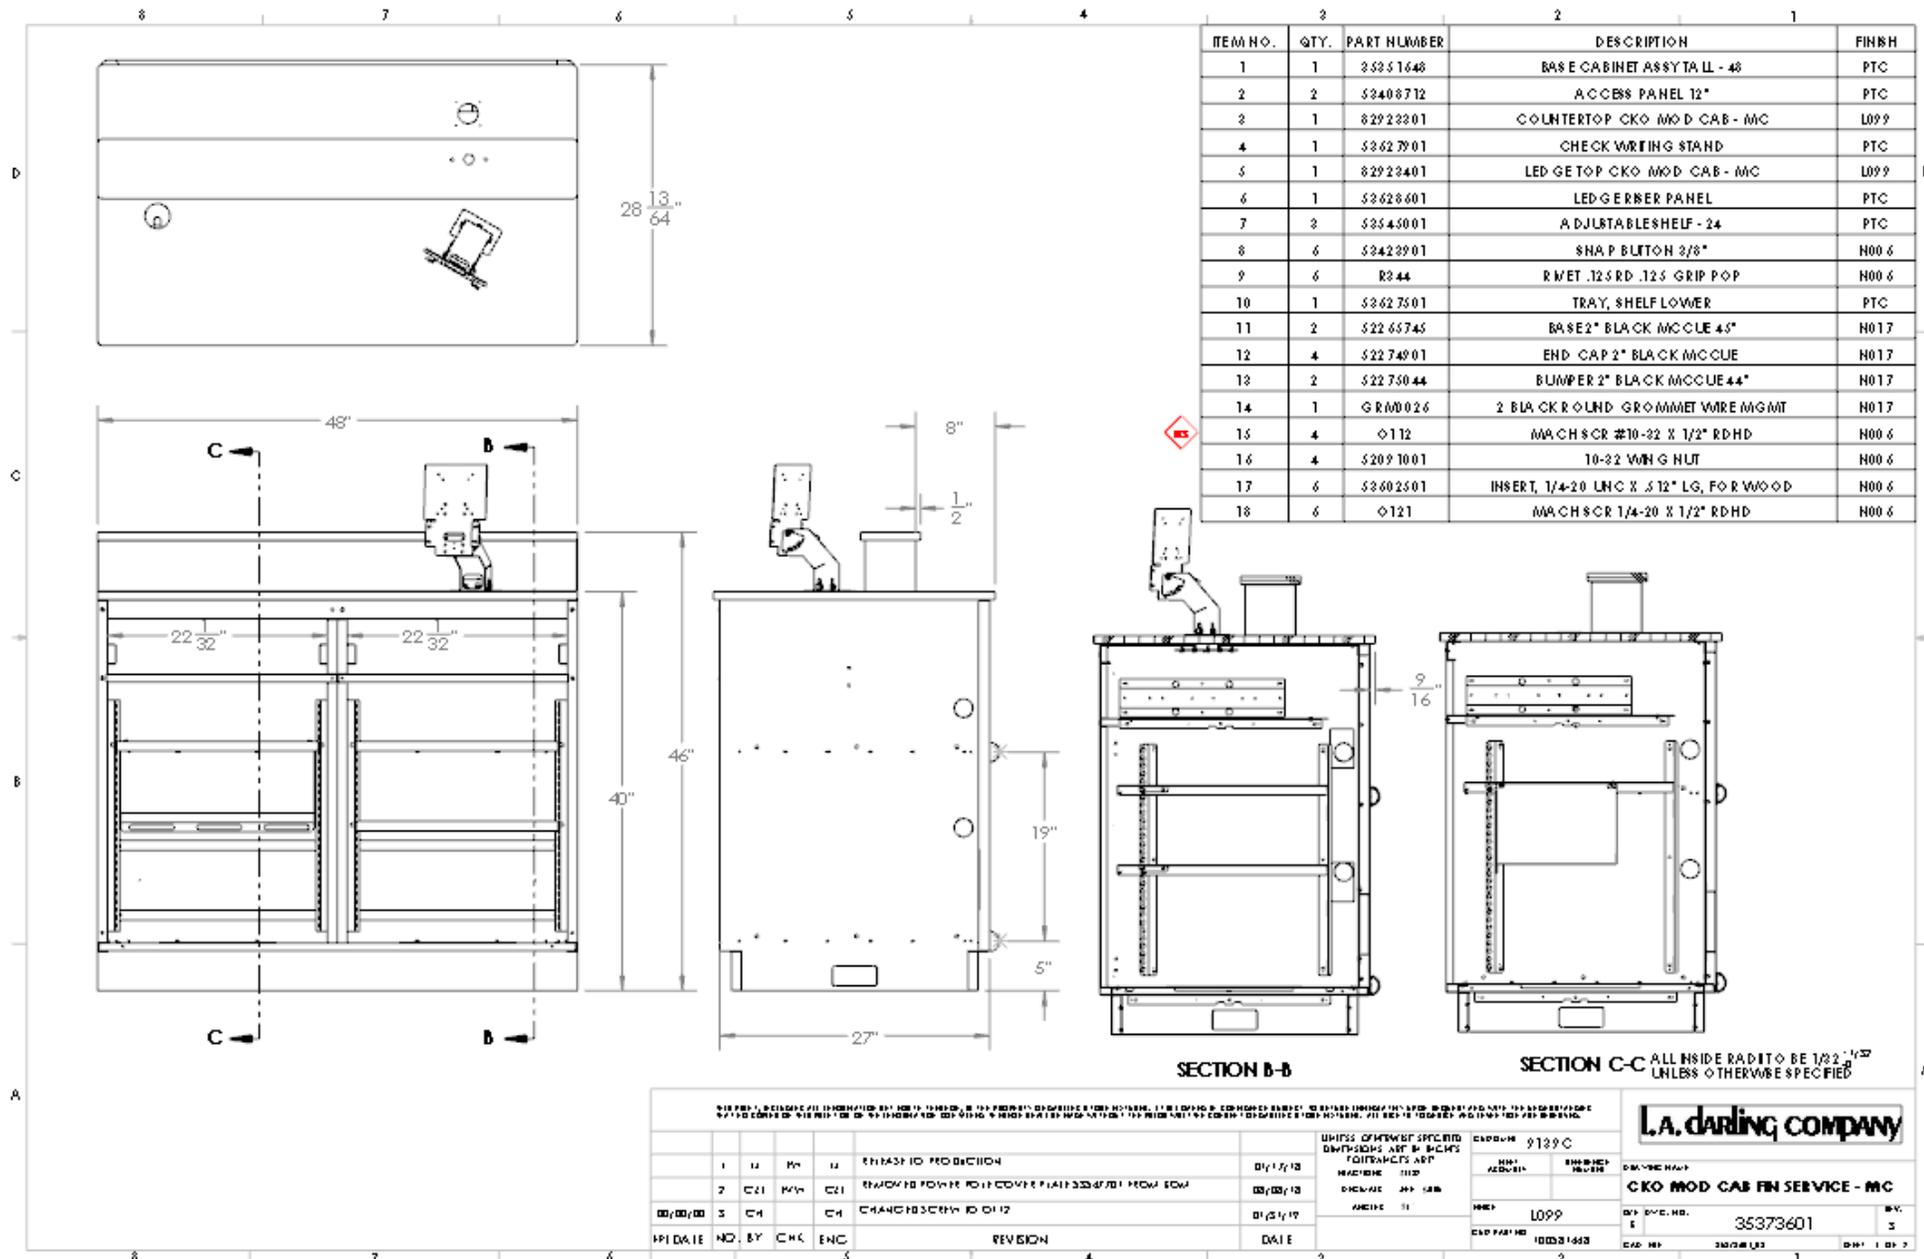


**LAD Part #  
53587001C072**

**KIT END  
DIVIDER PANEL**

**WMT SAP#  
100586326**

**MIDDLE PANEL DIVIDER INSTALLATION:  
LOCATE END PANEL BETWEEN  
FINANCIAL SERVICES CABINETS AND  
SECURE WITH 5ea WOOD SCREWS  
PROVIDED INTO WOOD TOP.**

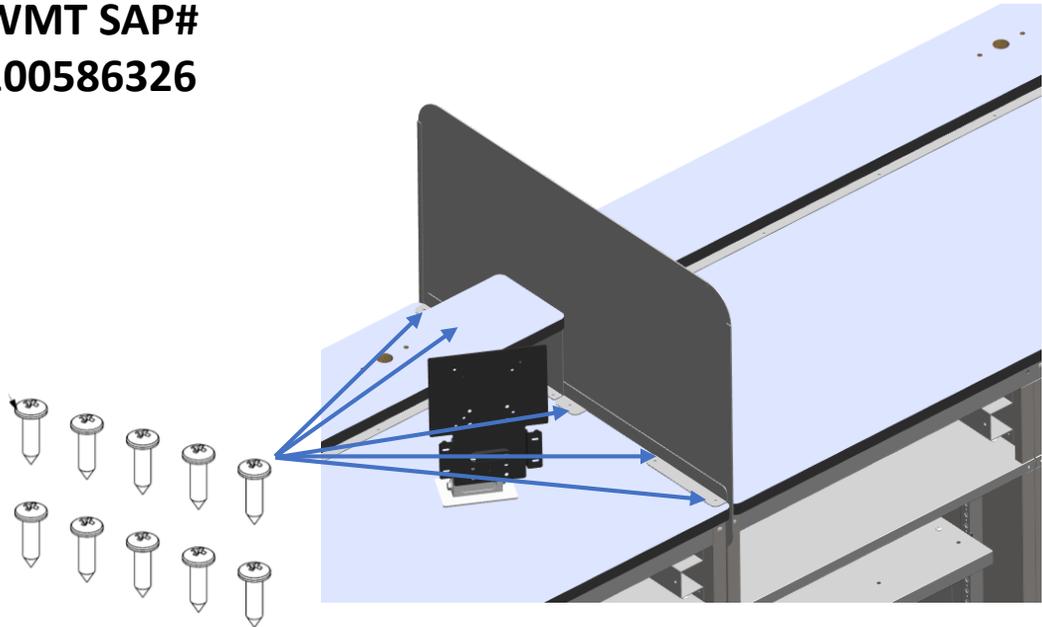


**53519402--- Hardware Kit Consist of: (5ea) #8-10 Course Thread Pan Head Particleboard screws  
(8ea) TEK #8-18 x 1/2" Round Washer Head #2 Phillips**

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION	FINISH
1	1	53519401	DIVIDER F/ CASHWRAP END	PTC
2	1	53519402	HW KIT F/ END DIVIDER PANEL	N006/ N019

NOTE:  
HARDWARE KIT 53519402 WITH ZINC SCREWS IS USED WITH 53587001C215.

HARDWARE KIT 53519402N019 WITH BLACK SCREWS IS USED WITH 53587001C072.

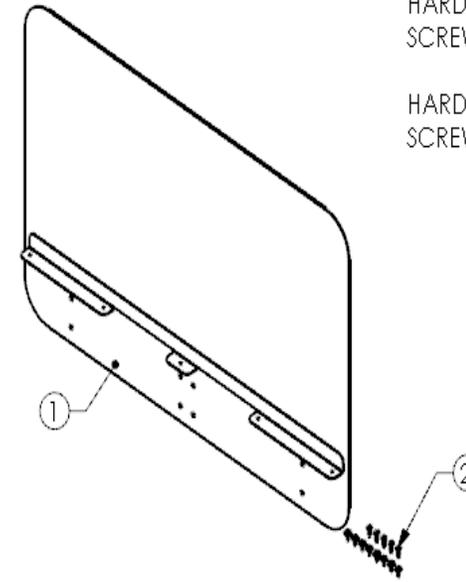

ALL INSIDE RADII TO BE 1/32  
UNLESS OTHERWISE SPECIFIED

THIS PRINT, INCLUDING ALL INFORMATION SET FORTH THEREON, IS THE PROPERTY OF DARLING STORE FIXTURES. IT IS LOANED IN CONFIDENCE SUBJECT TO RETURN IMMEDIATELY UPON REQUEST AND WITH THE UNDERSTANDING THAT NO COPIES OF THIS PRINT OR OF THE INFORMATION CONTAINED THEREON SHALL BE MADE WITHOUT THE PRIOR WRITTEN CONSENT OF DARLING STORE FIXTURES. ALL RIGHTS TO DESIGN AND INVENTION ARE RESERVED.											
				UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS .01532 DECIMALS .005 FORD ANGLES .5		CUSTOMER 9130		NEXT ASSEMBLY REFERENCE NUMBER		DRAWING NAME <b>KIT END DIVIDER PANEL</b>	
00/00/00 01 RFC RFC RELEASE FOR PRODUCTION				01/18/17		FINISH PTC		SHEET NO. 53587001		REV. 01	
FP1 DATE NO. BY CHK ENG				REVISION		DATE		CUSTOMER PART NO. 100586326		CAB. KIT. 53587001_01	


**LAD Part #  
53587001C072**

**KIT END  
DIVIDER PANEL**

**WMT SAP#  
100586326**

**END DIVIDER PANEL INSTALLATION:  
LOCATE PANEL AT END OF CABINET  
AND SECURE ANGLE ONTO WOOD  
COUNTERTOP USING (5) WOOD  
SCREWS PROVIDED.  
SECURE PANEL ON OUTSIDE INTO  
METAL END OF CABINET USING (8)  
SMS TEK SCREWS PROVIDED.**


**53519402--- Hardware Kit Consist of:** (5ea) #8-10 Course Thread Pan Head Particleboard screws  
(8ea) TEK #8-18 x 1/2" Round Washer Head #2 Phillips

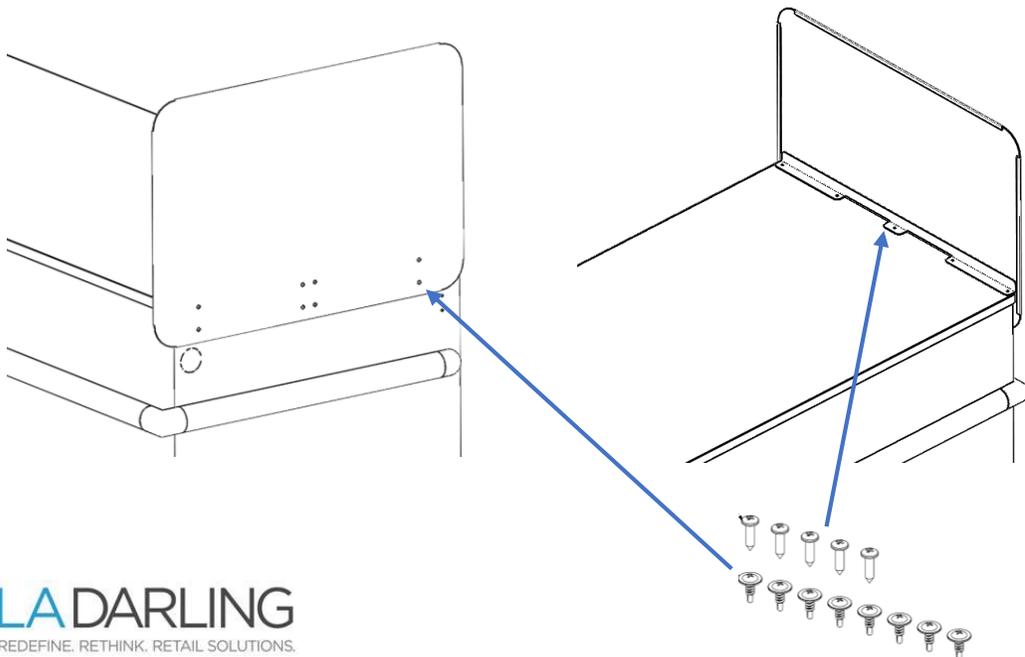

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION	FINISH
1	1	53519401	DIVIDER F/ CASHWRAP END	PTC
2	1	53519402	HW KIT F/ END DIVIDER PANEL	N006/ N019

NOTE:  
HARDWARE KIT 53519402N006 WITH ZINC SCREWS IS USED WITH 53587001C215.

HARDWARE KIT 53519402N019 WITH BLACK SCREWS IS USED WITH 53587001C072.

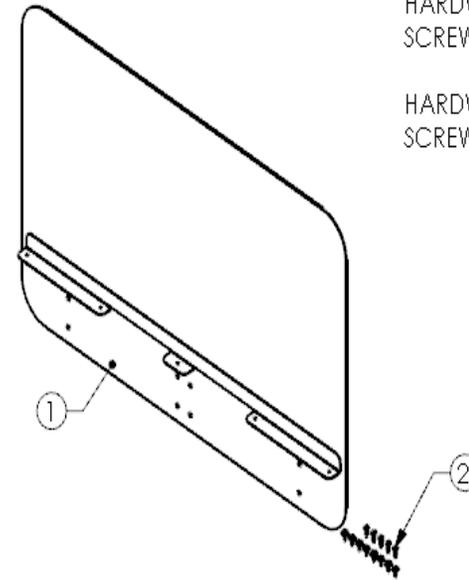

ALL INSIDE RADII TO BE 1/32" UNLESS OTHERWISE SPECIFIED

THIS PRINT, INCLUDING ALL INFORMATION SET FORTH THEREON, IS THE PROPERTY OF DARLING STORE FIXTURES. IT IS LOANED IN CONFIDENCE SUBJECT TO RETURN IMMEDIATELY UPON REQUEST AND WITH THE UNDERSTANDING THAT NO COPIES OF THIS PRINT OR OF THE INFORMATION CONTAINED THEREON SHALL BE MADE WITHOUT THE PRIOR WRITTEN CONSENT OF DARLING STORE FIXTURES. ALL RIGHTS TO DESIGN AND INVENTION ARE RESERVED.

00/00/00 01 RFC RFC RELEASE FOR PRODUCTION 01/18/17				UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: HACH 4S. 01/32 BICHA 4S. XXX 0.00 ANG 4S. 01		C 4300411 9139			
FP I DATE NO. BY CHK ENG REVISION DATE				NEXT ASSEMBLY REFERENCE NUMBER		HARD PTC		DRAWING NAME <b>KIT END DIVIDER PANEL</b>	
				C 4301 PAR NO 100586326		SET BWC. NO. 53587001		REV. 01	
				C 4301 PAR NO 100586326		CAD FILE 33337001_01		34991 1 01 1	






LAD Part #  
53686400N099

BUMPER KIT BLACK –  
(2EA) 2" X 24"

WMT SAP#  
100578271

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION	FINISH
1	2	5226572518	BASE 2" BLACK MCCUE 25 1/8"	N017
2	2	5227502318	BUMPER 2" BLACK MCCUE 23 1/8"	N017
3	4	52274901	END CAP 2" BLACK MCCUE	N017
4	1	53595801	HW KIT F/ BUMPERS	N006

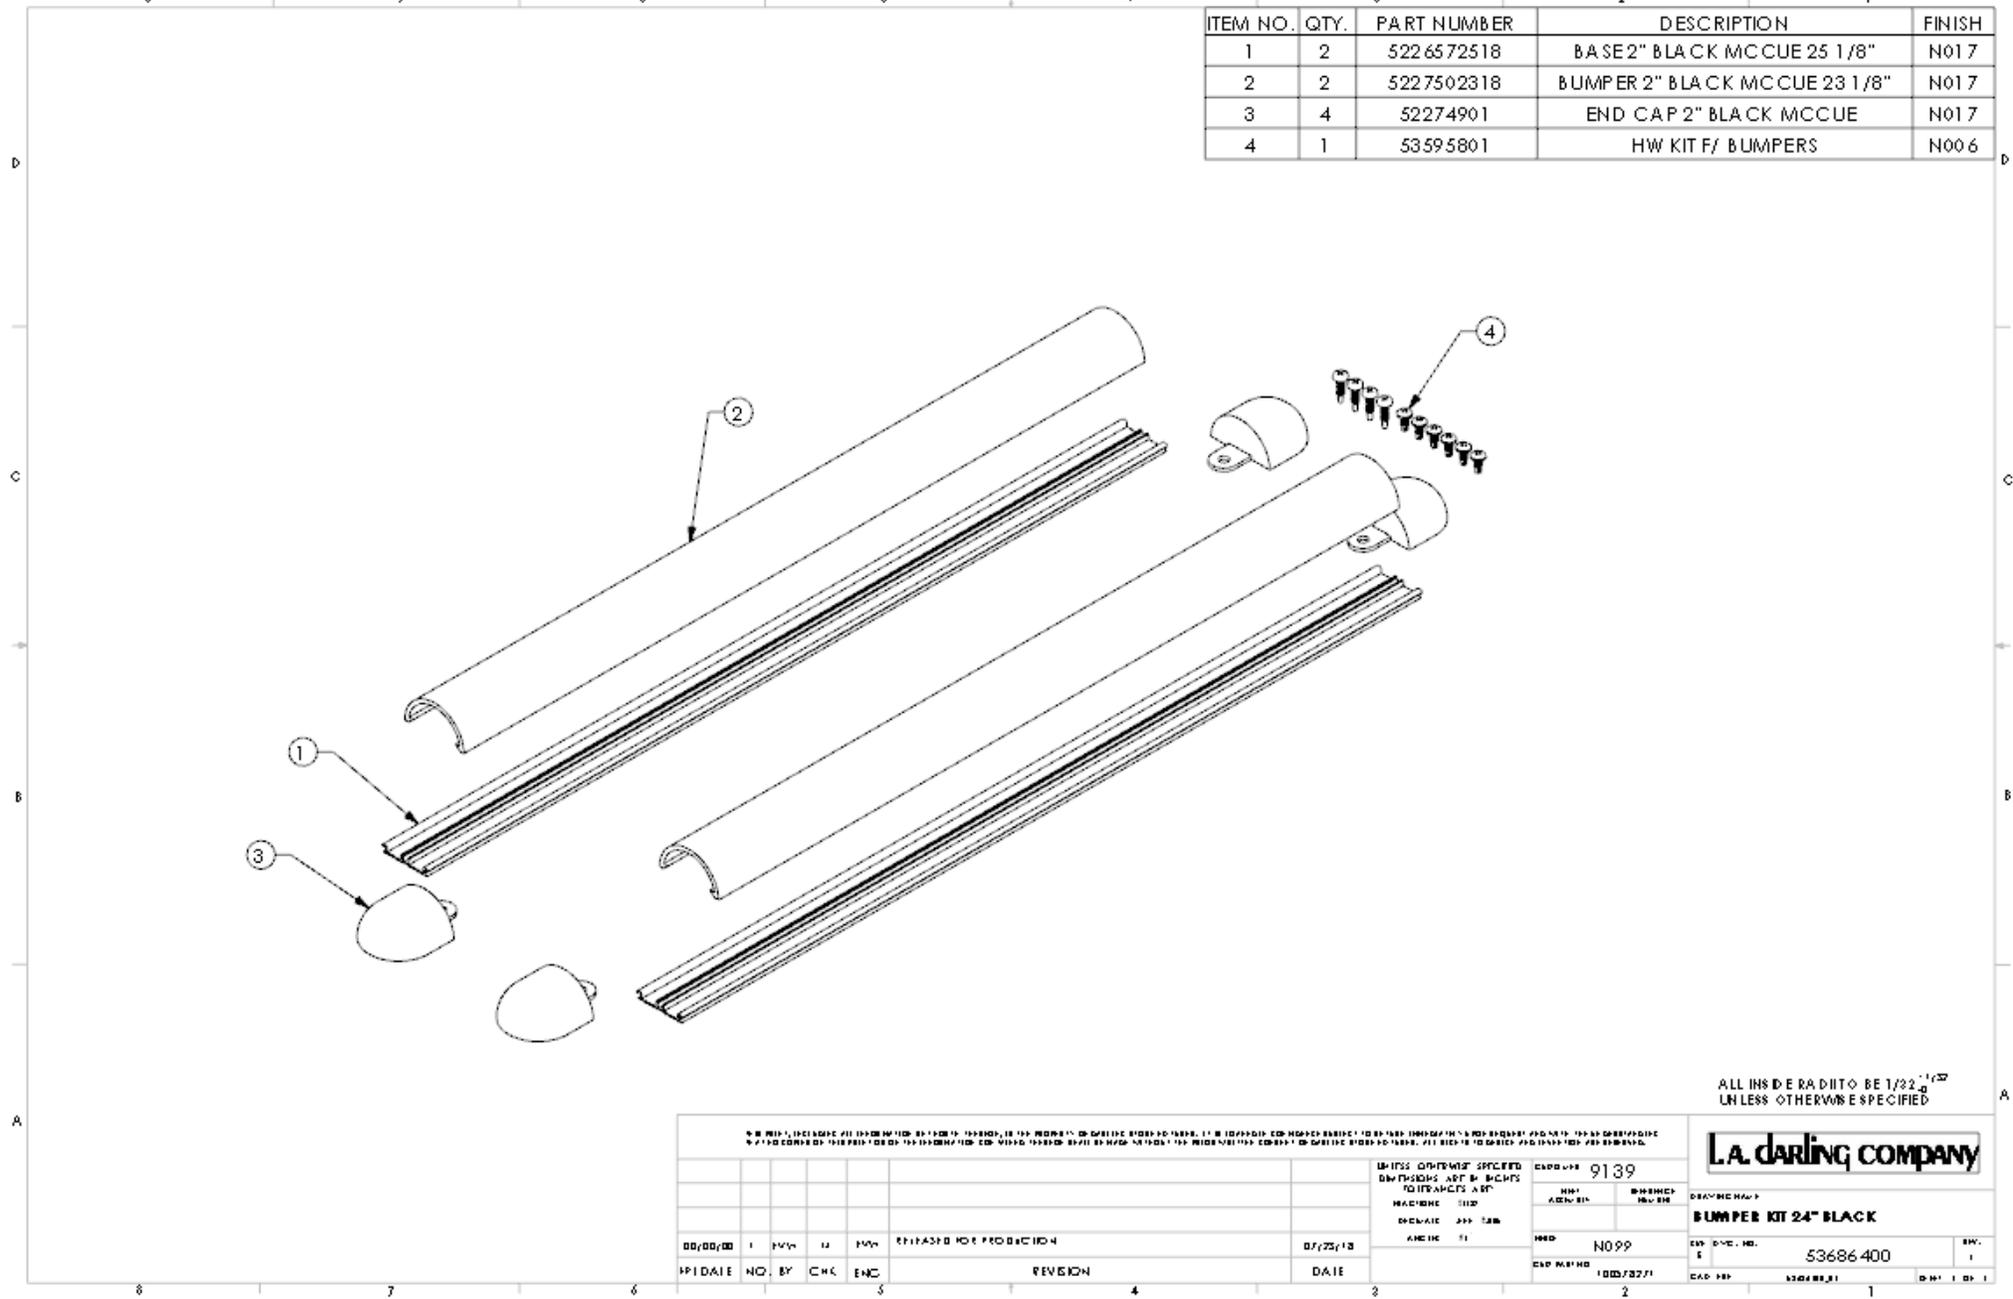

ALL INSIDE RADIUS BE 1/32" UNLESS OTHERWISE SPECIFIED

<p>UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TO THREE DECIMALS</p>				<p>9139</p>		<p><b>L.A. darling company</b></p>	
<p>DATE: 07/25/13</p>				<p>N099</p>		<p><b>BUMPER KIT 24" BLACK</b></p>	
<p>REV: 5</p>				<p>53686400</p>		<p>53686400</p>	
<p>DATE: 07/25/13</p>				<p>100578271</p>		<p>1</p>	


## ATTACHMENT OF BUMPER KITS TO END OF CABINETS.

(6EA) SMS TEK #10 X 1/2" PAN HEAD  
(USED FOR ATTACHING TRACK)




(4) SMS TEK #10 X 3/4" PAN HEAD (USED  
FOR ATTACHING END CAPS)


**Step 1: Attach the Bumper Track to the cabinet using the pre-punched holes in the cabinet with the screws provided.**


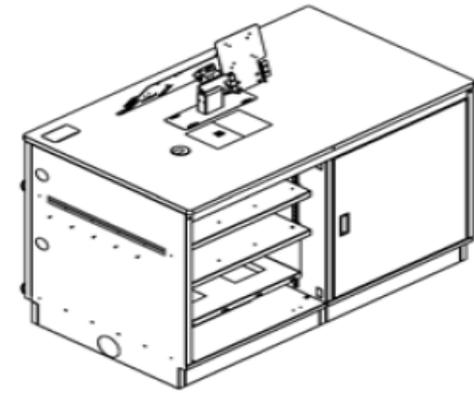


**Step 2: Attach the Bumper End Caps to the cabinet using the pre-punched holes in the cabinet with the Two screws provided.**

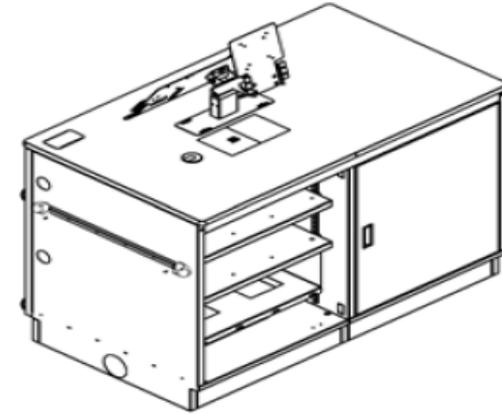

**Step 3: Snap the bumper rail onto the track and continue to the second row of bumper on the cabinet.**

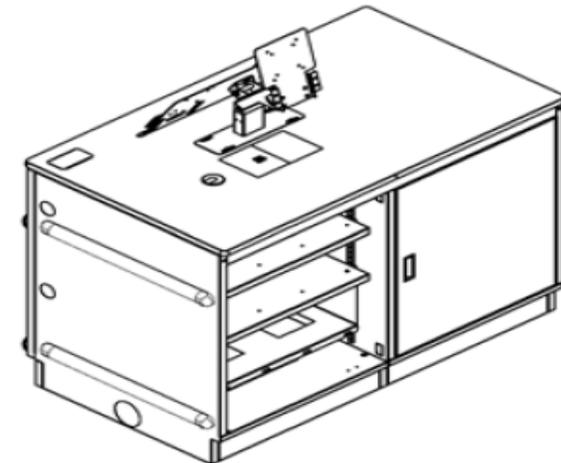

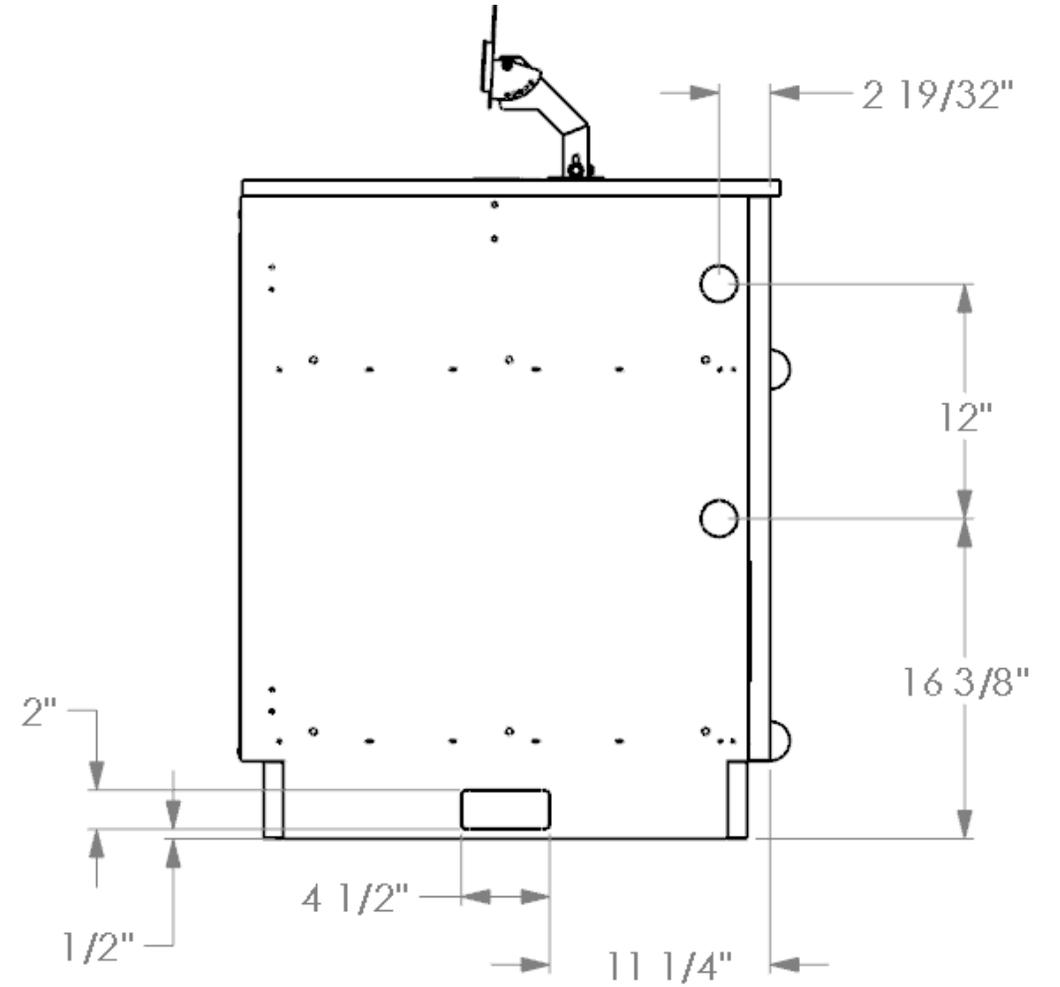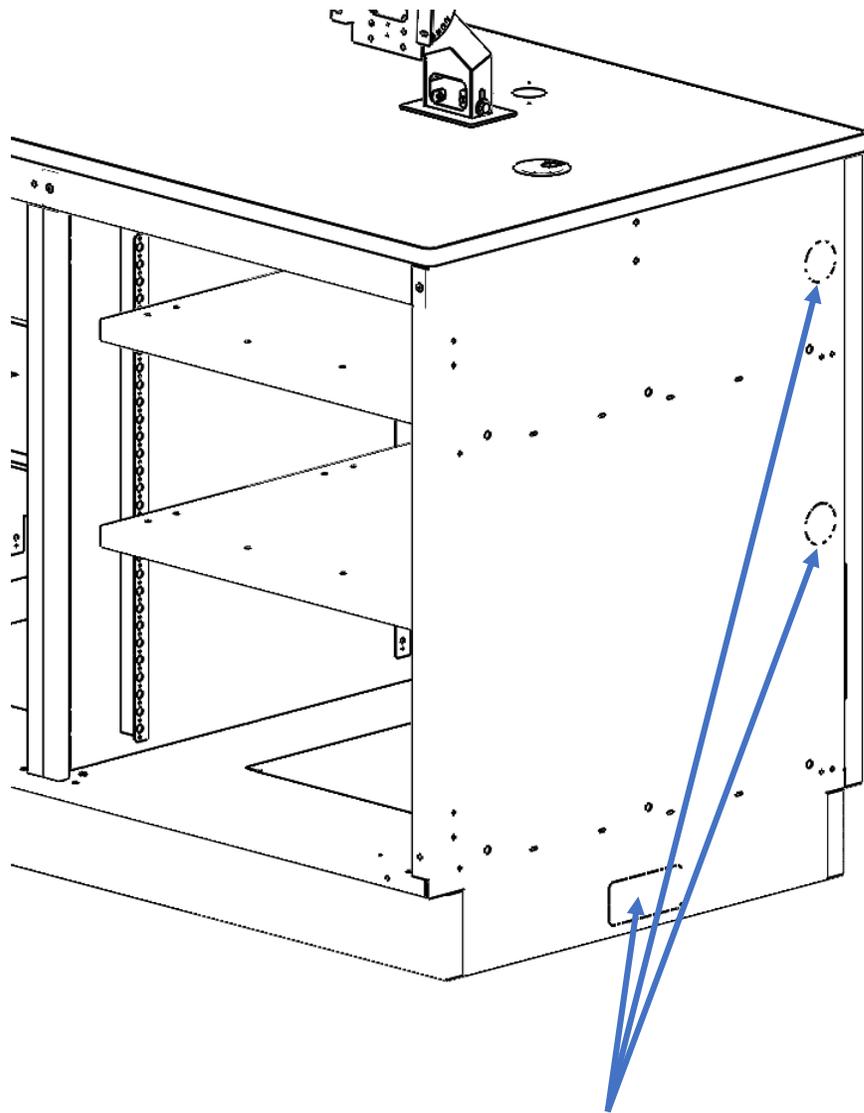

## KNOCKOUT HOLE LOCATIONS