


Step 1: Install bottom cross bar where desired by hooking brackets into teardrop slots on warehouse uprights. Ensure that hooks are seated in slots.


Step 2: Install top cross bar brackets 60" above bottom cross bar brackets. Note: top cross bars match bottom cross bars, but installed with front channel facing down.

Step 3: Install mid cross bar in available slots approx. mid-way between top and bottom cross bars.

Step 4: Attach snap buttons on the bottom side of all cross bar brackets. Ensure that snap button head is fully seated and locks cross bar to warehouse upright.

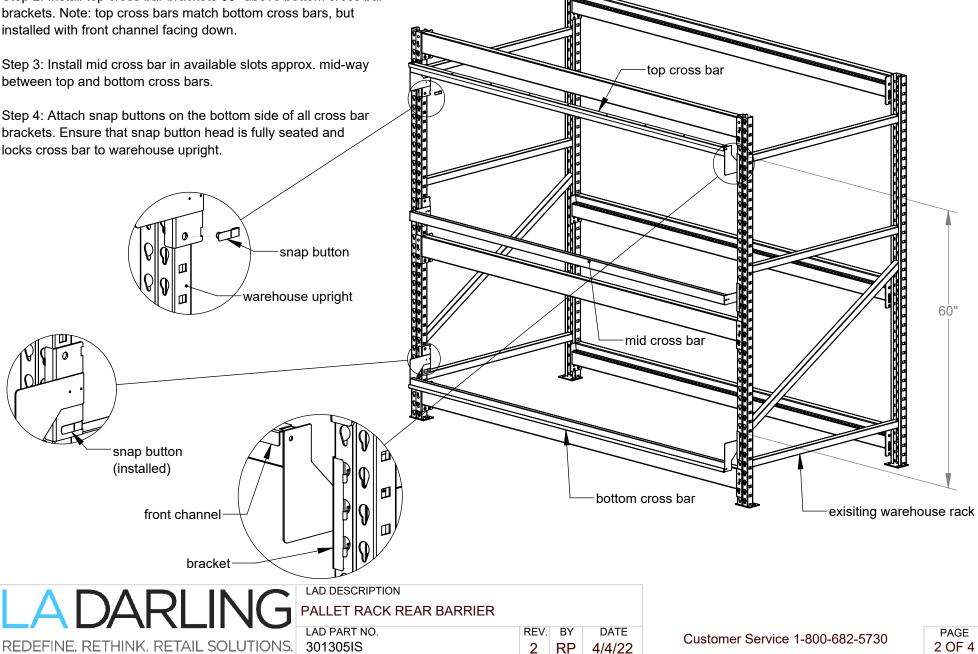


Step 5: Slide hardboard panels into channel on top and bottom cross bars. Note: 4' wide kits will only use one panel.

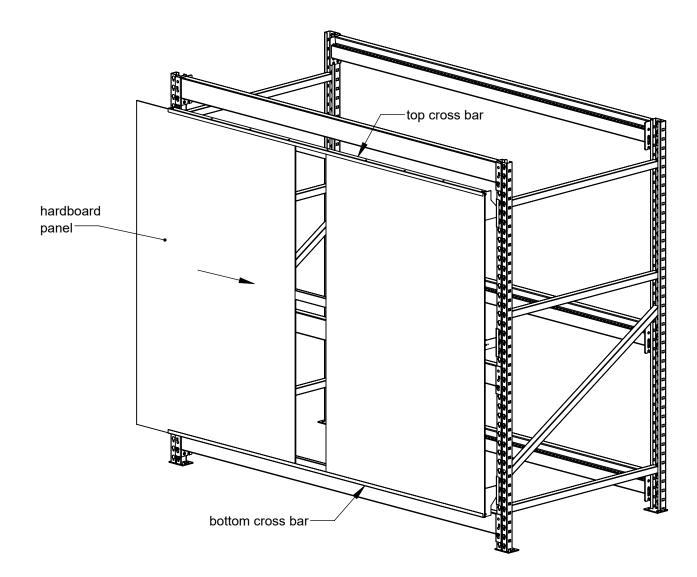



Step 6: Secure hardboard panels to each cross bar tube with five TEKS screws.

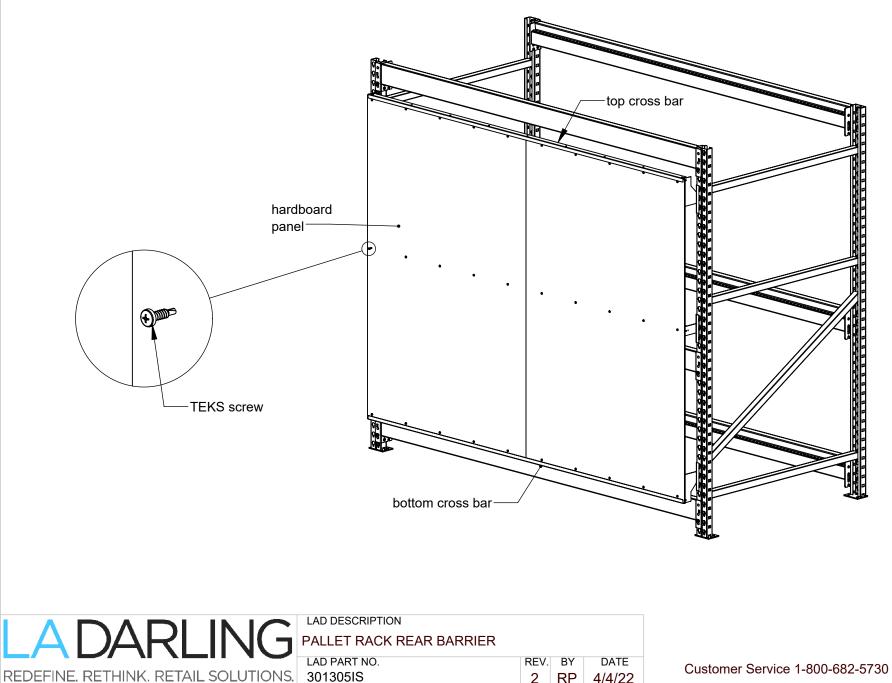

2

RP

4/4/22

