



SAP#100674770  
 END PANEL 3184

NOTE! Frame hangs on assembled T-System. Only end upright shown for clarity.

- Step 1: Ensure top clip is mounted for 84" or 78" Upright
- Step 2: Hook top clip into top of upright and lower clips over base leg.

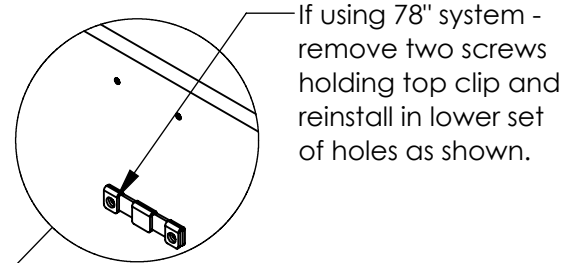

If using 78" system -  
 remove two screws  
 holding top clip and  
 reinstall in lower set  
 of holes as shown.

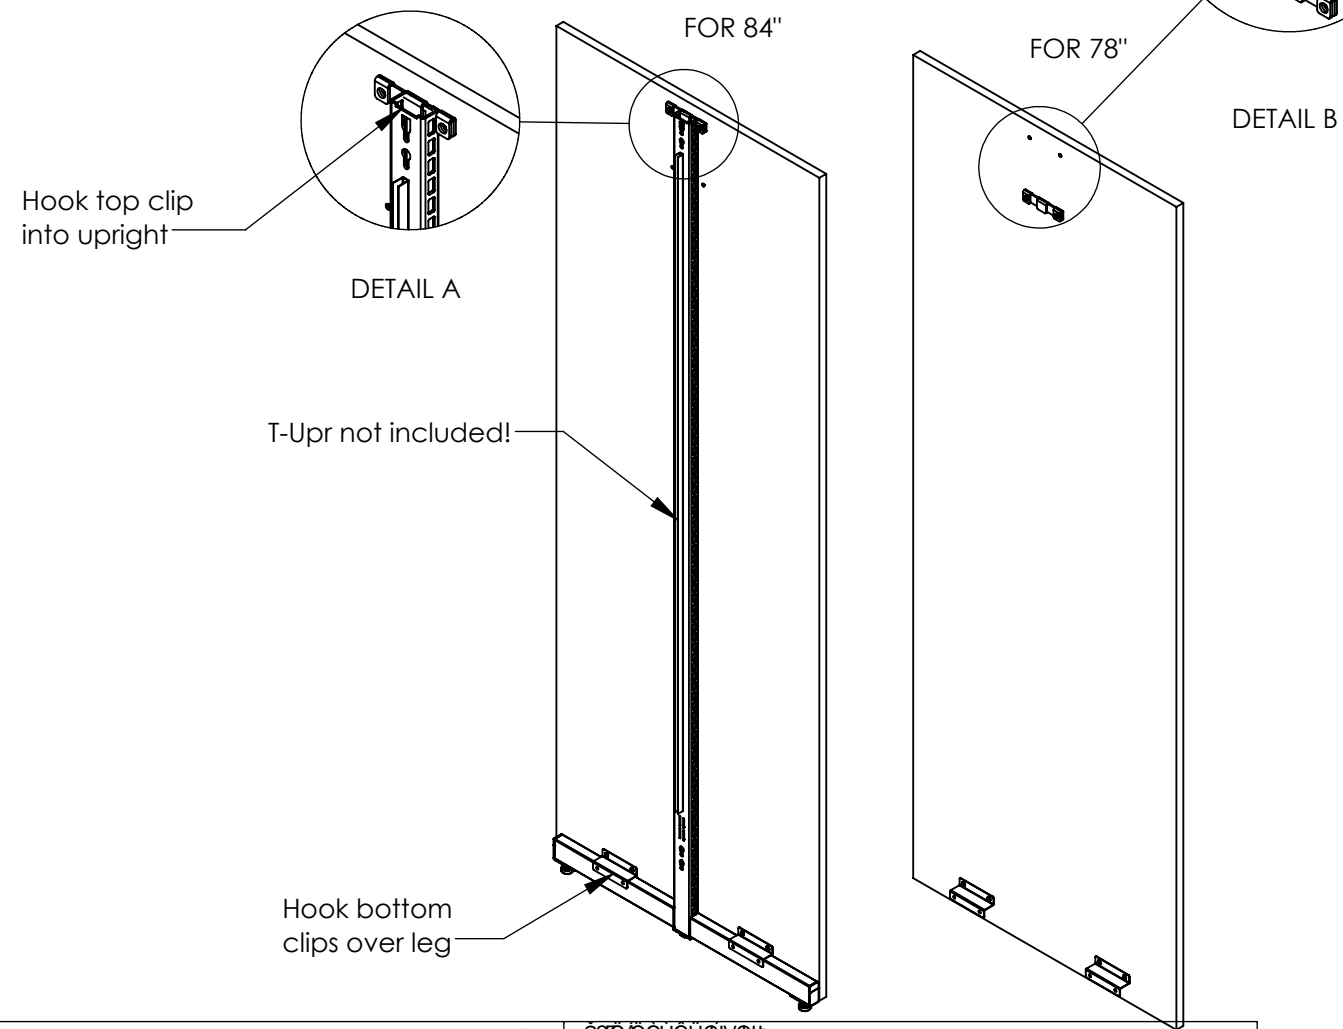

Hook top clip  
 into upright

DETAIL A

FOR 84"

FOR 78"

DETAIL B

T-Upr not included!

Hook bottom  
 clips over leg