



- Step 1: Insert (2) 18" End Open Toe Kickplates into base leg tube on existing gondola.
- Step 2: Insert 30" Open Toe Kickplate into slots on End Open Toe Kickplates.
- Step 3: Lay 1836 End Deck on top of kickplates. Ensure rear of deck is resting on base leg of upright and that the tabs on the front of the deck are sitting inside the tubes on the End Open Toe Kickplates.
- Step 4: Install End Frame by lowering frame so that clip on end frame drops into the top of the end upright tube and the bottom angle on the frame rests behind the end deck.

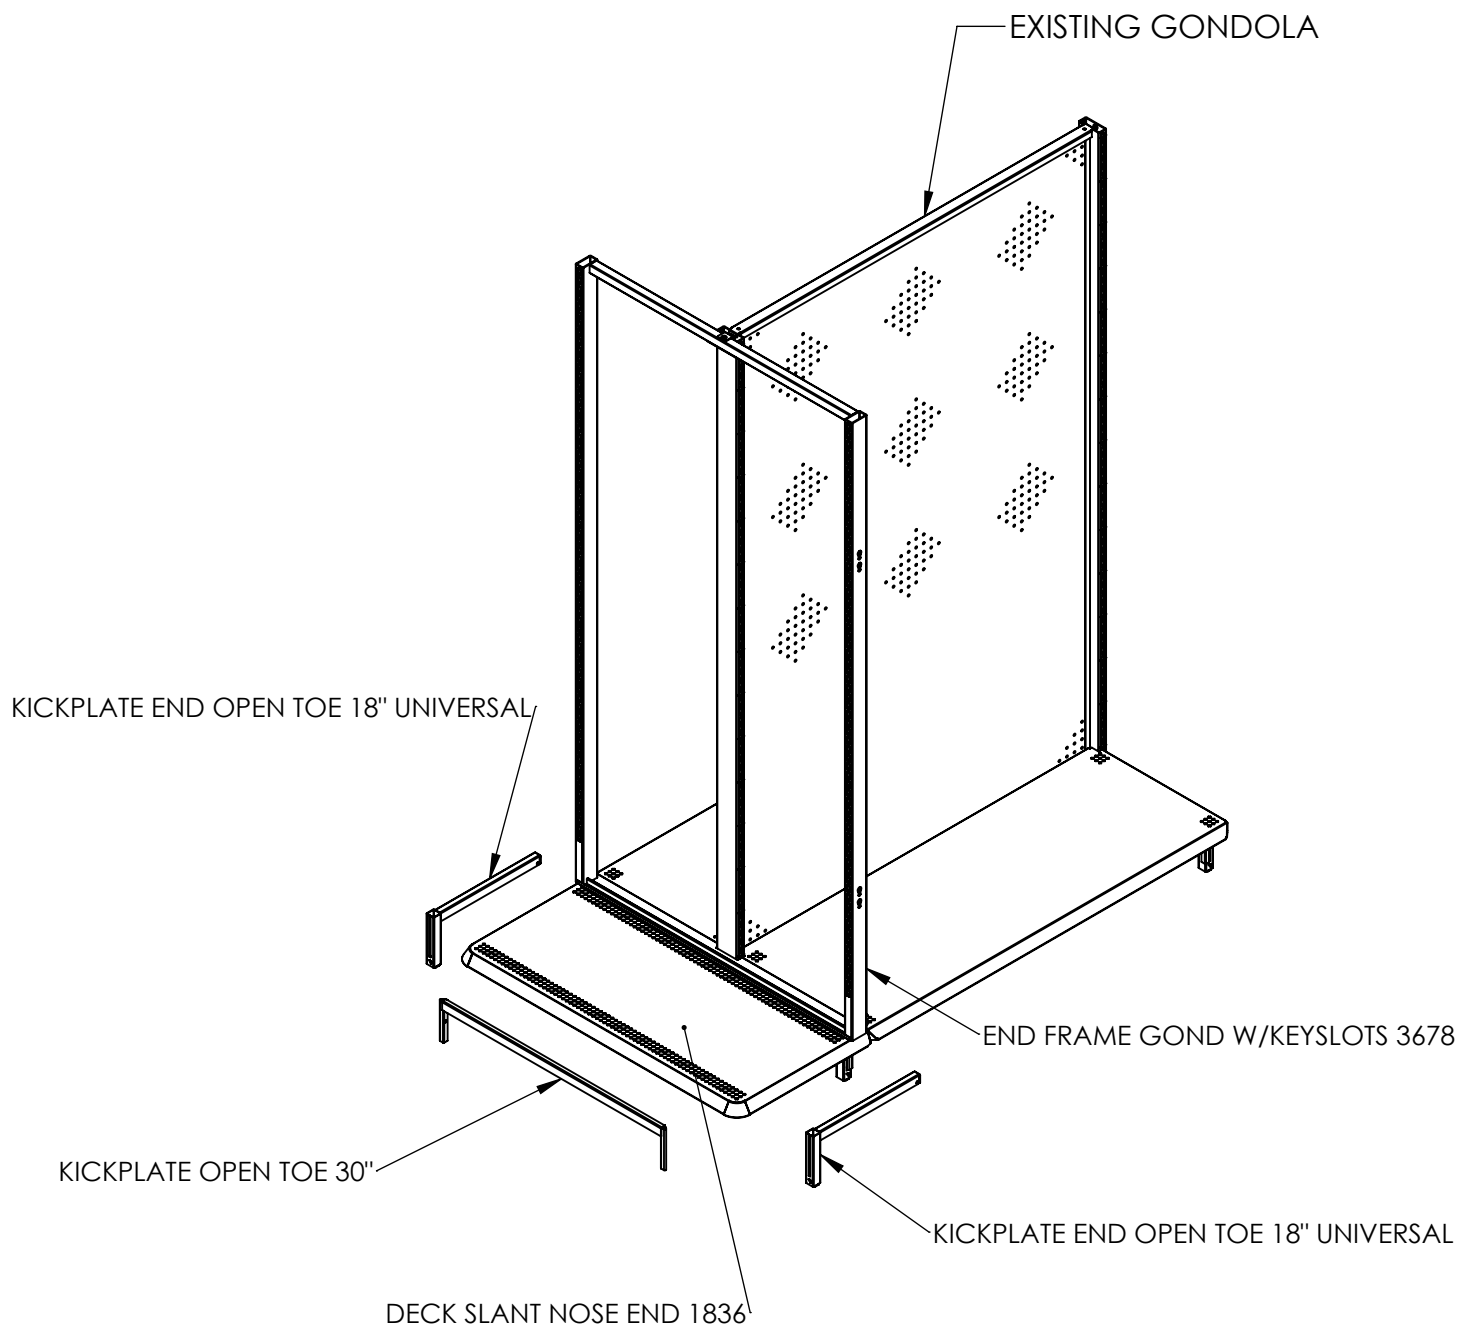

L.A. DARLING COMPANY	DESCRIPTION ENDCAP 367818	52462378IS_05
SAP#100550332	CUSTOMER WAL-MART	PAGE 1 OF 2

LAD P/N: 52462378C215 (SILVER) WALMART P/N: 100550332			
QTY	WALMART PN	LAD PN	DESCRIPTION
1	100554773	15146478C215	END FRAME GOND W/KEYSLOTS 3678
1	100022173	89106836C215	DECK SLANT NOSE END 1836
1	100550497	40019502C215	KICKPLATE OPEN TOE 30"
2	100570138	40061001C215	KICKPLATE END OPEN TOE 18" UNIVERSAL

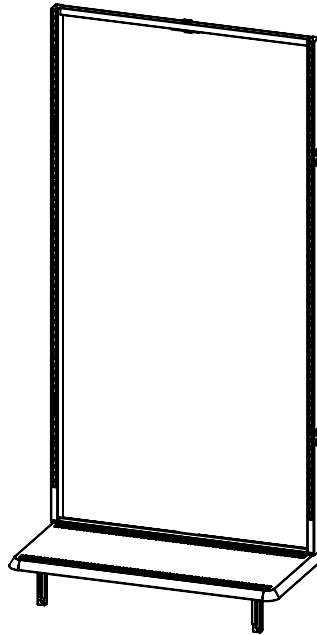

L.A. DARLING COMPANY	DESCRIPTION ENDCAP 367818	52462378IS_05
SAP# 100550332	CUSTOMER WALMART	PAGE 2 OF 2

8

7

6

5

4

3