



- Step 1: Insert Universal End Kickplates into base leg tubes on existing gondola.
- Step 2: Insert 42" Open Toe Kickplate into slots on Universal End Kickplates.
- Step 3: Lay 1848 End Deck on top of kickplates. Ensure rear of deck is resting on base leg of upright and that the tabs on the front of the deck are sitting inside the tubes on the Universal End Kickplates.
- Step 4: Install End Frame by lowering frame so that clip on end frame drops into the top of the end upright tube and the bottom angle on the frame rests behind the end deck.

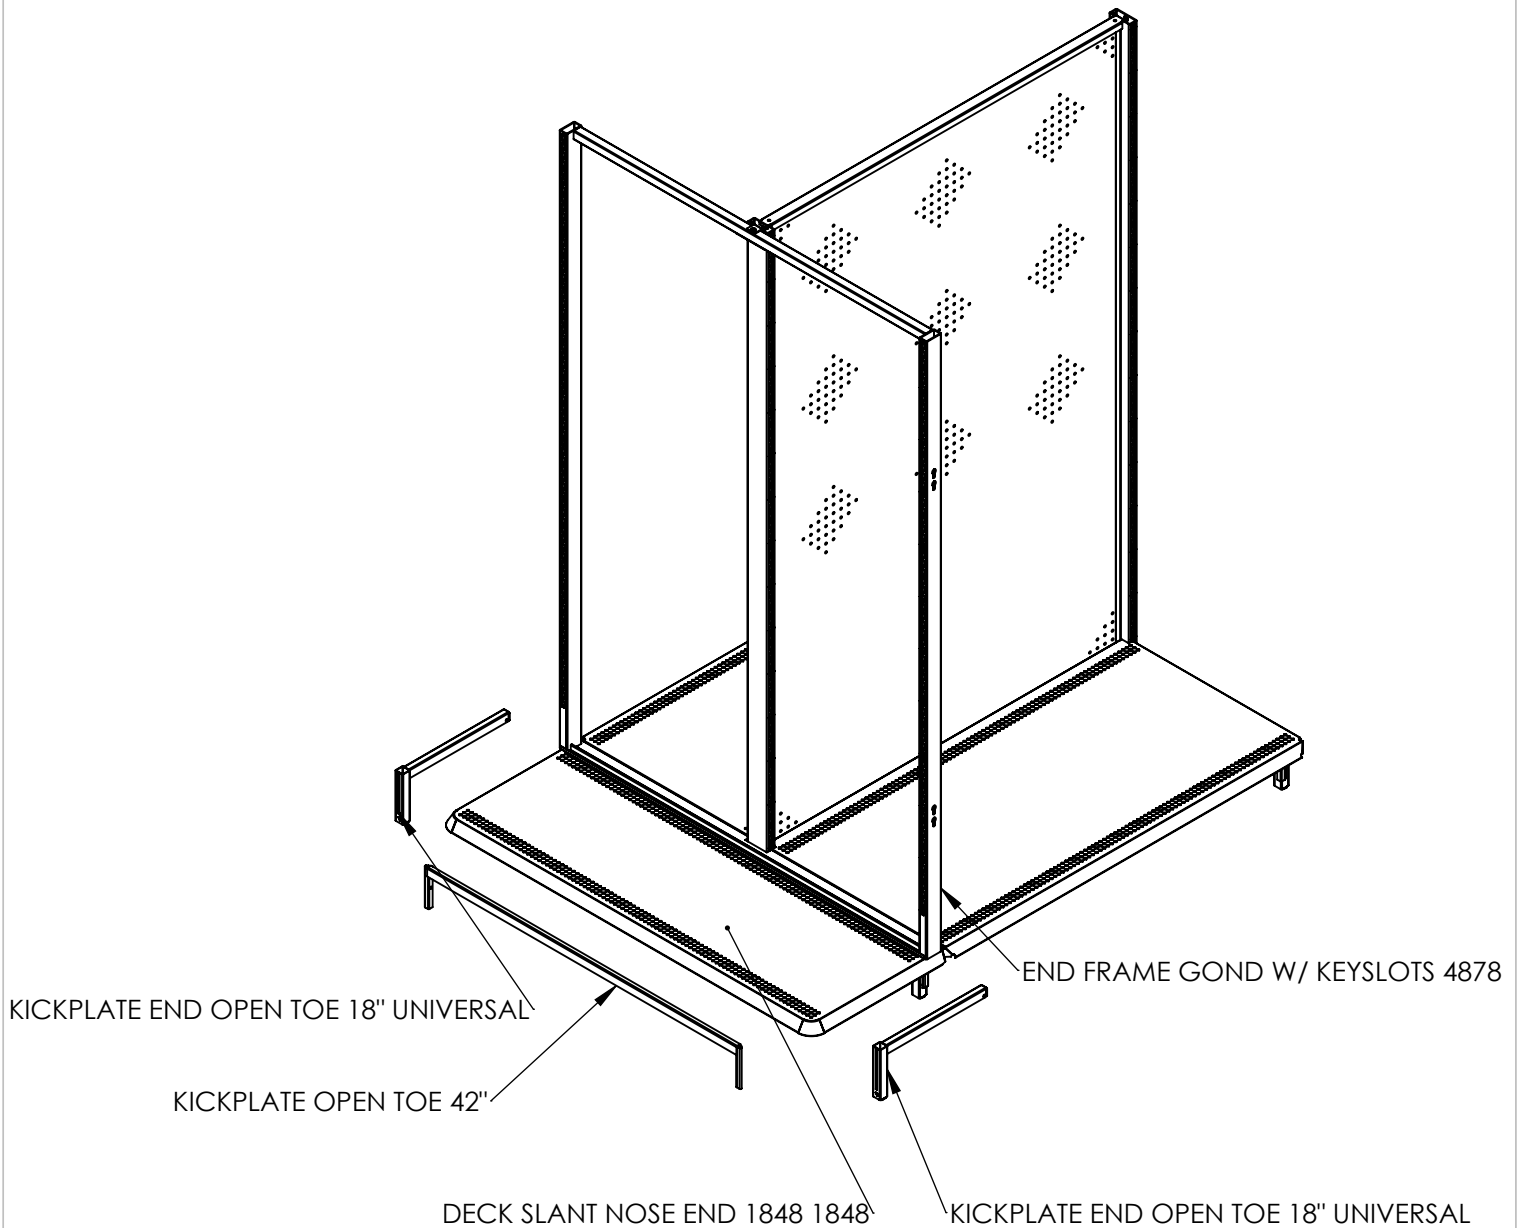

| | | |
|-----------------------------|-------------------------------------|----------------------|
| L.A. DARLING COMPANY | DESCRIPTION ENDCAP 487818 | 52463078IS_04 |
| SAP# 100550351 | CUSTOMER WALMART | PAGE 1 OF 2 |

| LAD P/N: 52463078C215 (SILVER) WALMART P/N: 100550351 | | | |
|---|------------|--------------|--------------------------------------|
| QTY | WALMART PN | LAD PN | DESCRIPTION |
| 1 | 100550504 | 40019503C215 | KICKPLATE OPEN TOE 42" |
| 1 | 100022175 | 89106848C215 | DECK SLANT NOSE END 1848 |
| 2 | 100570138 | 40061001C215 | KICKPLATE END OPEN TOE 18" UNIVERSAL |
| 1 | 100023818 | 15146578C215 | END FRAME GOND W/ KEYSLOTS 4878 |

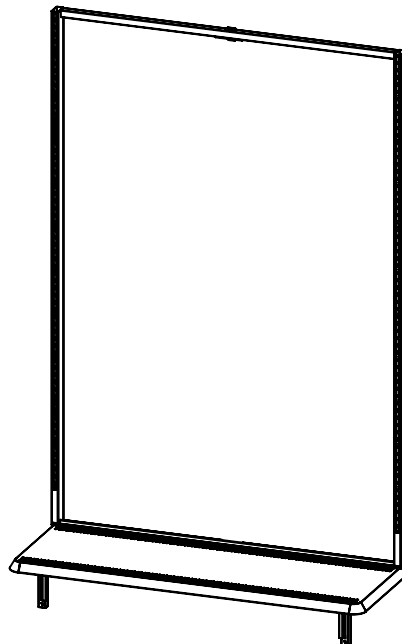

| | | |
|-----------------------------|-------------------------------------|----------------------|
| L.A. darling company | DESCRIPTION ENDCAP 487818 | 52463078IS_04 |
| SAP# 100550351 | CUSTOMER WALMART | PAGE 2 OF 2 |