


Walmart Part No. **100714573**

Walmart Description

VIGNETTE BED DISPLAY

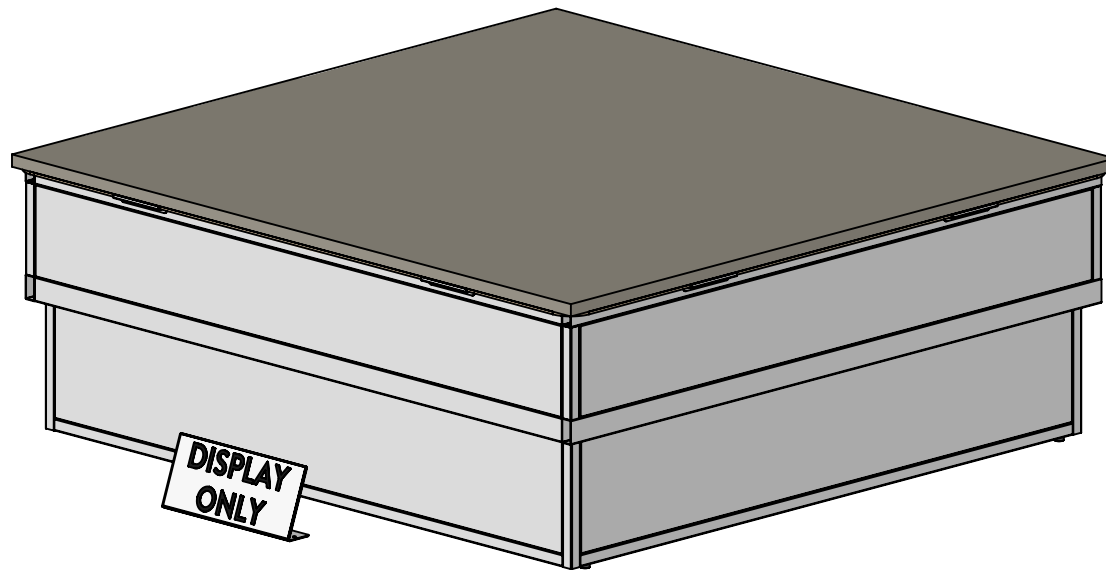


Visit www.ladarling.com/Vignette-Bed-Display/ for a digital copy of the instruction sheets.


STEP 1: LOCATE BOTTOM BED FRAME PARTS
AND ASSEMBLE AS SHOWN, LOCKING THE SNAP
PINS INSIDE THE ACCOMODATING TUBES.

NOTES TO IDENTIFY BOTTOM BED FRAME:


1. THE SIDES HAVE RUBBER FEET (SHOWN IN DETAIL B)
2. THE ENDS AND MIDDLE TUBES ARE SHORTER
THAN THE TOP BED ENDS AND TUBES.

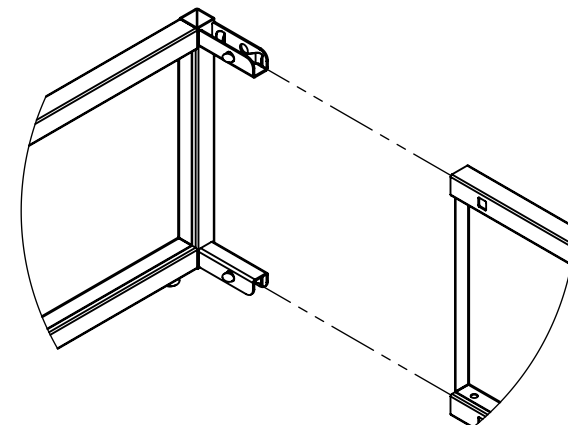

DETAIL A
SCALE 2 : 15

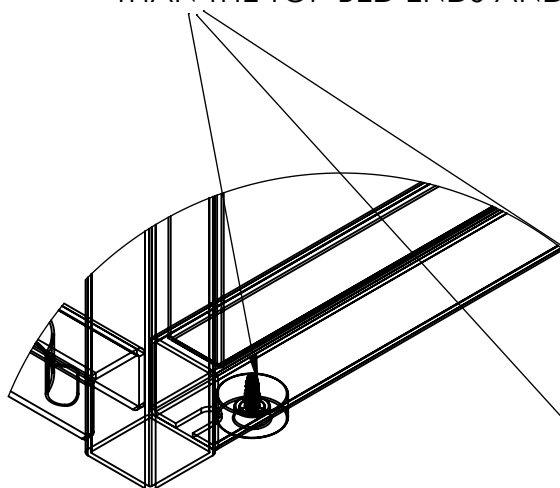

DETAIL B
SCALE 1 : 2

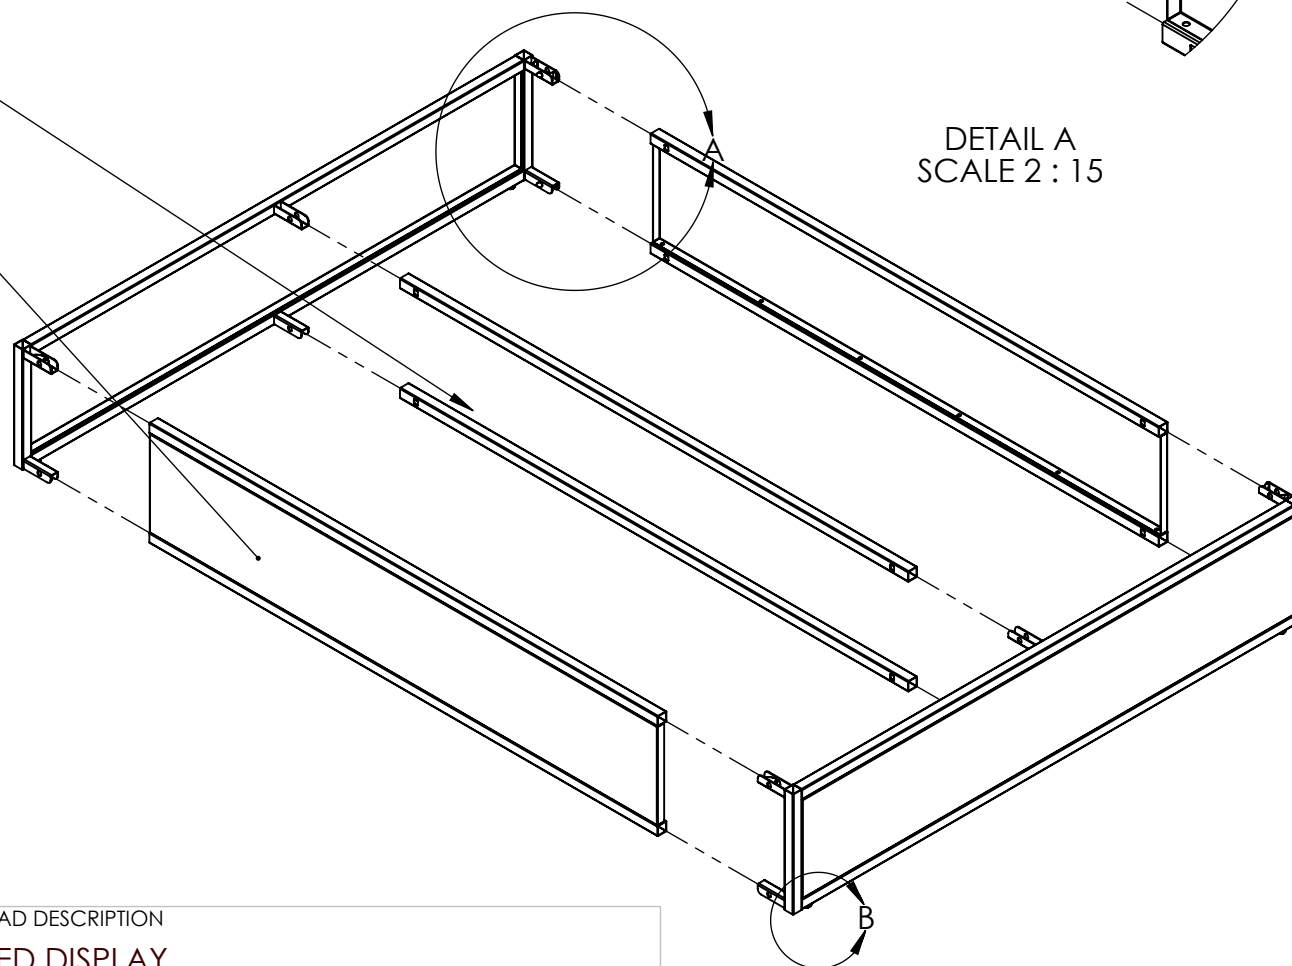

L.A. DARLING

MARMON RETAIL SOLUTIONS – BERKSHIRE HATHAWAY

LAD DESCRIPTION

BED DISPLAY

LAD PART NO.

354561IS

REV.

1

BY

JH

DATE


10/3/24

Customer Service 1-800-682-5730

PAGE

2 OF 7

STEP 2: PLACE THE ASSEMBLED BOTTOM
BED FRAME ONTO VIGNETTES.

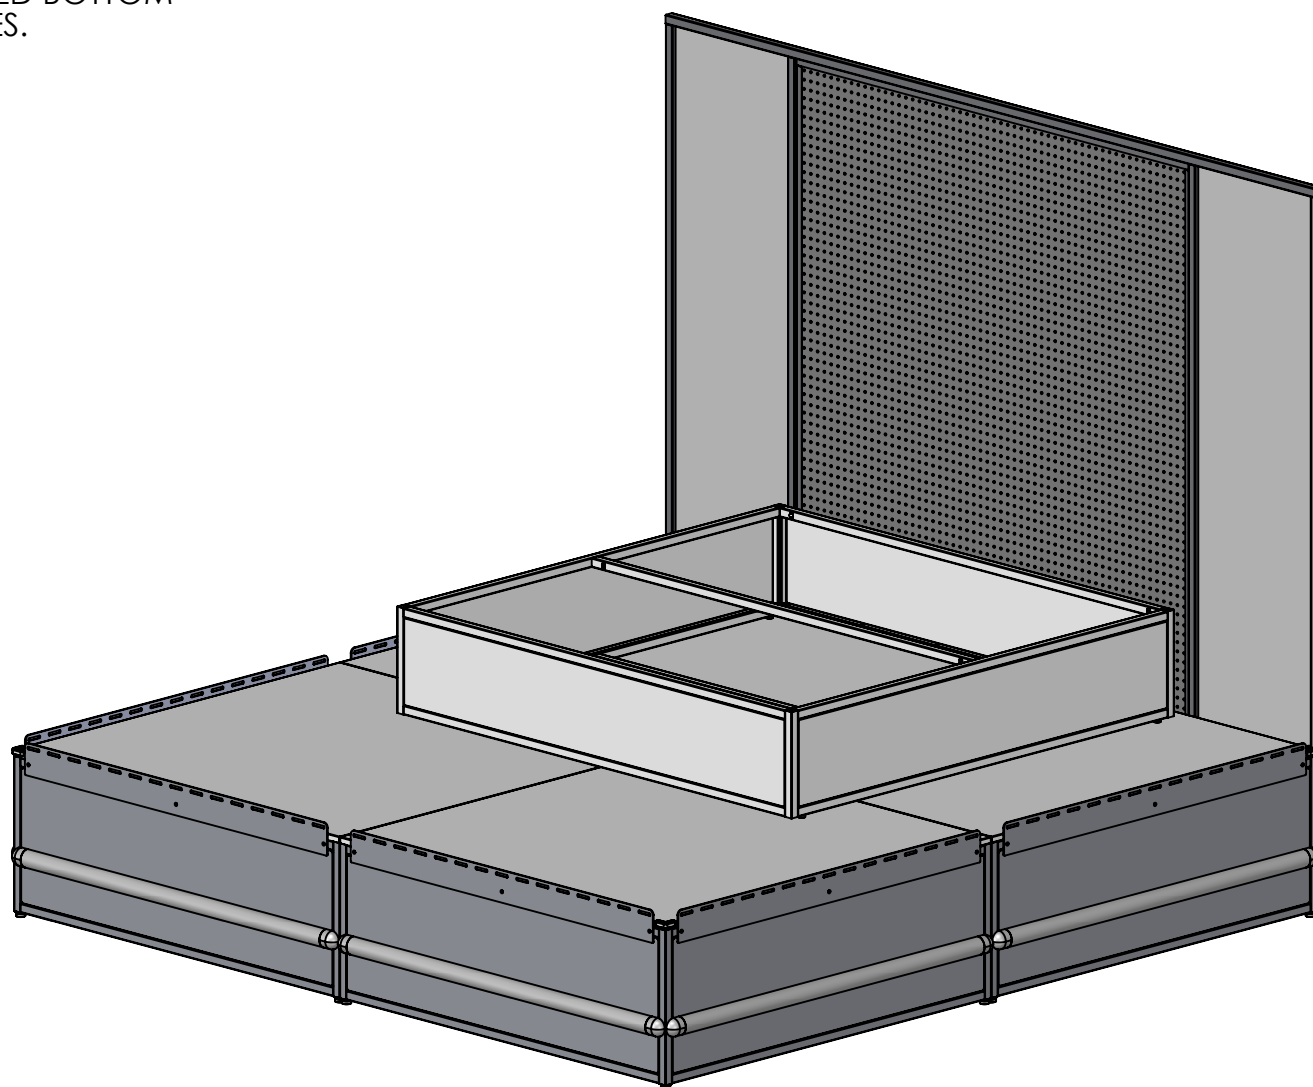

L.A. DARLING

MARMON RETAIL SOLUTIONS – BERKSHIRE HATHAWAY

LAD DESCRIPTION

BED DISPLAY

LAD PART NO.

354561IS

REV.

1

BY

JH

DATE


10/3/24


Customer Service 1-800-682-5730

PAGE

3 OF 7

STEP 3: REPEAT THE TOP FRAME ASSEMBLY
SIMILAR TO THE BOTTOM AND SET ON TOP OF
BOTTOM FRAME.

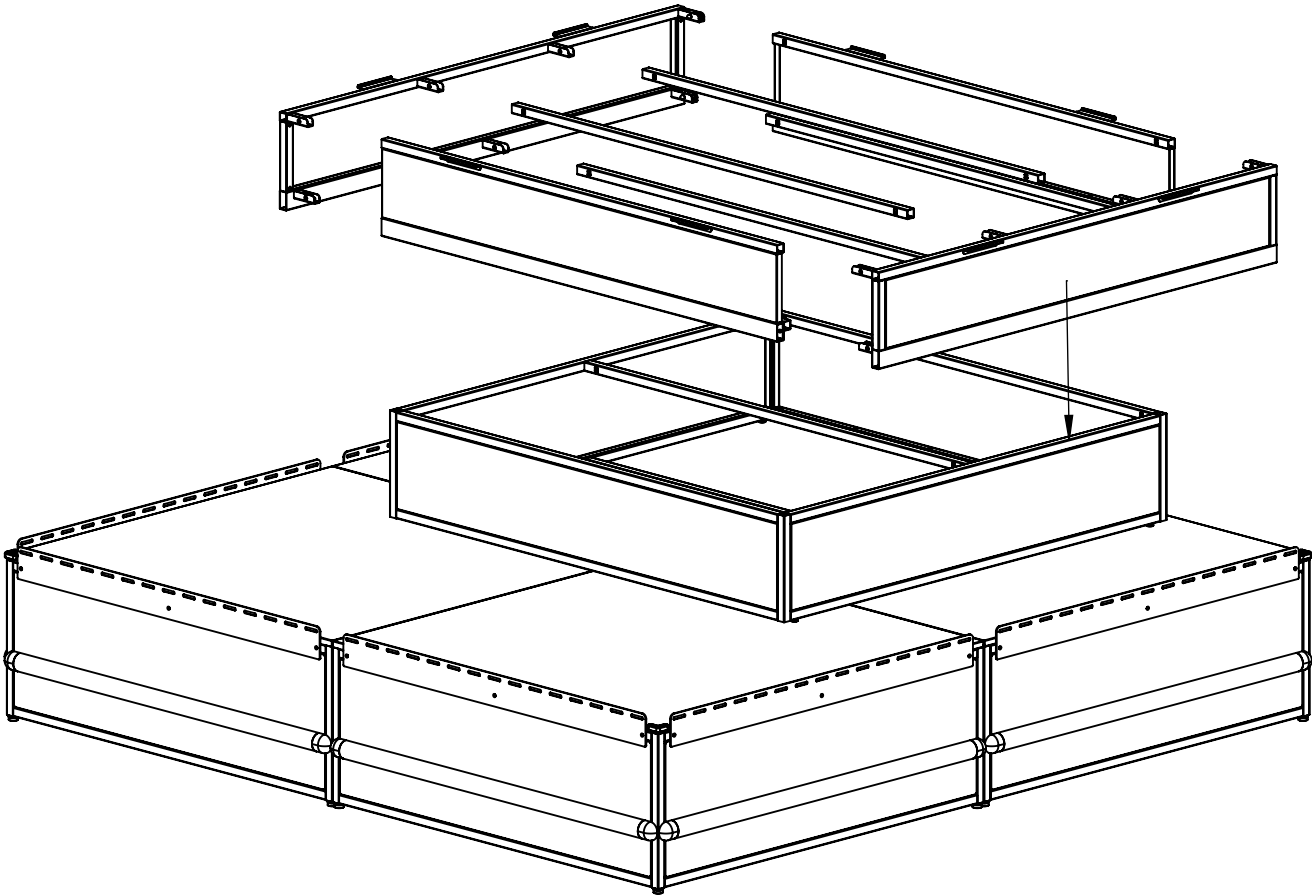

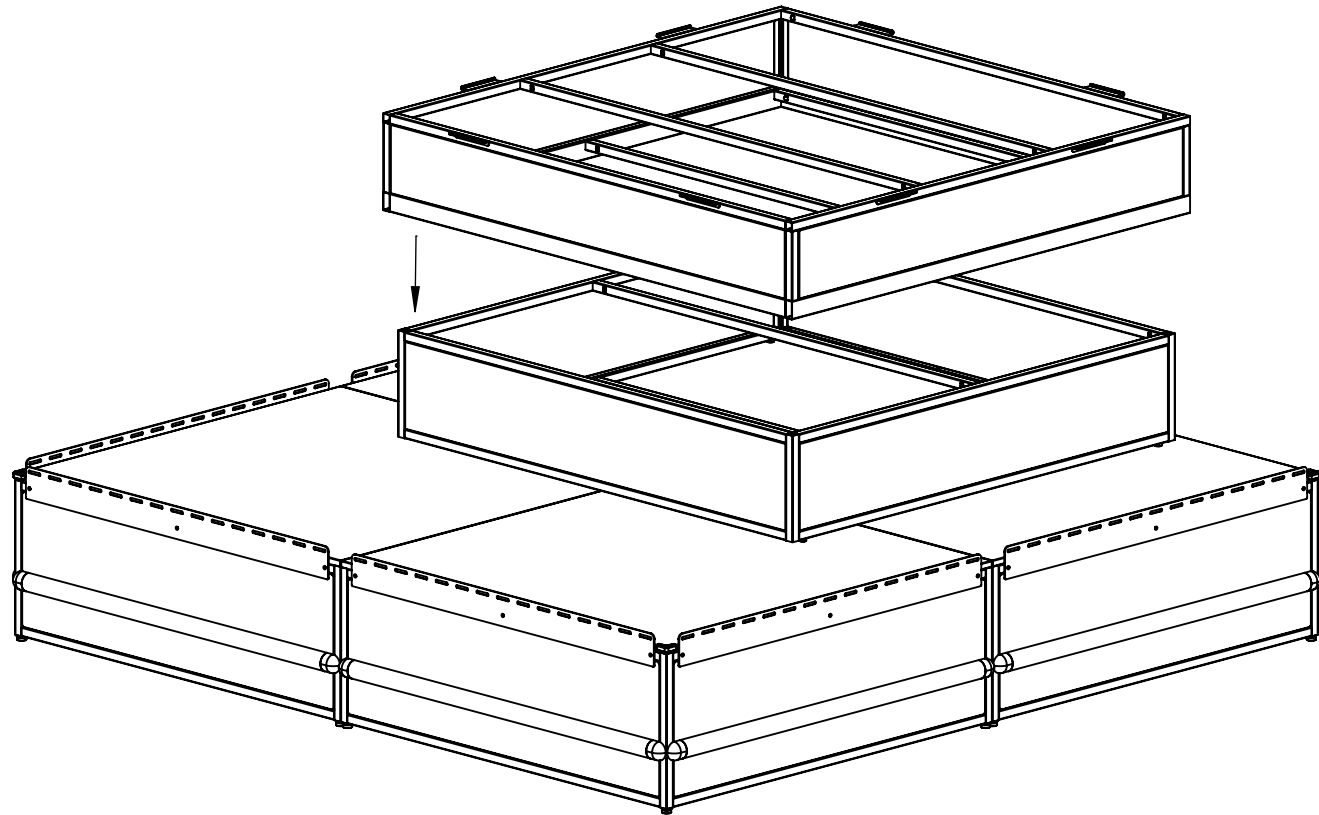

L.A. DARLING

MARMON RETAIL SOLUTIONS – BERKSHIRE HATHAWAY

LAD DESCRIPTION

BED DISPLAY

LAD PART NO.

354561IS

REV.

1

BY

JH

DATE


10/3/24

Customer Service 1-800-682-5730

PAGE
5 OF 7

STEP 4: PLACE WOOD ONTO FRAME.

STEP 5: PLACE FOAM ON TOP OF WOOD.

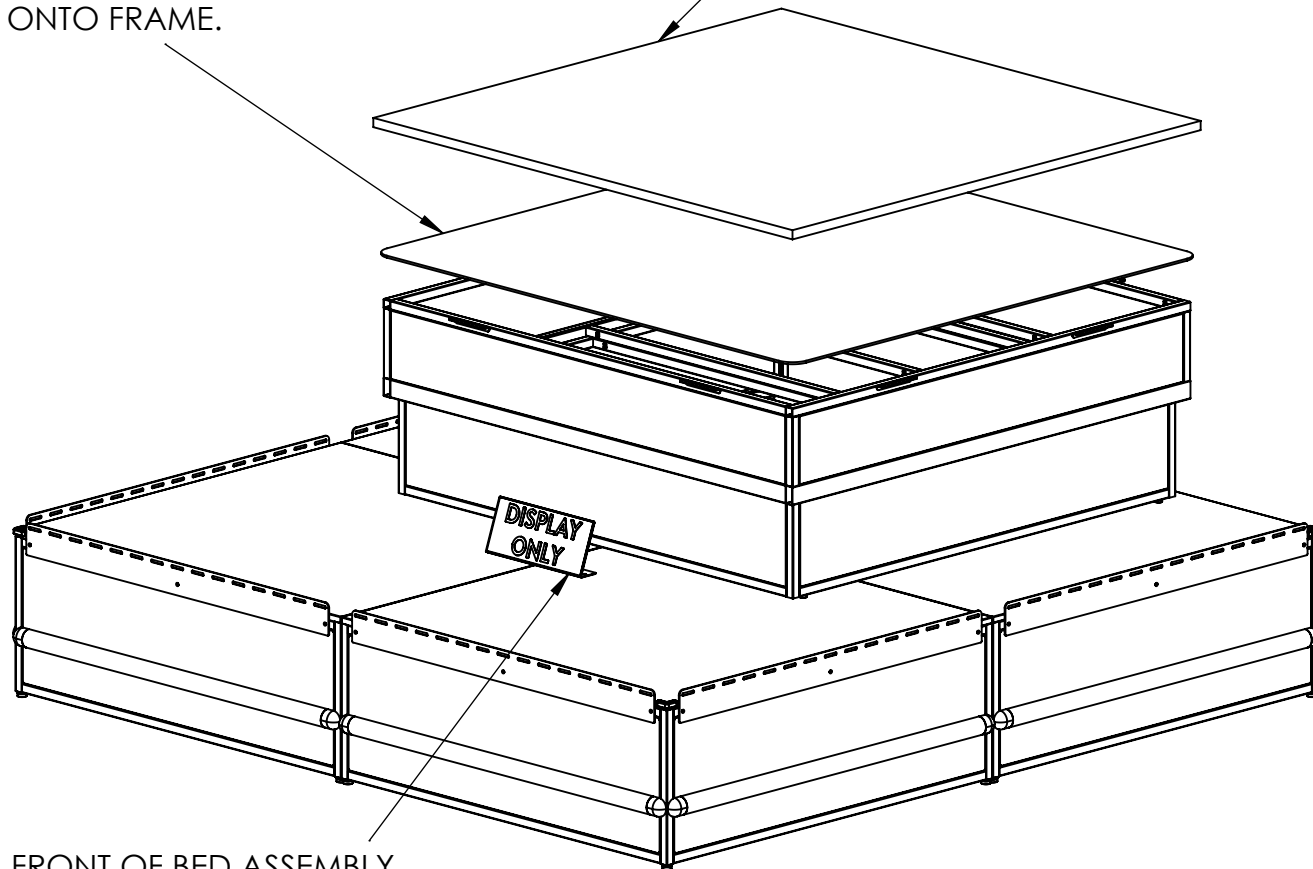

STEP 6: PLACE SIGN IN FRONT OF BED ASSEMBLY.

L.A. DARLING

MARMON RETAIL SOLUTIONS – BERKSHIRE HATHAWAY

LAD DESCRIPTION

BED DISPLAY

LAD PART NO.

354561IS

REV.

1

BY

JH


DATE

10/3/24

Customer Service 1-800-682-5730

PAGE

6 OF 7

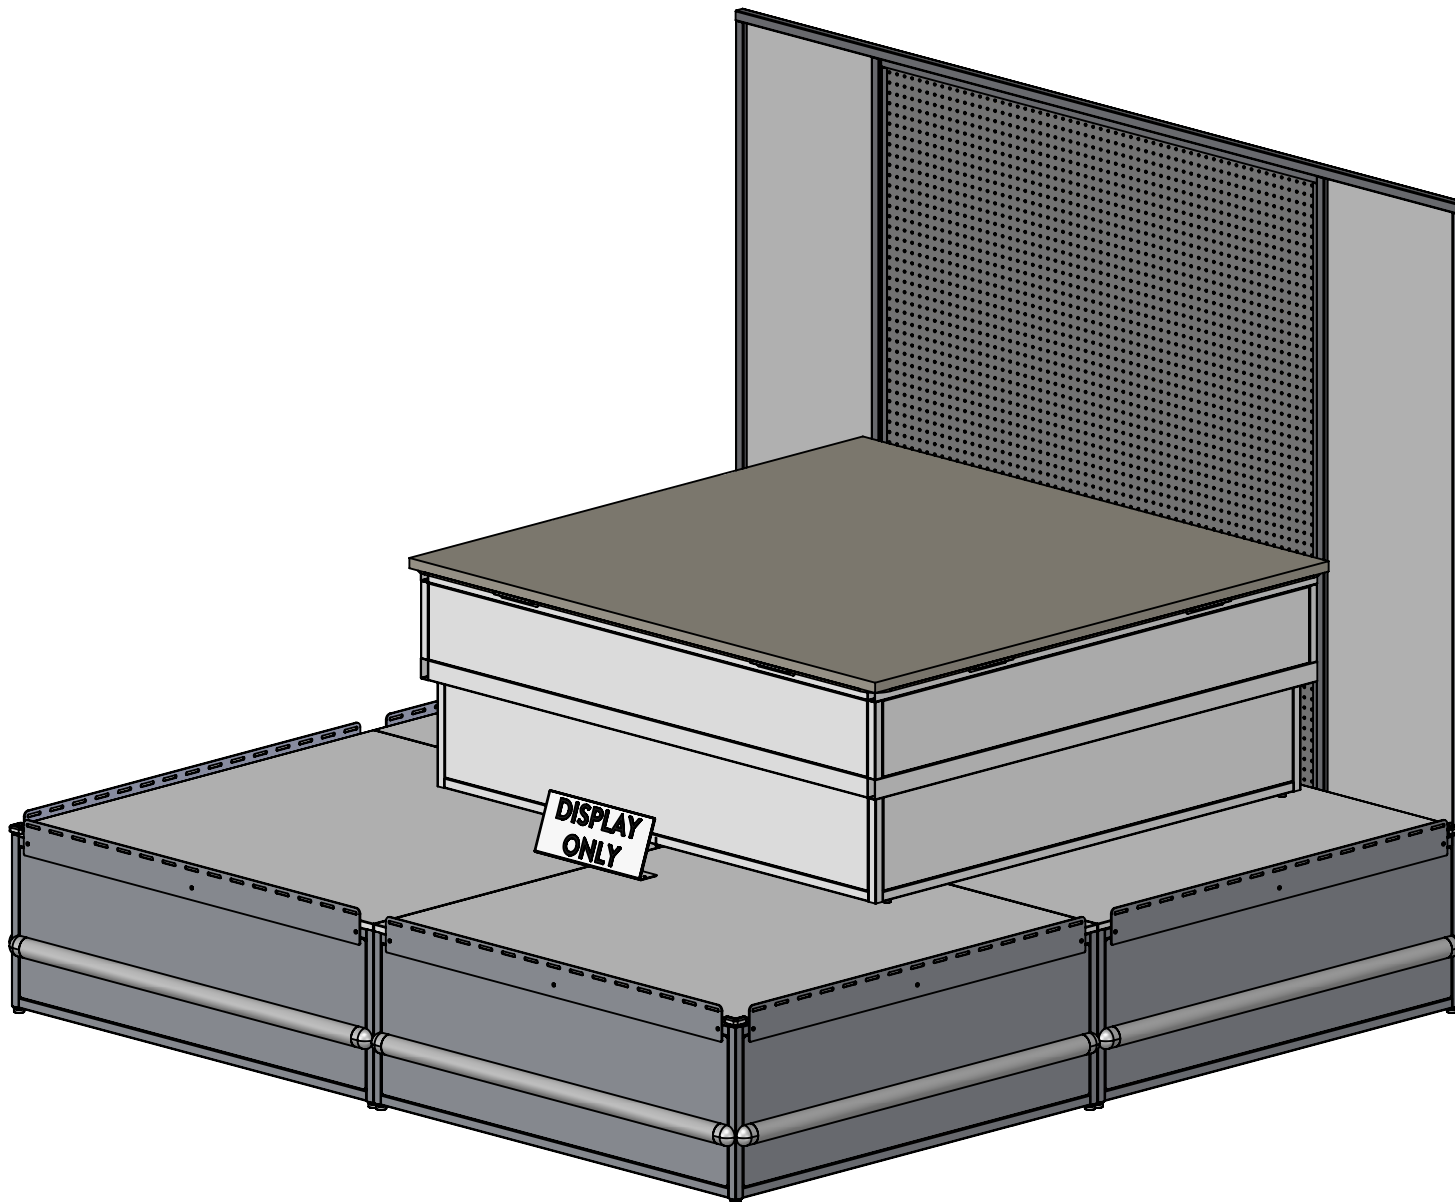

L.A. DARLING

MARMON RETAIL SOLUTIONS – BERKSHIRE HATHAWAY

LAD DESCRIPTION

BED DISPLAY

LAD PART NO.

354561IS

REV.

1

BY

JH

DATE

10/3/24

Customer Service 1-800-682-5730

PAGE

7 OF 7