


STEP 1: OPEN GLASS DOORS AND LOCATE SIDE PANELS.

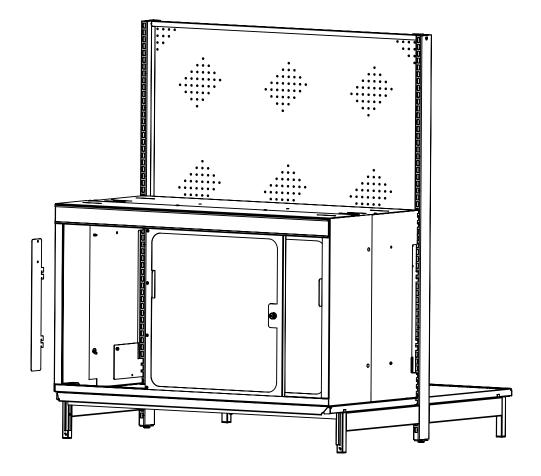



STEP 2: INSERT PANEL INTO UPRIGHTS AS SHOWN.

