


UNIVERSAL CAROUSEL
INSTALLATION INSTRUCTIONS

Walmart Part #: 100718571 & 100722520

Walmart Description: UNIVERSAL CAROUSEL

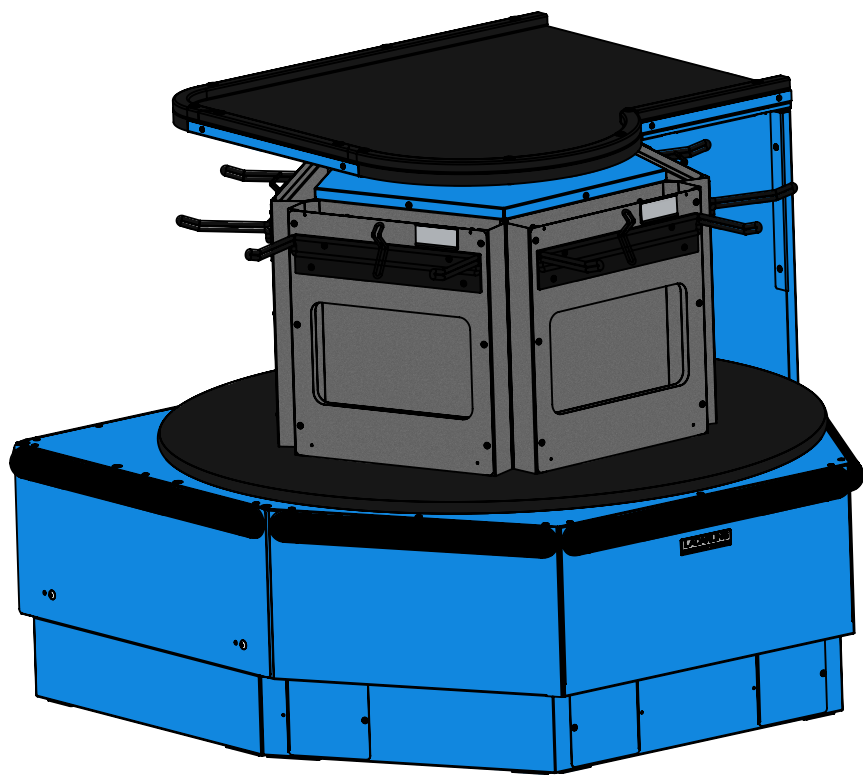


Scan the QR code or visit
www.ladarling.com/checkout-cabinets/
for the digital copy of the instruction sheets.

Customer Service 1-800-682-5730

PAGE
1 OF 11

STEP 1: REMOVE EXISTING CAROUSEL (IF PRESENT).

STEP 2: REMOVE (4) SCREWS FROM SCANNER TRIM.

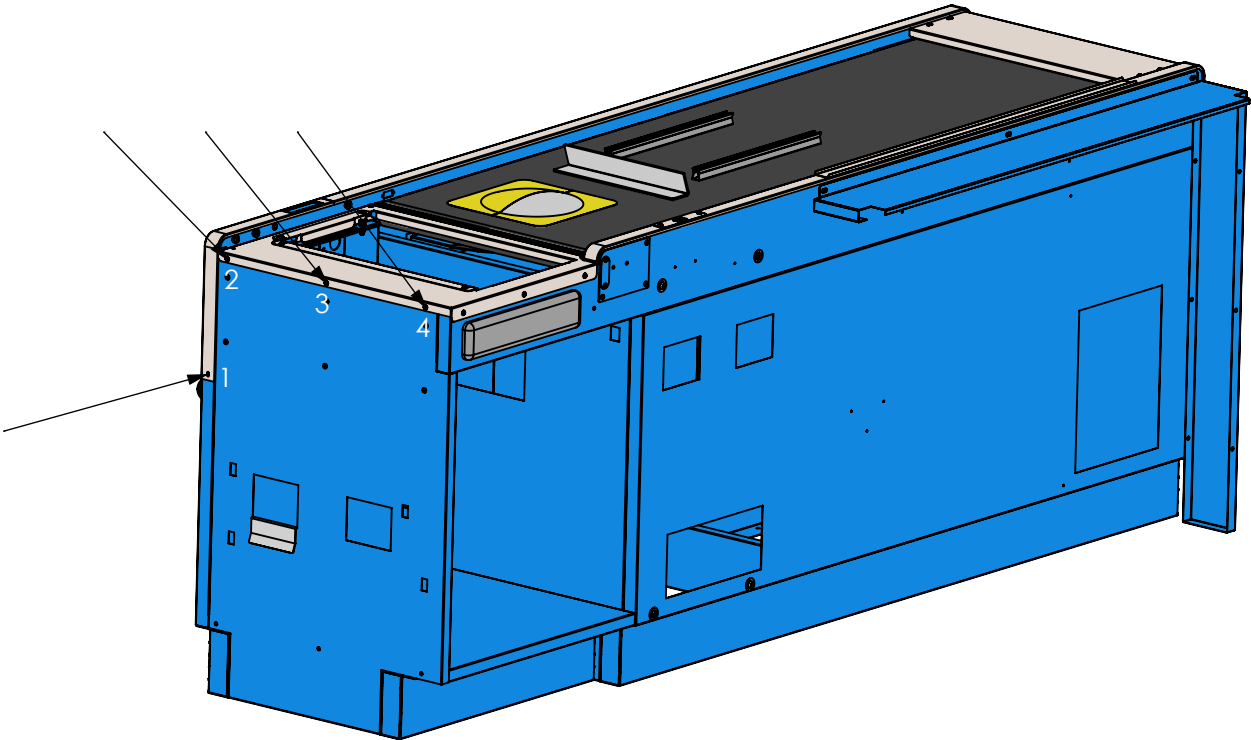

STEP 3: LOCATE TABLE TOP ASSEMBLY BOX AND DETERMINE
LH OR RH SETUP FOR CAROUSEL. (LH AS SHOWN).

PANEL ARRIVES AS LH UNIT,
IF INSTALLED AS RH, RELOCATE
THIS PANEL TO THE OPPOSITE SIDE.



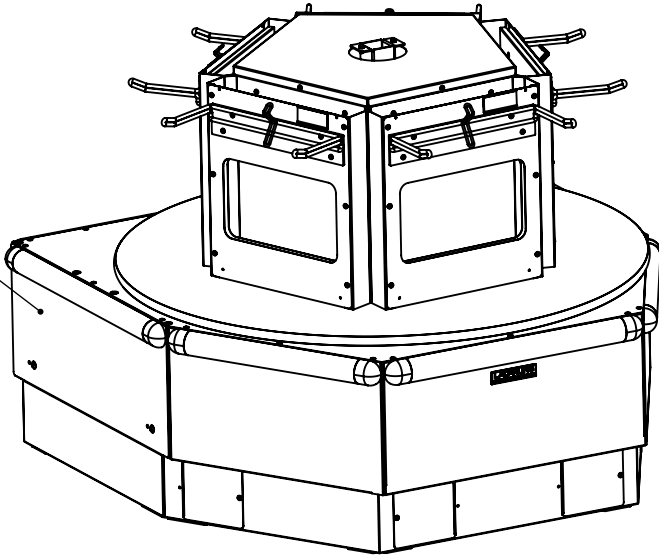


TABLE TOP ASSEMBLY

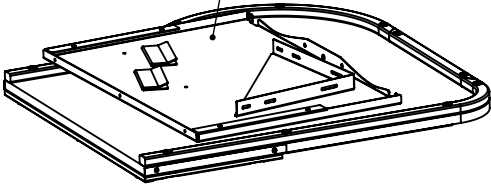

STEP 4: CONNECT BACK PANEL TO TOP.

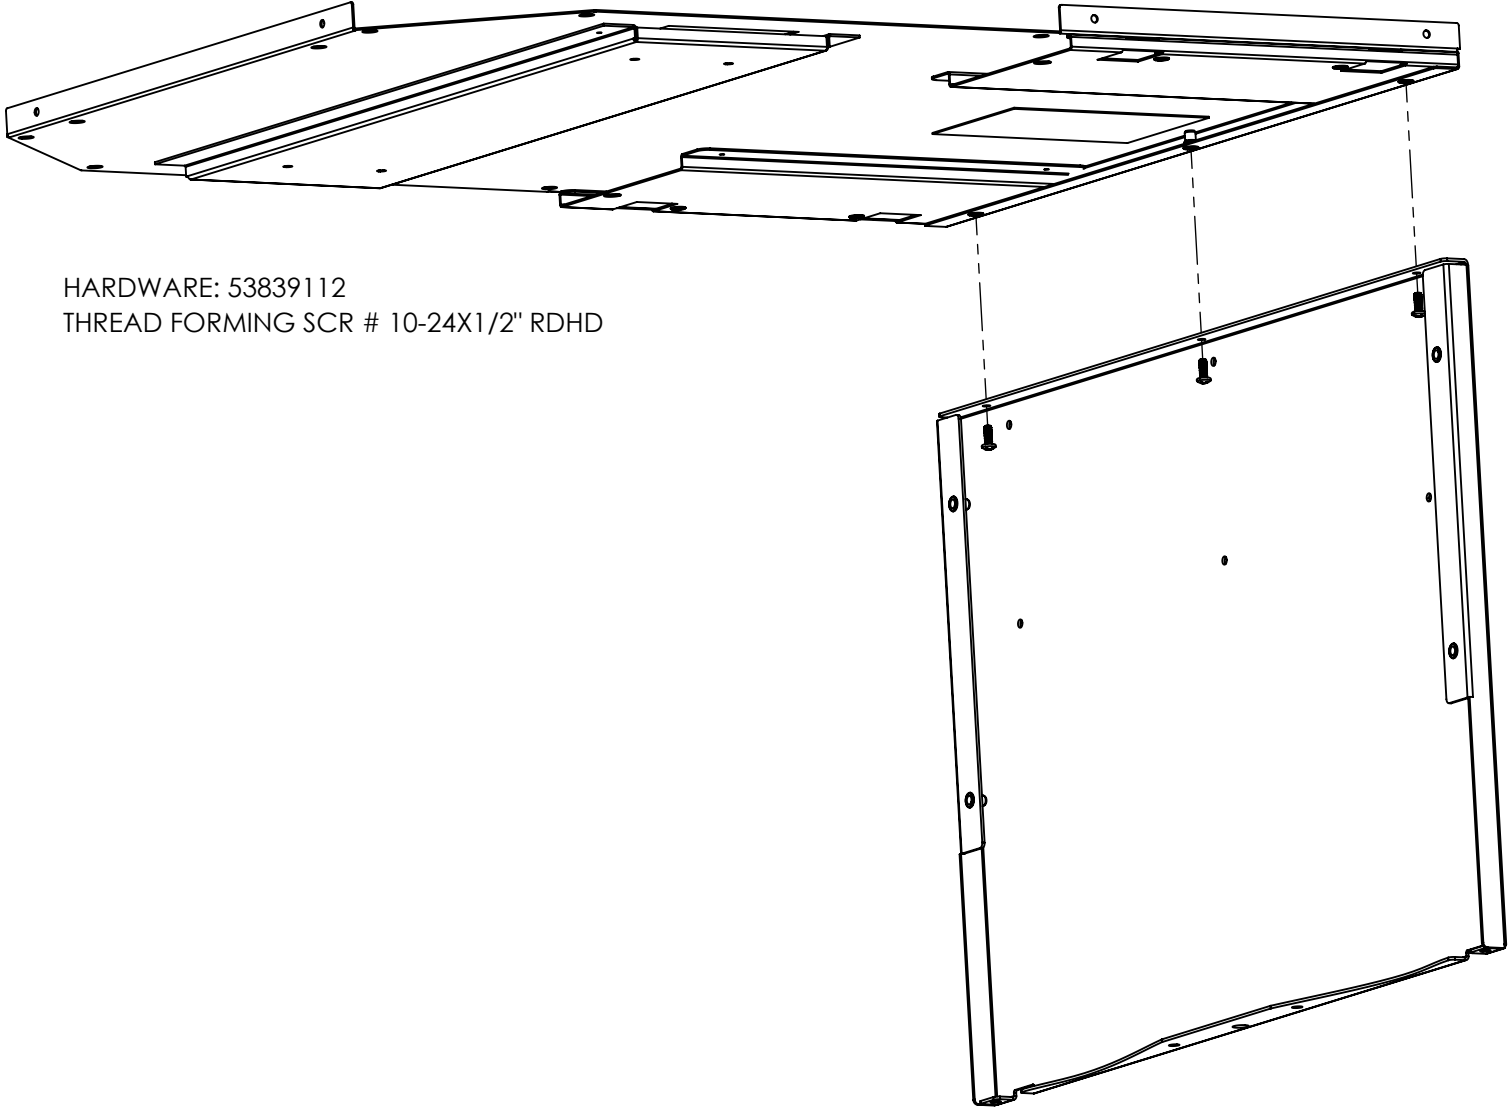


HARDWARE: 53839112
THREAD FORMING SCR # 10-24X1/2" RDHD

LAD DESCRIPTION: UNIVERSAL CAROUSEL			
LAD PART #: 354787IS	REV. 1	BY JH	DATE 4/21/2025

STEP 5: ATTACH TO COLUMN WITH (2) SCREWS
AND SECURE BACK PANEL WITH (4) SCREWS.

(BAGGER ASSEMBLY HIDDEN FOR CLARITY)

HARDWARE: 53839112
THREAD FORMING SCR # 10-24X1/2" RDHD

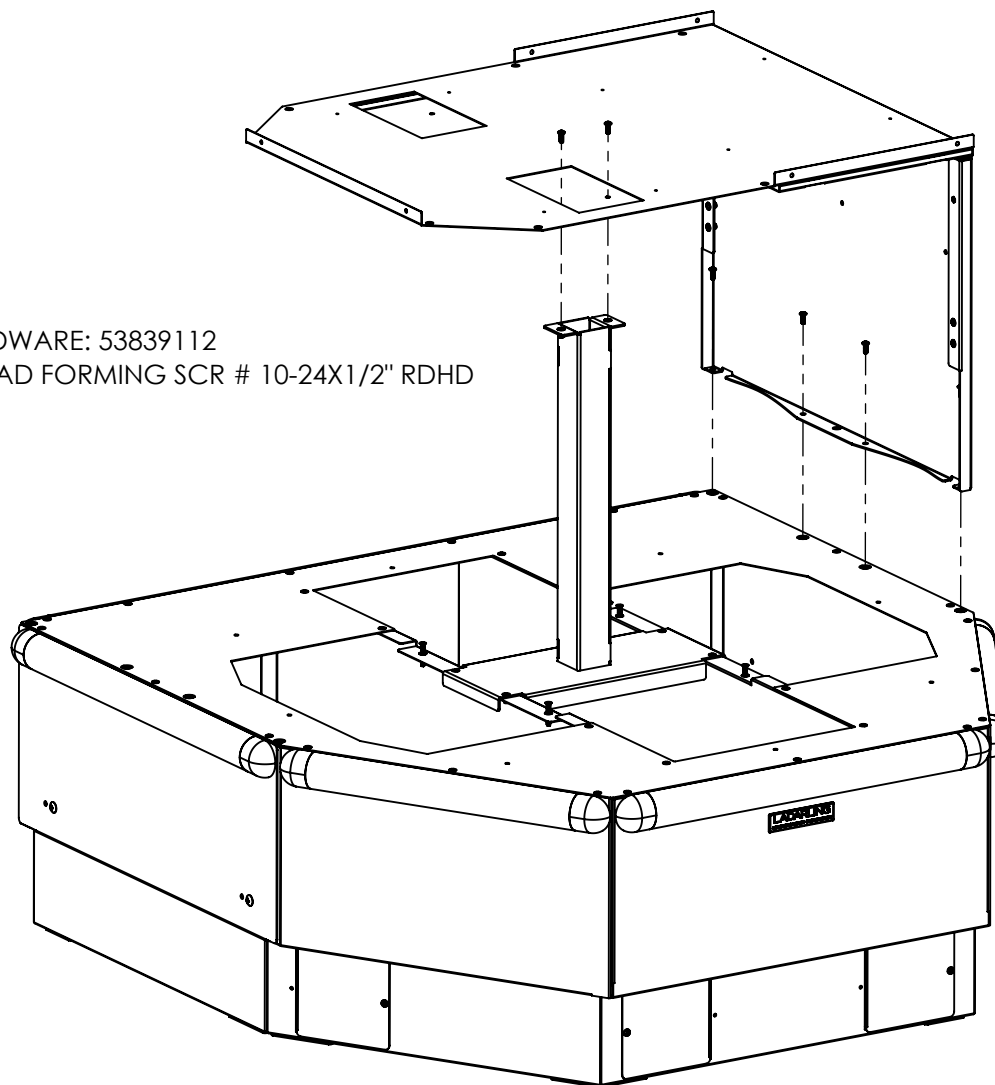


STEP 6: ATTACH PLASTIC TABLE AND TRIM
AS SHOWN, TIGHTEN WITH PROVIDED HEX KEYS


**IMPORTANT: NUT AND BOLT ONLY FIT IN THIS
SCENARIO, DO NOT REVERSE.**

HARDWARE: 08309-0630
1/4-20 X 30MM JCBA BOLT


HARDWARE: 53710201 NUT,
1/2-20 UNC, JOINT CONNECTOR

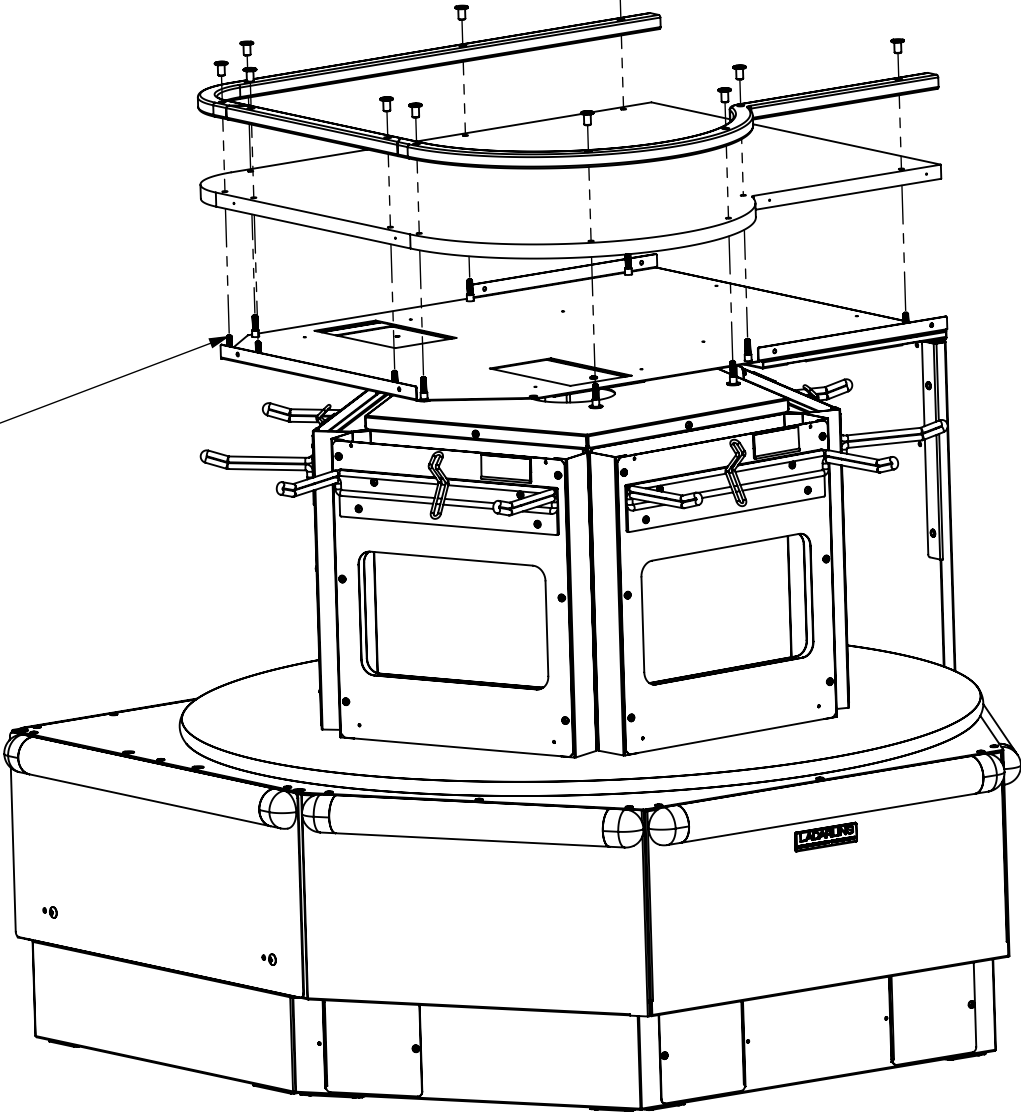

STEP 7: (MAKE SURE PLASTIC HARDWARE IS TIGHT FROM STEP 6 BEFORE PROCEEDING).
FURTHER CONNECT PLASTIC TO TABLE TOP ASSEMBLY WITH HARDWARE 53839012
SS #8 1/2" SHEET METAL SCREW (QTY. (6)).

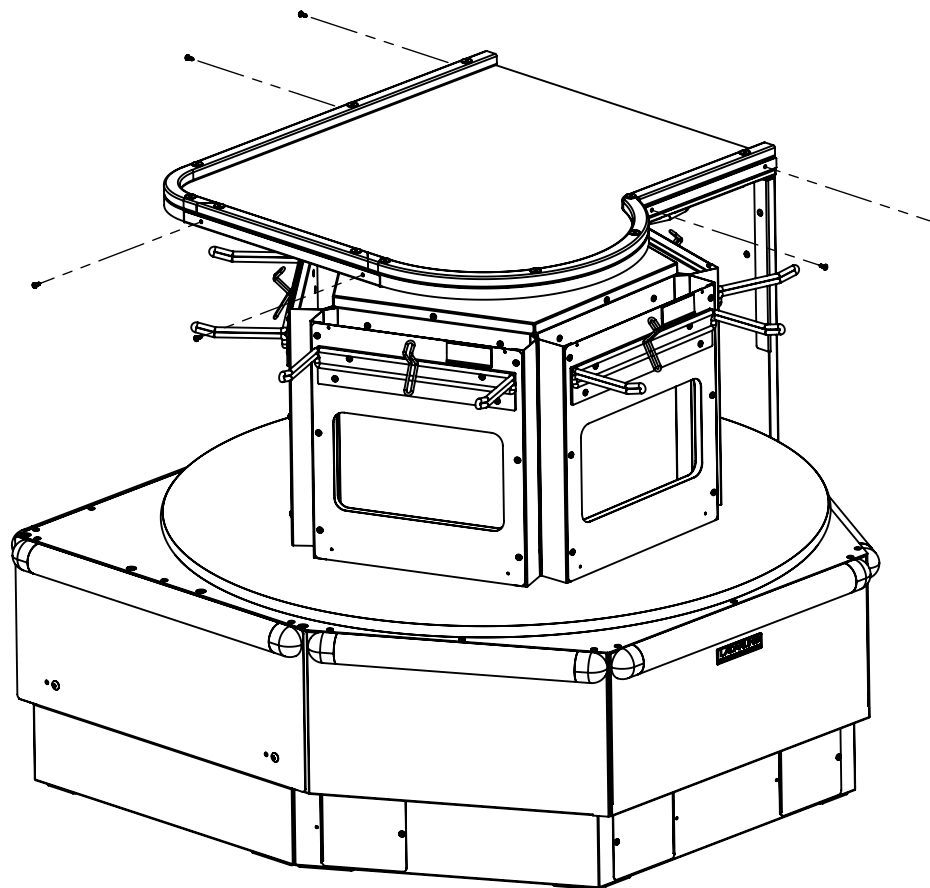



STEP 8: ATTACH GUSSET WITH SCREWS (X4).

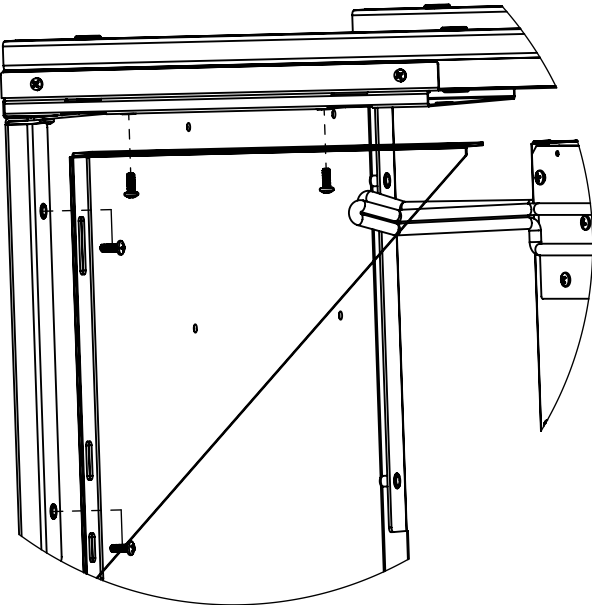

DETAIL B


HARDWARE: 53839112
THREAD FORMING SCR # 10-24X1/2" RDHD

INSTALLED VIEW:
MAKE SURE FLAT SIDE
IS ON THE OUTSIDE.

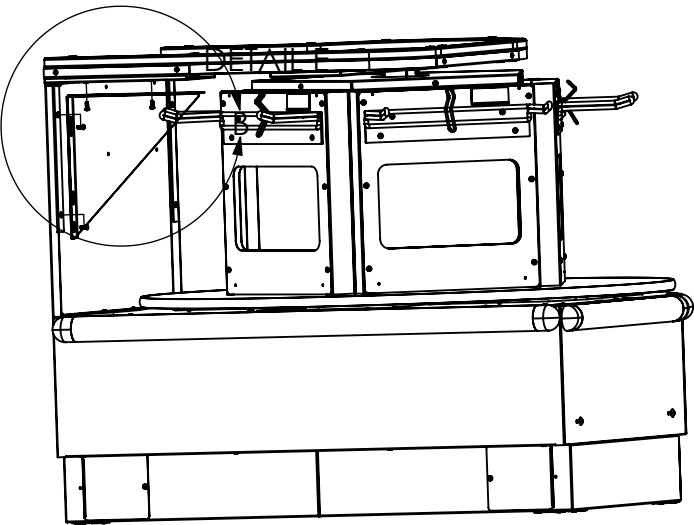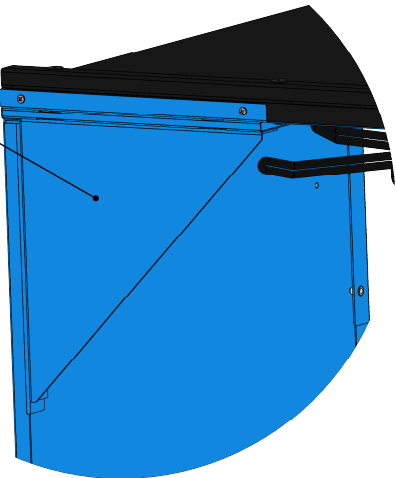


STEP 9: REMOVE ACCESS PANELS
AND ADJUST LEVELERS (QTY.(6)) (IF NEEDED)
TO LEVEL TABLE TOP TO SCANNER TABLE.


STEP 10: CONNECT UNITS WITH PROVIDED
CABINET SECURING CLIP.

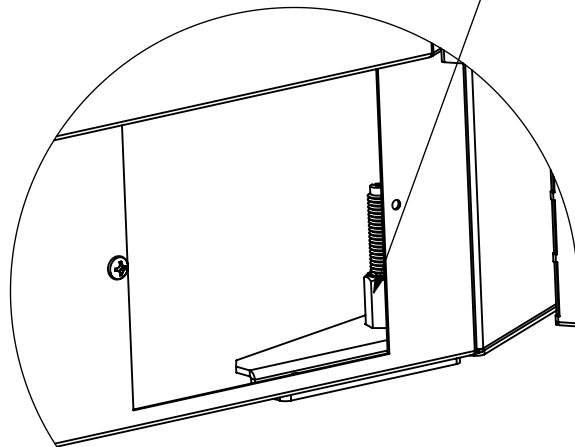


DETAIL D

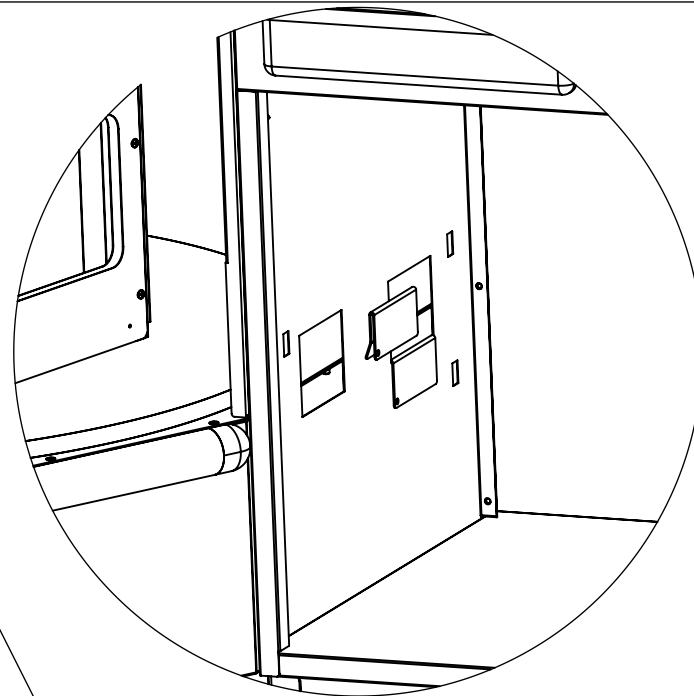

DETAIL A

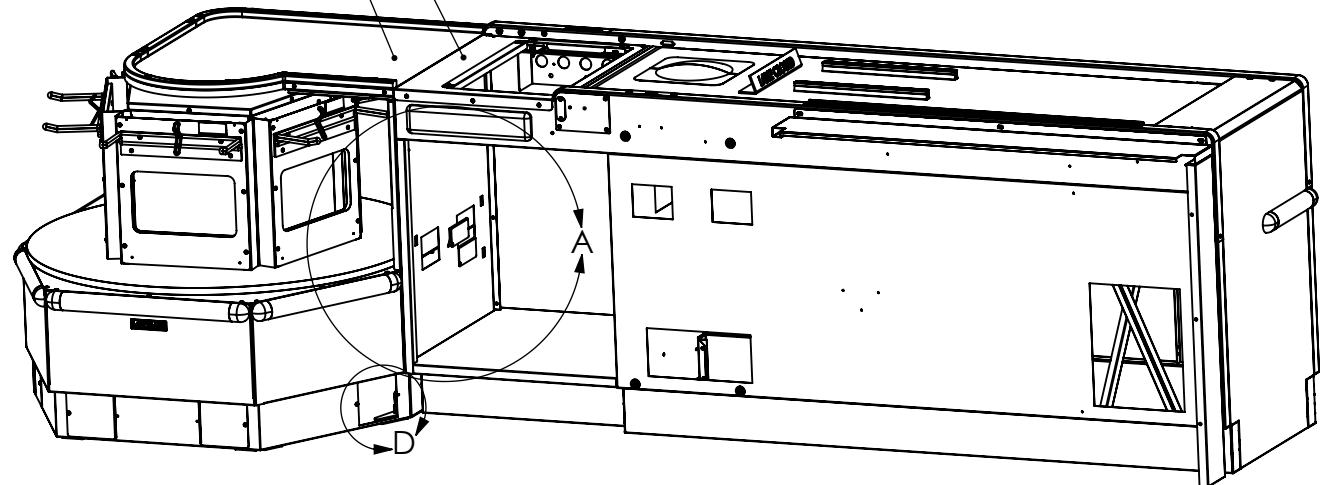

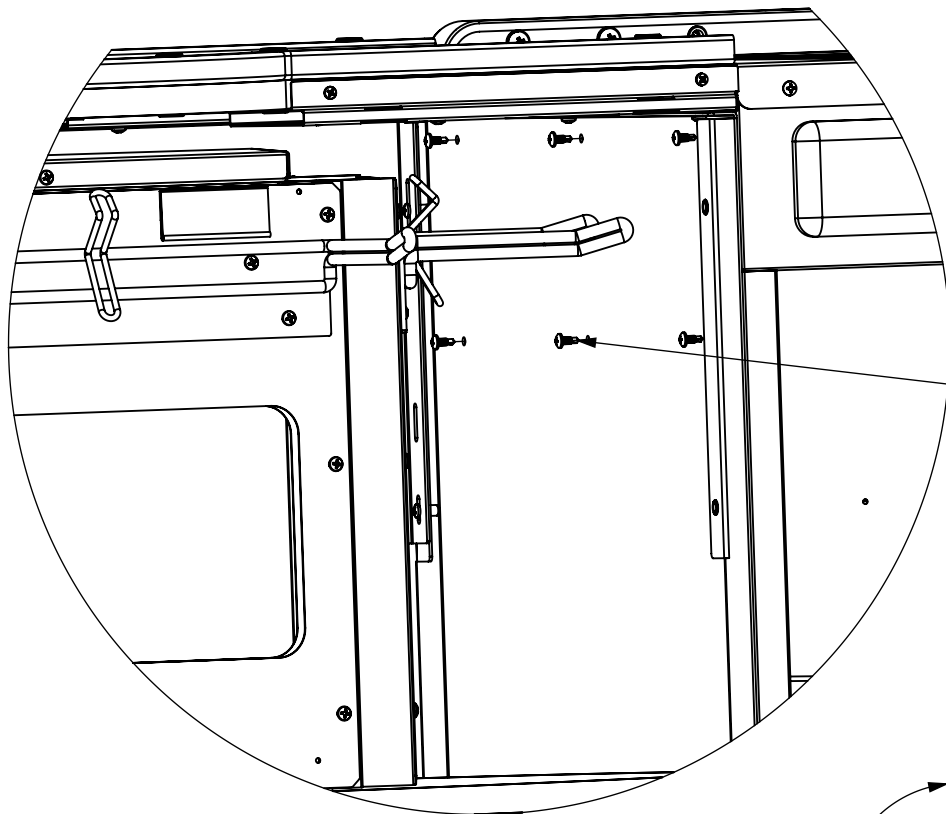

STEP 11: CONNECT UPPER PART OF BACK
PANEL OF CAROUSEL TO SCANNER CABINET
USING HARDWARE Z1974 SMS TEK
#10X1/2 PNHD (QTY. (6)).

DETAIL C

