




Walmart Part #: 100732014 100732015

Walmart Description: GLASS SHOWCASE STARTER 50
GLASS SHOWCASE ADD-ON 50

GLASS SHOWCASE STARTER 50
SAP# 100732014

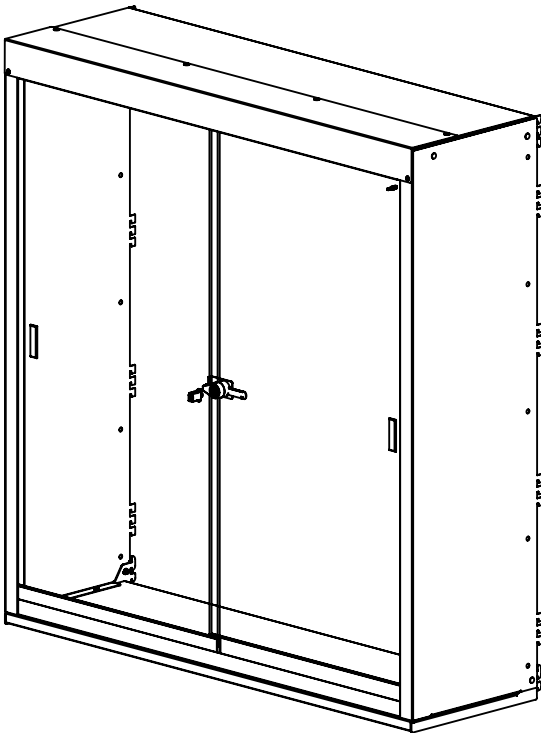

GLASS SHOWCASE ADD-ON 50
SAP# 100732015

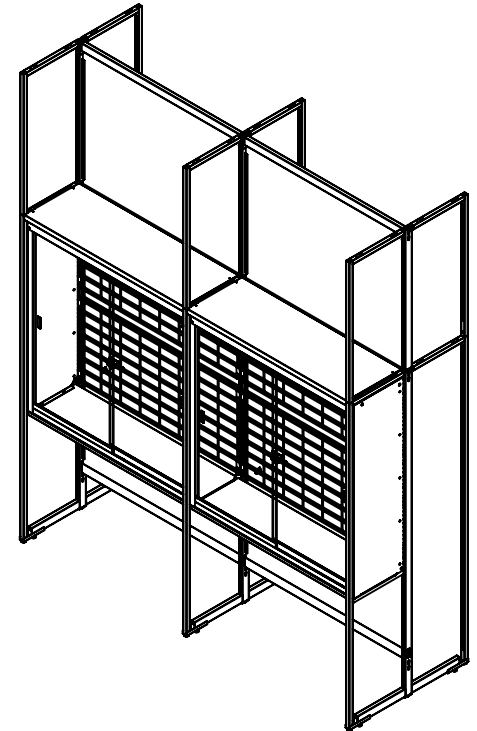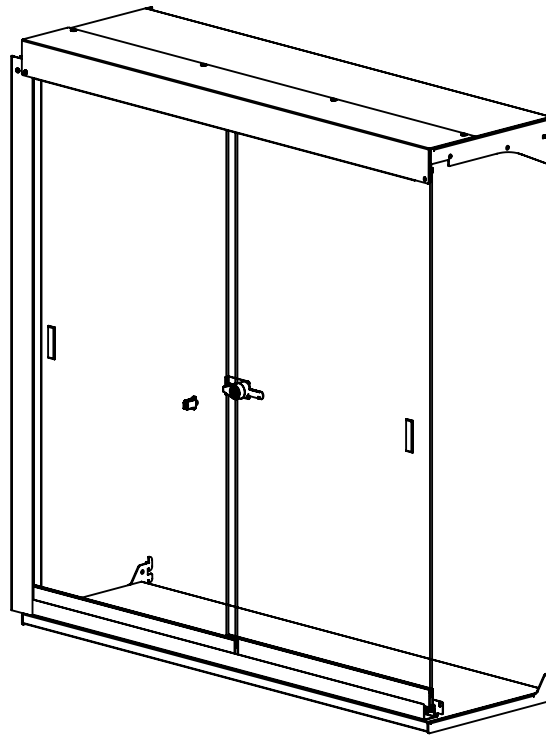


Scan the QR code or visit
www.ladarling.com/glass-cases/
for the digital copy of the instruction sheets.

STEP 1: INSTALL TOP SHELVES WHERE DESIRED.
NOTE! IF INSTALLING NEAR OUTRIGGER CROSS TUBES, IT MAY BE NECESSARY TO REMOVE OUTRIGGER SHELVES AND/OR OUTRIGGERS.


STEP 2: INSTALL BOTTOM SHELVES 48" BELOW TOP SHELVES (44 OPEN SLOTS BETWEEN SHELF BRACKETS).

STEP 3: ATTACH BOTTOM CHANNELS TO BOTTOM SHELVES WITH (2) #10-32×1/2" SCREWS. DO NOT FULLY TIGHTEN.

STEP 4: INSTALL DOOR TRACK EXTRUSIONS IN BOTTOM CHANNELS WITH PROVIDED DOUBLE-SIDED TAPE.

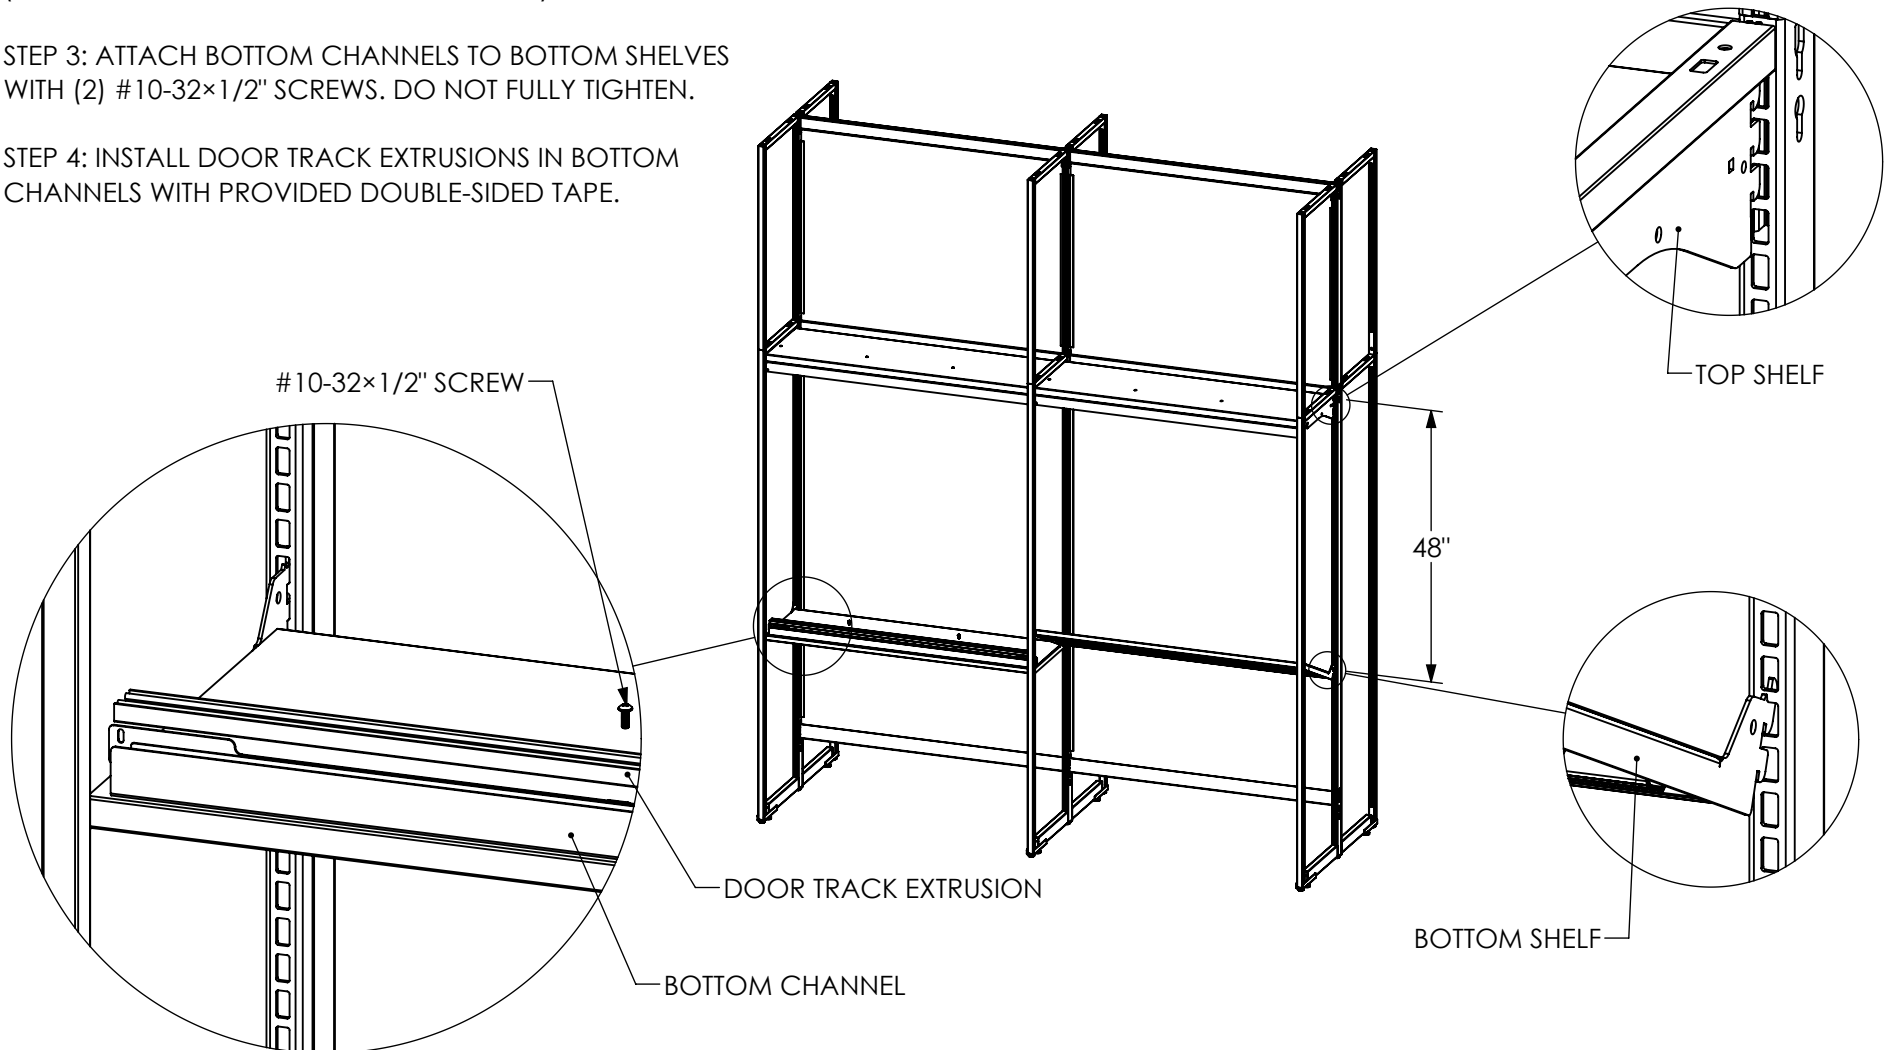


STEP 5: INSTALL ANY GRID PANELS NEEDED BETWEEN
SHELVES.

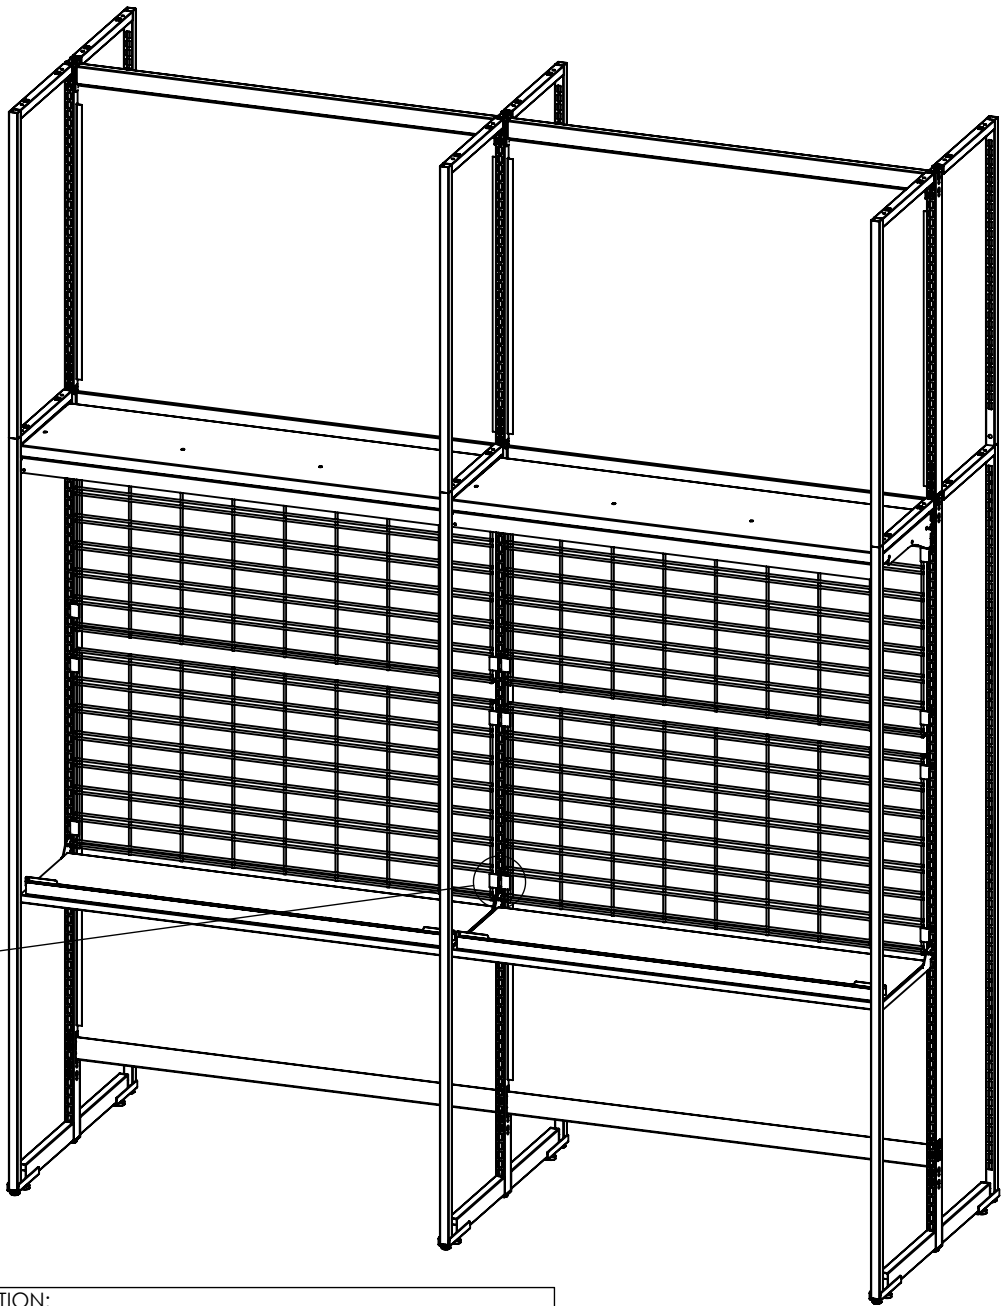

STEP 6: ATTACH LOCK BARS TO RH DOORS, HALFWAY UP LEFT SIDE.

STEP 7: LIFT DOORS INTO CHANNELS ON TOP SHELF AND ATTACH TO TRACK EXTRUSION. RH DOOR GOES ON REAR RIB OF THE TRACK AND LH DOOR GOES ON THE FRONT RIB. SLIDE DOORS SO THAT SECURITY RETAINERS DROP INTO CENTER NOTCH ON TRACK EXTRUSION.


DOORS MUST BE IN CORRESPONDING CHANNELS IN TOP TRACK

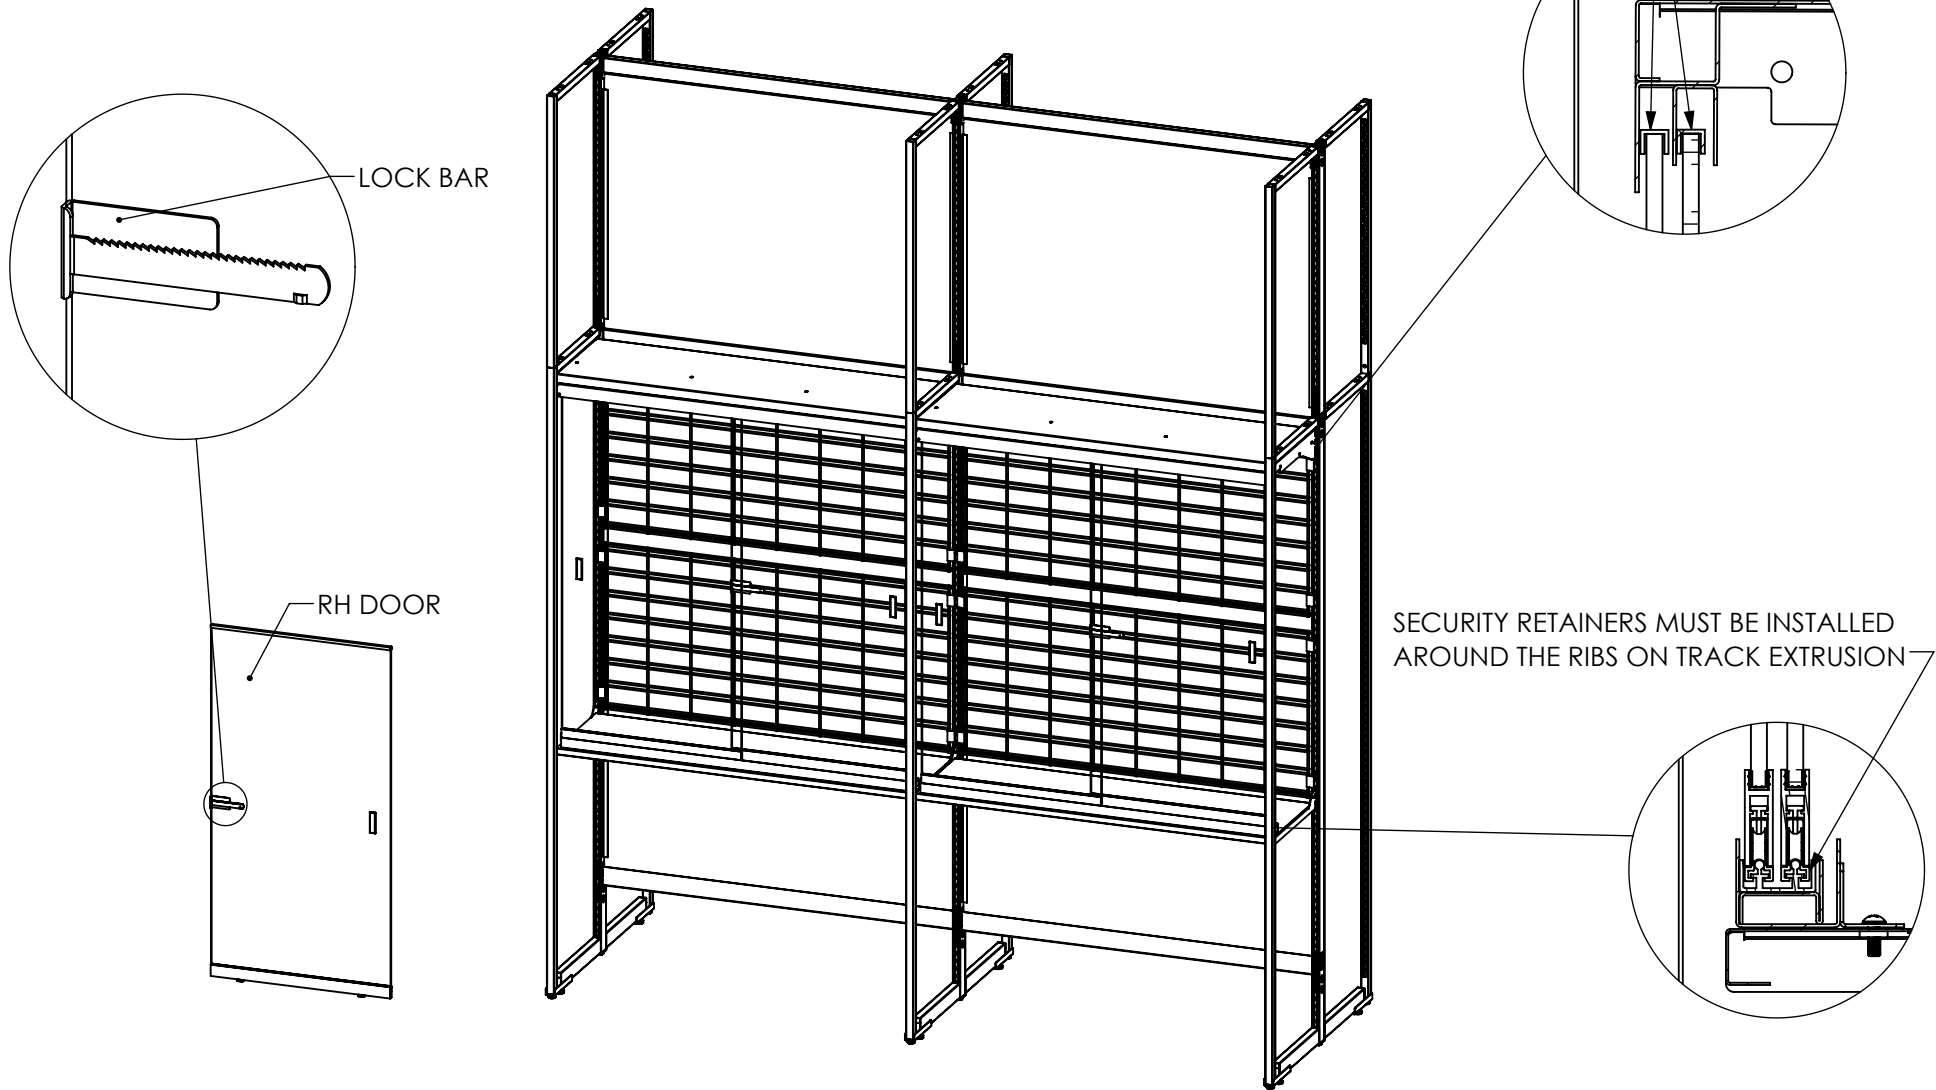

STEP 8: INSTALL LH AND RH SIDE PANELS AT ENDS OF CASES. FOR CASES WIDER THAN ONE 4' SECTION, INSTALL INTERMEDIATE DIVIDERS BETWEEN SECTIONS. NOTE! SIDE PANELS AND INTERMEDIATE DIVIDERS FIT IN FRONT OF TOP SHELVES AND BOTTOM CHANNELS. ATTACH BOTTOM CHANNELS TO SIDE PANELS AND INTERMEDIATE DIVIDERS WITH TEKS SCREWS.

NOTE! DO NOT FULLY TIGHTEN HARDWARE


STEP 9: ATTACH SIDE PANELS TO BOTTOM AND TOP SHELVES WITH CARRIAGE BOLTS AND WING NUTS WHERE SHOWN.

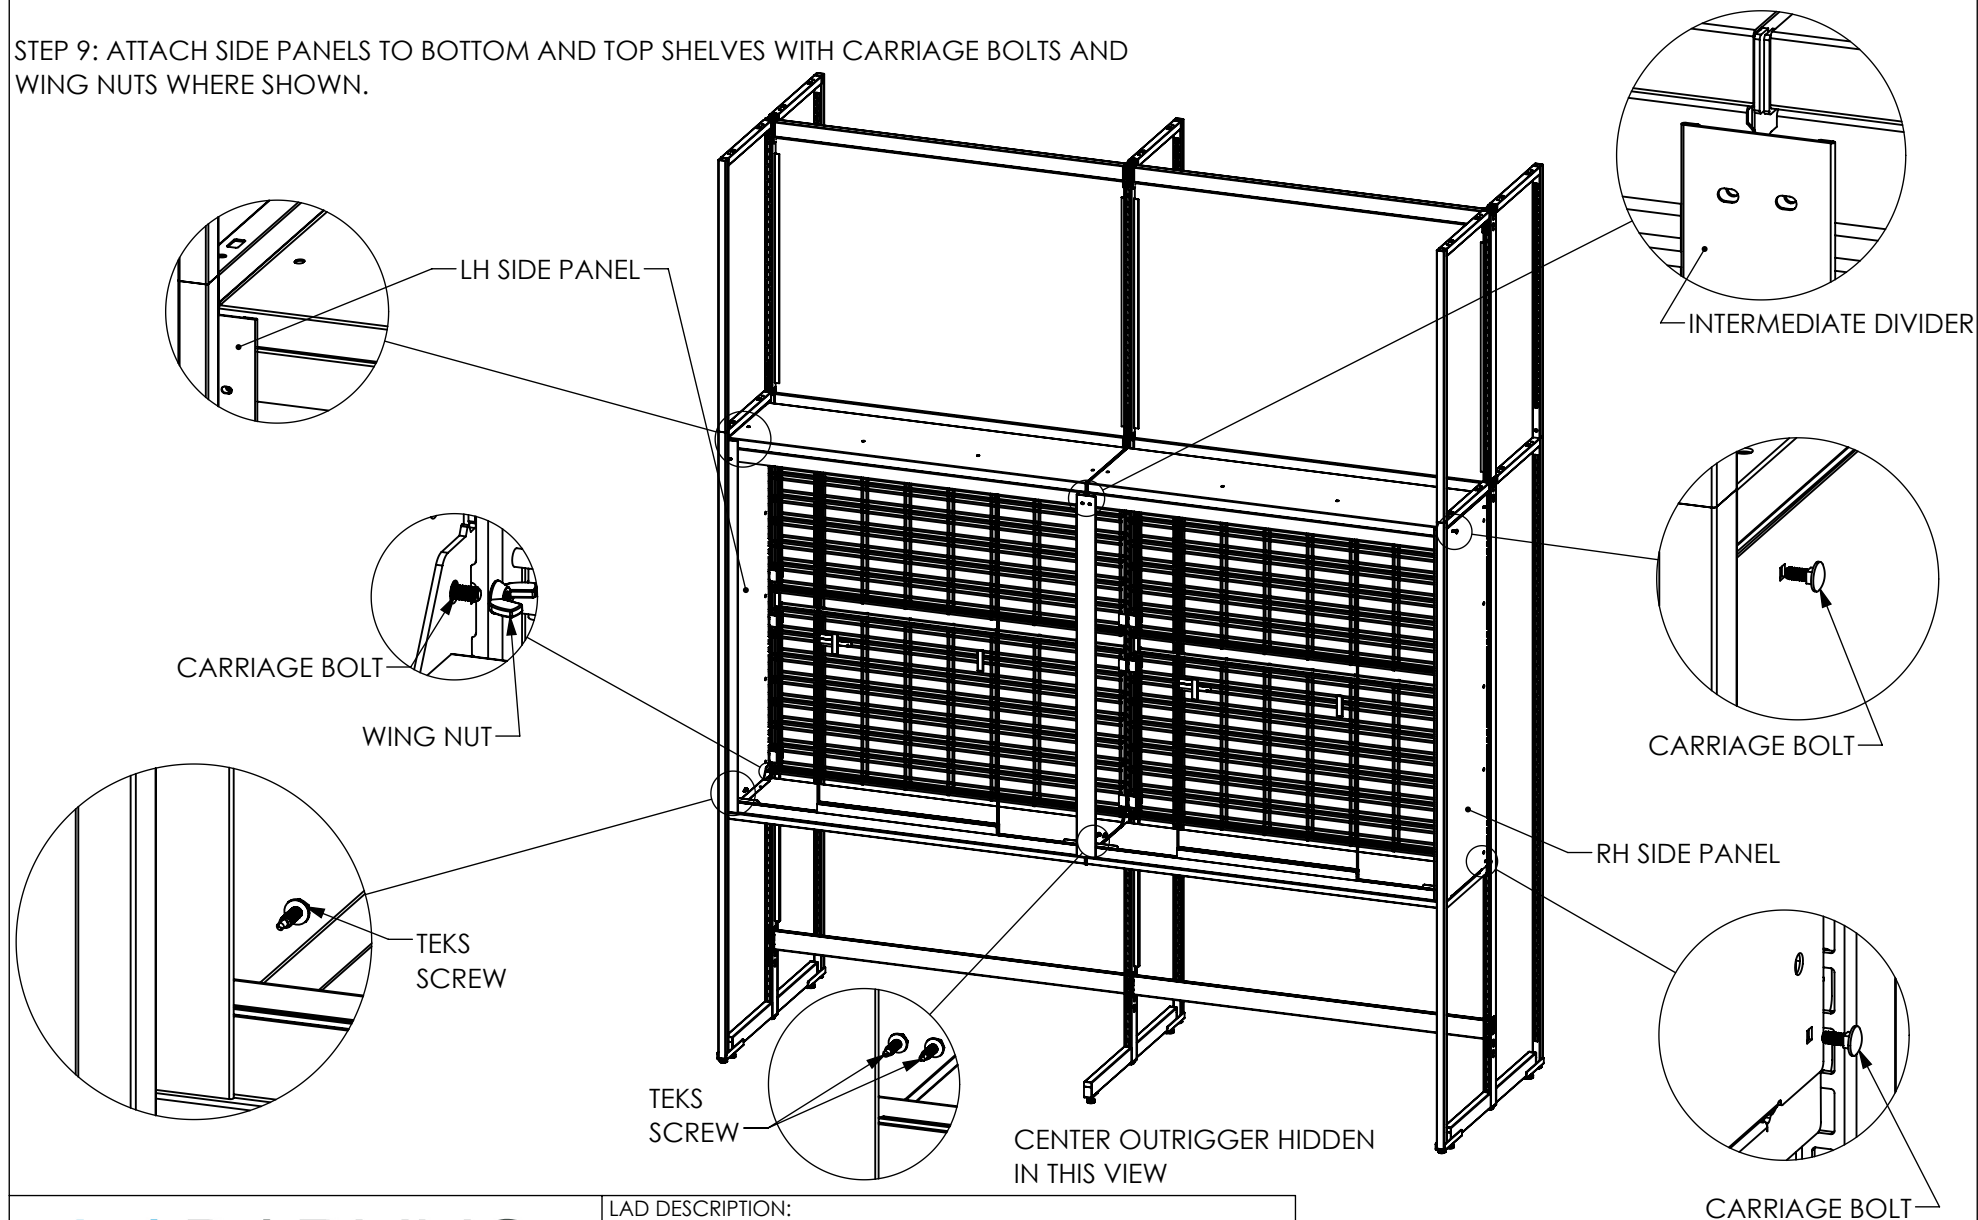

STEP 10: ROTATE LOCK BRACKET INTO UPRIGHT SLOT AND CONNECT TO SIDE PANELS AND SHELF BRACKETS WITH CARRIAGE BOLTS AND WING NUTS.


NOTE! DO NOT FULLY TIGHTEN HARDWARE

STEP 11: FOR INTERMEDIATE SECTIONS, ROTATE ONE LOCK BRACKET INTO UPRIGHT SLOT AND CONNECT TO ADJACENT SHELF BRACKETS WITH CARRIAGE BOLT AND WING NUT.

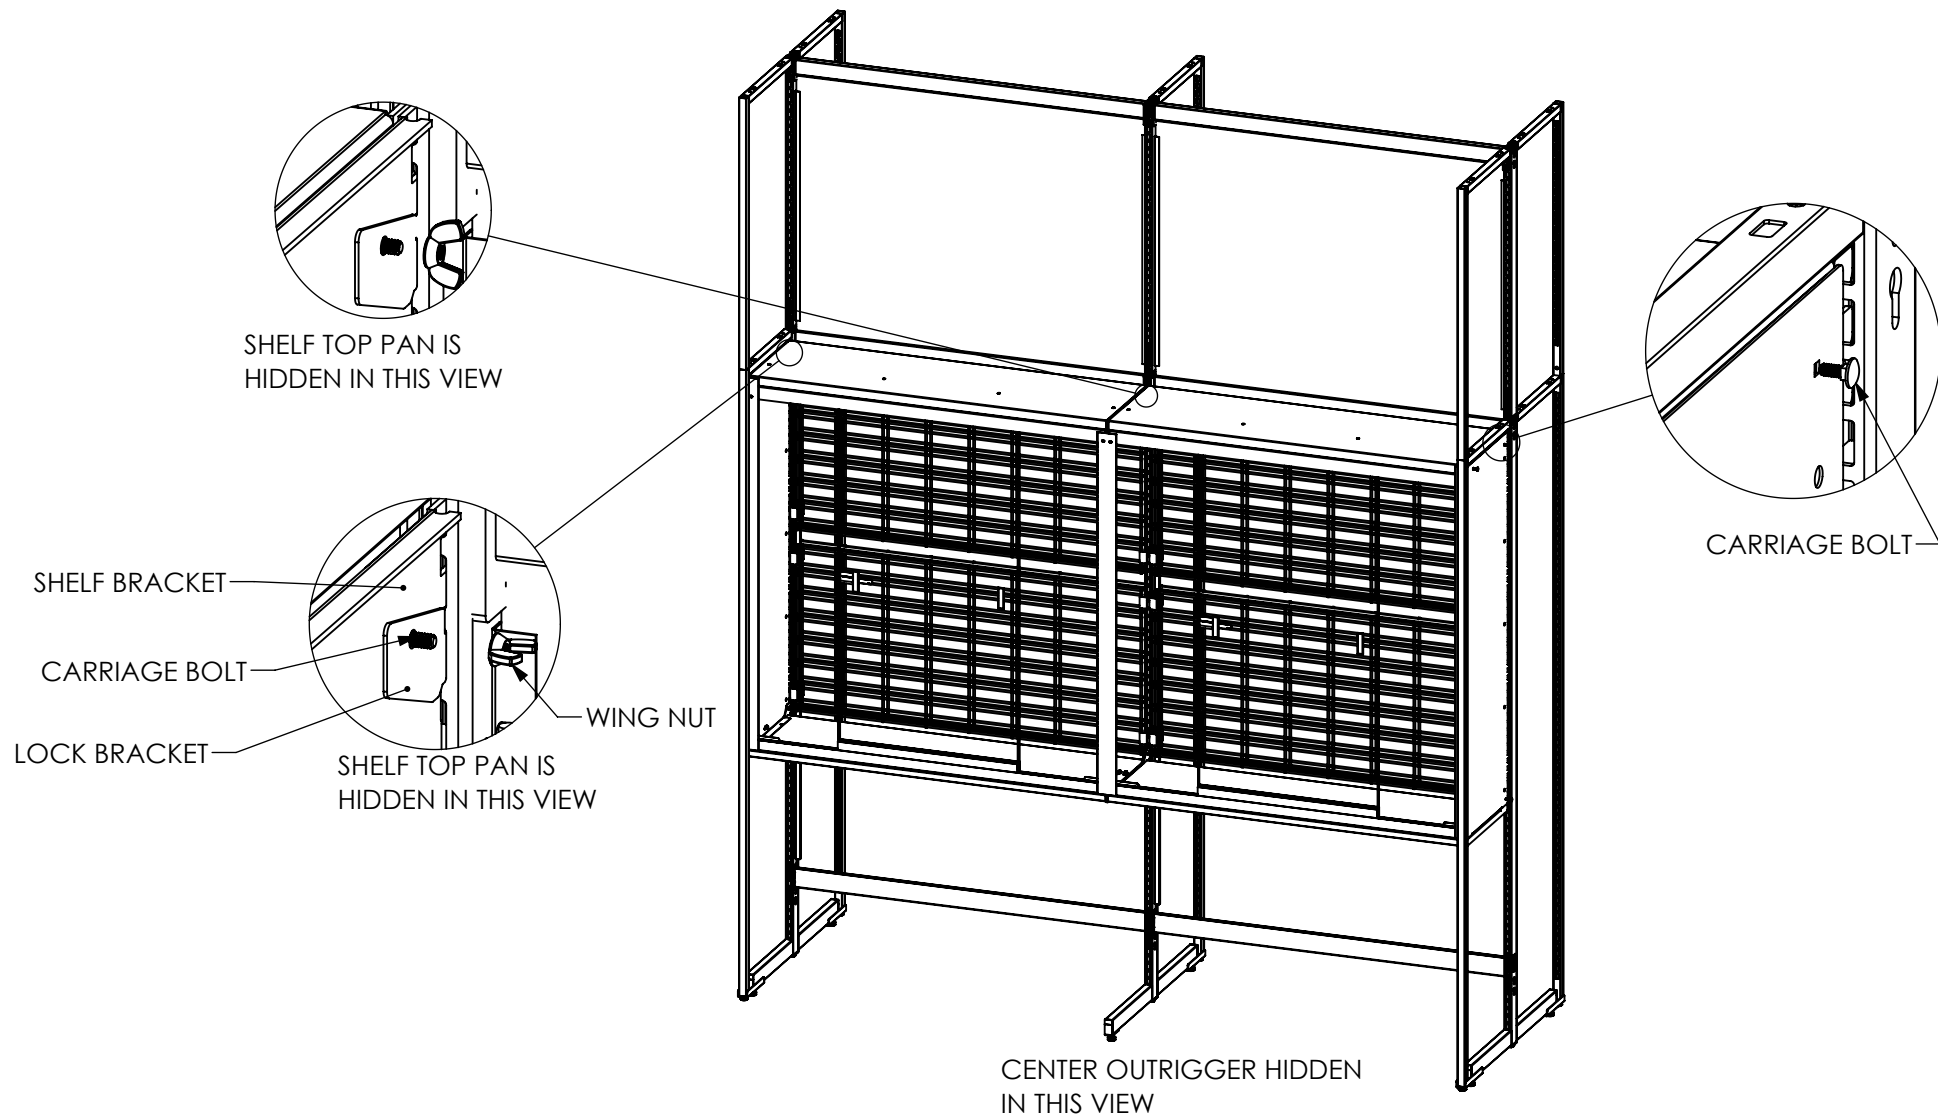

STEP 12: CONNECT SHELF FRONT COVERS TO TOP OF SHELVES WITH FOUR CARRIAGE BOLTS AND WING NUTS.

STEP 13: USING SECURITY BIT, 2" SCREWS, AND #10-32 NUTS, ATTACH SHELF FRONT COVERS THROUGH HOLES IN SIDE PANELS/INTERMEDIATE DIVIDER AND SHELVES.

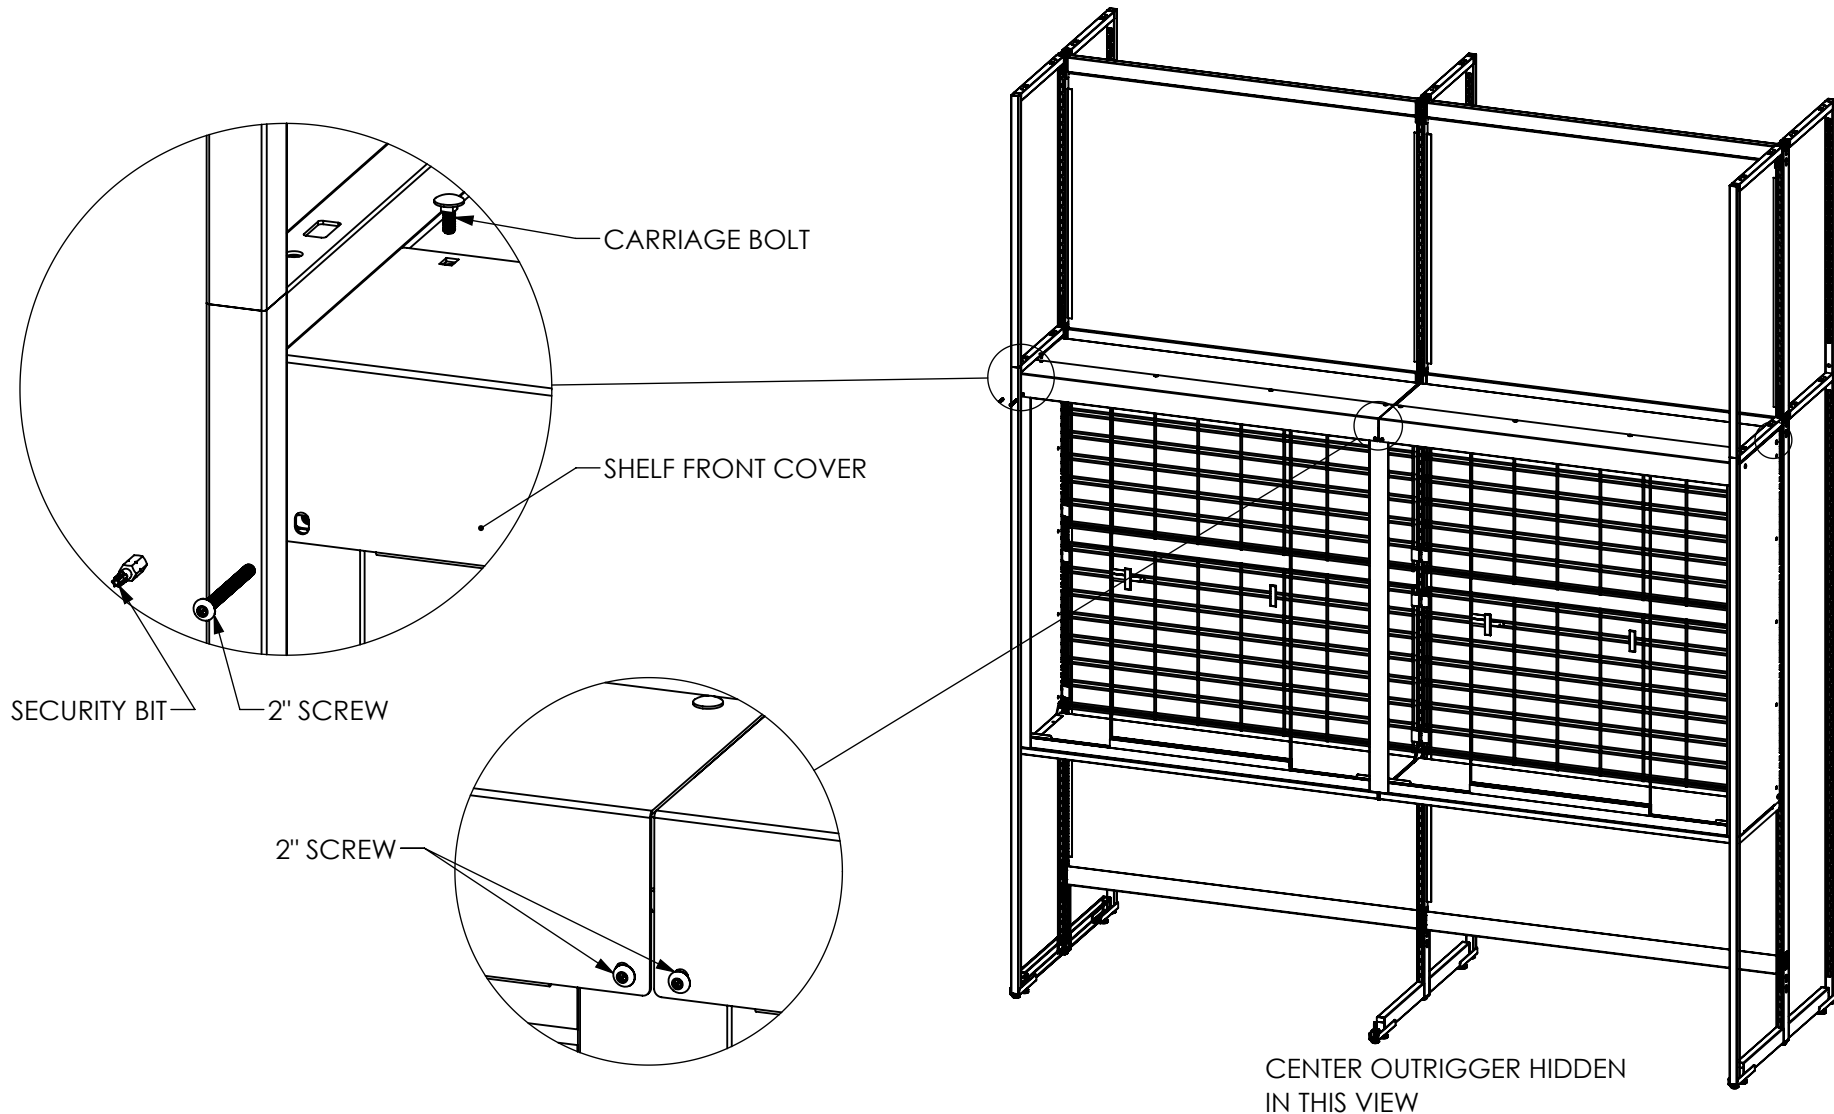

STEP 14: SECURE SIDE PANELS TO BOTTOM SHELVES WITH TWO TEKS SCREWS.

STEP 15: TIGHTEN ALL HARDWARE AND REPLACE ANY REMOVED OUTRIGGER COMPONENTS.

