

Walmart Part No. 100606468, 100606469

Walmart Description

Basketball Goal Display (4 arms) Basketball Goal Display (6 arms)


This assembly requires three associates.

Tools required:

mallet



(1) 3/8", (2) 7/16" & (2) 1/2" wrenches (for quicker assembly a socket wrench with a 3/8", 7/16" or 1/2" socket can be used)







Scan QR code or visit http://www.ladarling.com/basketball-goal-display/ for a digital copy of the instruction sheets and assembly video.



LAD DESCRIPTION

BASKETBALL GOAL DISPLAY


LAD PART NO.


DATE 12/8/16 Each step can be clicked on to jump to that portion of the assembly video.

Customer Service 1-800-682-5730

Step 1: In backroom, have store assembler assemble rims and brackets to backboards per manufacturer instructions, and assemble goal hangers to each goal before the fixture is set on the floor. See pages 3-5 for detailed instructions to attach each goal to a hanger. Note: Some stores will receive a goal with backboard only.

FIXTURE HARDWARE KIT PARTS

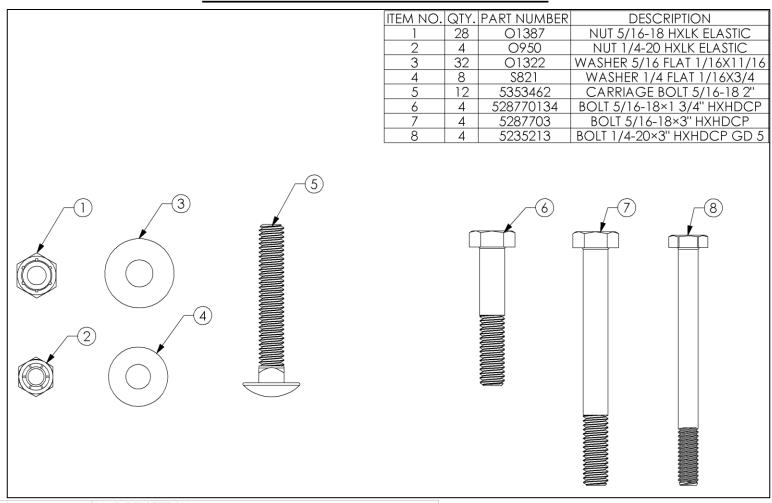

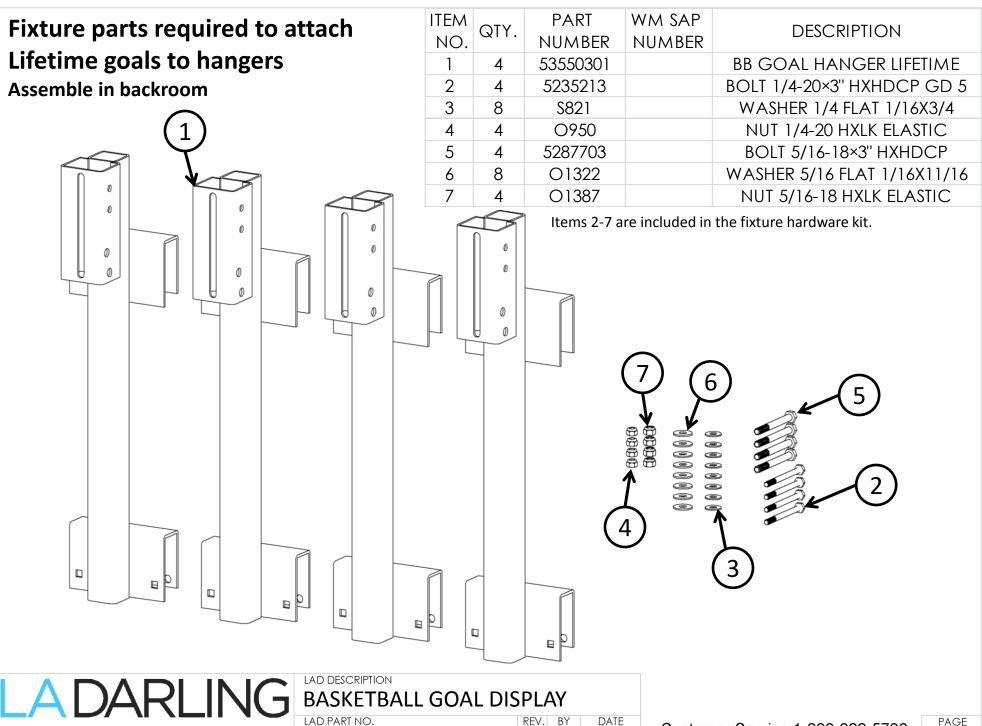

REDEFINE. RETHINK. RETAIL SOLUTIONS. 301138IS

12/8/16

Lifetime 44" Goal (90670)

Note: The hardware for steps A & B is included in the Lifetime goal kit. Assemble in back room.

Step A: Insert rim through backboard. Attach rim to backboard using a 5/16"×3" carriage bolt, large washer, and nut.

Step B: Attach braces to backboard and rim as shown.

Note! The bolts between the braces and rim must face outward. This does not match the Lifetime instructions.



Step C: Attach lifetime hanger using ¼"×3" bolt, (2) ¼" washers, (2) ¼" nuts, 5/16"×3" bolt, (2) 5/16" washers, and (2) 5/16" nuts.



Note! All other lifetime goals will also attach to a hanger with a ¼"×3" bolt & 5/16"×3" bolt. The 5/16"×3" bolt goes in the lowest hole in the support bracket, and the ¼"×3" bolt goes in the highest hole that aligns with the hanger.

It will be necessary to remove any bolts used during assembly that will interfere with mounting the hanger.

Lifetime 46" goal


Remove this bolt and sleeve after goal assembly




1/4" bolt hole



Washers both sides



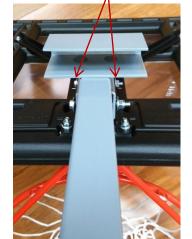

To order additional Lifetime goals in case of damage contact:

Anna Jensen 801-725-4955 Email – Displays@lifetime.com

Or

Kim De Los Reyes 801-512-9151 Email – Displays@lifetime.com

LAD DESCRIPTION BASKETBALL GOAL DISPLAY

LAD PART NO.

DATE 12/8/16

Customer Service 1-800-682-5730

Fixture parts required to attach **Spalding goals to hangers**

Assemble in backroom

Spalding Goals


Attach Spalding hanger to bolts on goal using 5/16" nuts and washers. The bolts through the rim will need to be held in place with a wrench to prevent loosening.





ITEM	QTY.	PART	WM SAP	DESCRIPTION	
NO.		NUMBER	NUMBER		
1	2	53550201		BB GOAL HANGER SPALDING	
2	8	O1322		WASHER 5/16 FLAT 1/16X11/16	
3	8	O1387		NUT 5/16-18 HXLK ELASTIC	

Items 2 & 3 are included in the fixture hardware kit.

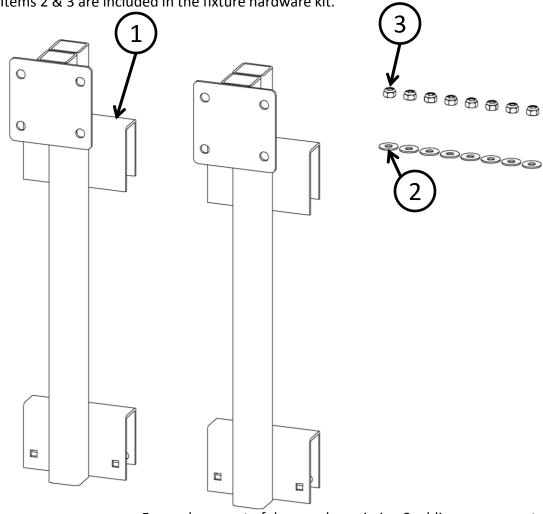

For replacement of damaged or missing Spalding components please call 1-800-558-5234 for Spalding Customer Service



LAD DESCRIPTION BASKETBALL GOAL DISPLAY

LAD PART NO.

DATE 12/8/16

Customer Service 1-800-682-5730

Fixture parts required for frame assembly

ITEM	QTY.	PART	WM SAP	DESCRIPTION
NO.		NUMBER	NUMBER	DESCRIFTION
1	2	10300336		FRAME RAIL F/ BASKETBALL GOAL DISPLAY
2	2	45120401		TOP BAR F/ BASKETBALL GOAL DISP
3	2	45120501		BTM BAR F/ BASKETBALL GOAL DISP
4	4	528770134		BOLT 5/16-18×1 3/4" HXHDCP
5	4	O1322		WASHER 5/16 FLAT 1/16X11/16
6	4	O1387		NUT 5/16-18 HXLK ELASTIC

Items 4-6 are included in the fixture hardware kit.



REDEFINE. RETHINK. RETAIL SOLUTIONS. 301138IS

BASKETBALL GOAL DISPLAY

LAD PART NO.

REV. BY 3 RP 12/8/16

DATE

Customer Service 1-800-682-5730


Step 2: Verify that (4) corners of rack are anchored to the floor. If rack is not anchored to floor, inform a member of management. If not anchored, do not install display until anchored.



Step 3: On sales floor, with (3) associates utilizing the two ladders, hook frame rail brackets into top slots on warehouse rack.



Ensure that bracket hooks are seated and locks are fully engaged.

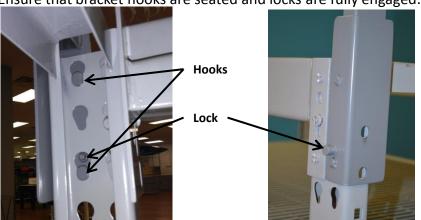


Step 4: Install top bars into top of frame rails. If necessary, use a mallet to drive top bars completely into frame rails.





Step 5: Attach bottom bars to frame rails using 5/16"×2" bolts, washers, and nuts.



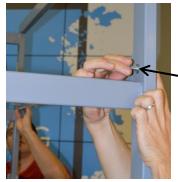

Washer and nut on inside of fixture



Customer Service 1-800-682-5730


BASKETBALL GOAL DISPLAY

LAD PART NO. REDEFINE. RETHINK. RETAIL SOLUTIONS. 301138IS

LAD DESCRIPTION

DATE 3 RP 12/8/16

Step 6: Place goals on basketball display as shown below. On the 6 goal display, install the 44" goals on the back side of the rack first.

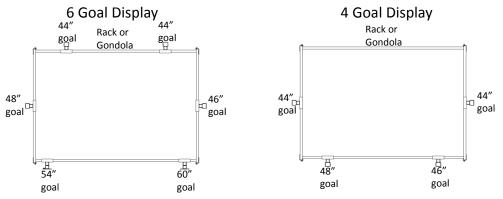

When a side of the rack is across from the bike rack, the 44" goal (item number 554886809) with backboard only should be installed facing the bike rack. For display purposes only this goal will not come with rim.

Tips: The third associate will help lift the goals to the associates on ladders.

For increased safety, it is recommended to use a scissor lift when hanging goals above the exercise rack. Associates must NOT stand on the racks. Scissor lifts should only be utilized on the sales floor overnights.





Step 7: Secure each hanger with (2) 5/16"×2" carriage bolts, (2) 5/16" washers, and (2) 5/16" locknuts.







Step 8: Install medium sized signmolds (not included in kit), accurately priced, with zip ties for each goal. GNFR: 100564649, 16x13 black signmold 1pk



LAD DESCRIPTION BASKETBALL GOAL DISPLAY

LAD PART NO.

12/8/16

DATE

Customer Service 1-800-682-5730