


PHOTO LAB INSTRUCTION SHEETS

SEE PAGES 2-8 FOR OPTIONAL LAYOUTS
SEE PAGES 9-11 FOR DETAILS ON ASSEMBLY



SAP#	Photo Lab Layouts
100581888	Layout, Photo Lab, Single Printer, LH (204)
100581889	Layout, Photo Lab, Single Printer, RH (204)
100582002	Layout, Photo Lab, Double Printer, LH (258)
100582000	Layout, Photo Lab, Double Printer, RH (258)
100582001	Layout, Photo Lab, Backroom LH
100581998	Layout, Photo Lab, Backroom RH
100609399	Layout, Photo Lab, Single Printer, no wall cabs, LH (204 FS)
100609406	Layout, Photo Lab, Single Printer, no wall cabs, RH (204 FS)
100609500	Layout, Photo Lab, Double Printer, no wall cabs, LH (258 FS)
100609510	Layout, Photo Lab, Double Printer, no wall cabs, RH (258 FS)
100621339	Layout, Photo Lab PC-150

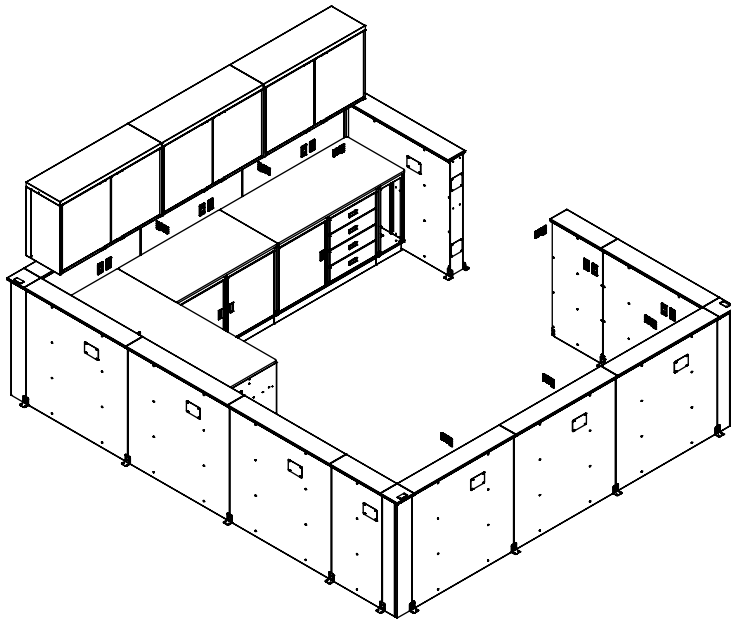



Visit www.ladarling.com/resources/metal-photo-center/ for a PDF copy of the instruction sheets.

WALMART SAP#100581888
WALMART DESCRIPTION: PHOTO LAB SINGLE PRINTER LH (204)

WALMART SAP#100609399
WALMART DESCRIPTION: PHOTO LAB SINGLE PRINTER NO WALL CABS LH (204 FS)

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	35355601	ASSY PHOTO CAB 75IN LH
2	1	35355301	ASSY PHOTO CAB 4FT
3	1	35355401	ASSY PHOTO CAB 5FT LH
4	4	53579500	ASSY, KNEEWALL CORNER
5	3	35356048	OVERHEAD CABINET ASSEMBLY
6	1	53581105	KIT, END COVER PANELS
7	7	35356100	PERIMETER WALL 48,W/ ELEC
8	4	35355900	PERIMETER WALL 48, NO ELEC
9	2	35356200	PERIMETER WALL 24,W/ ELEC

ITEM #8- OVERHEAD CABINETS ARE NOT INCLUDED IN SAP#100609399



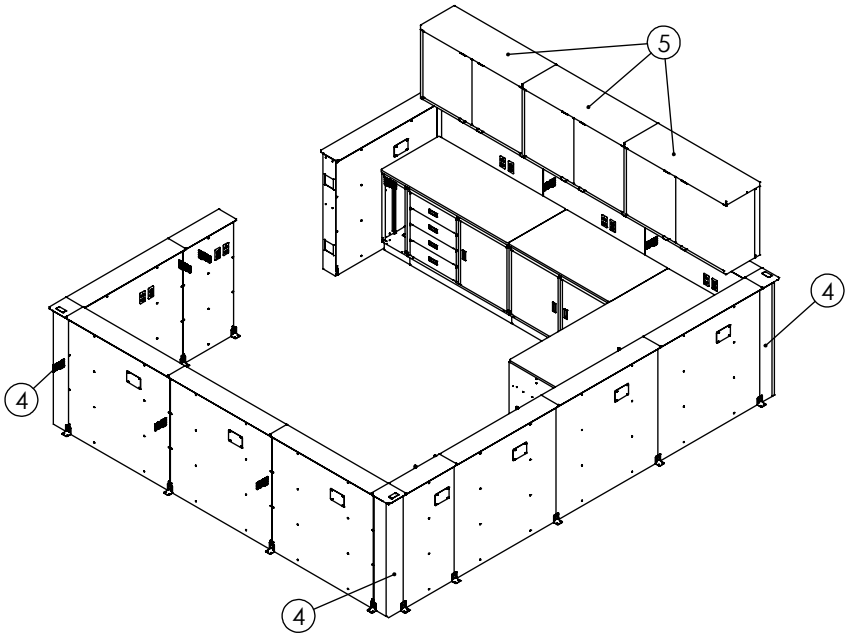
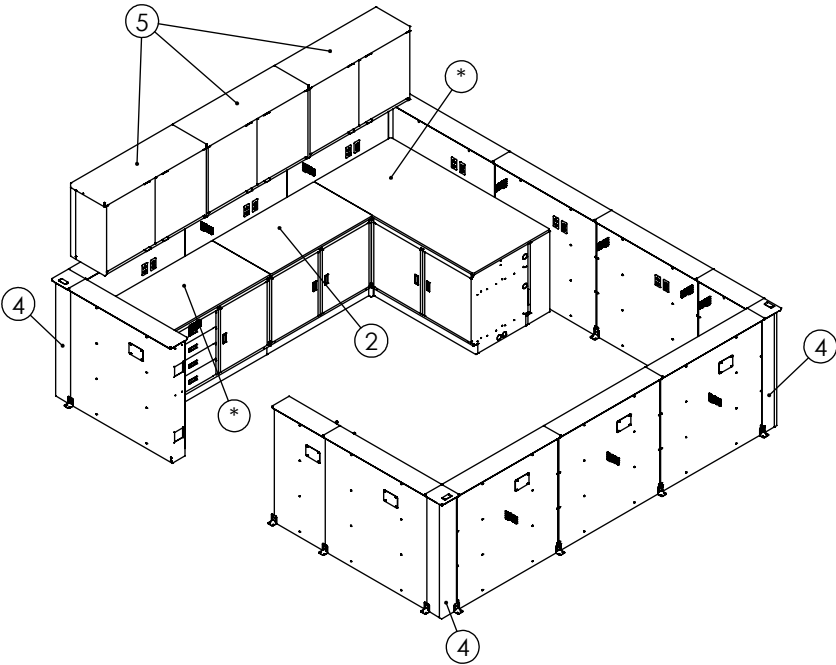


WALMART SAP#100581889
WALMART DESCRIPTION: PHOTO LAB SINGLE PRINTER RH (204

WALMART SAP#100609406
WALMART DESCRIPTION: PHOTO LAB SINGLE PRINTER NO WALL CAB RH (204 FS)

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	35355701	ASSY PHOTO CAB 75IN RH
2	1	35355301	ASSY PHOTO CAB 4FT
3	1	35355501	ASSY PHOTO CAB 5FT RH
4	4	53579500	ASSY, KNEEWALL CORNER
5	3	35356048	OVERHEAD CABINET ASSEMBLY
6	1	53581105	KIT, END COVER PANELS
7	7	35356100	PERIMETER WALL 48,W/ ELEC
8	4	35355900	PERIMETER WALL 48, NO ELEC
9	2	35356200	PERIMETER WALL 24,W/ ELEC

ITEM #8- OVERHEAD CABINETS ARE NOT INCLUDED IN SAP#100609406

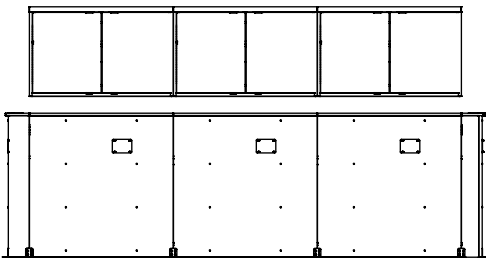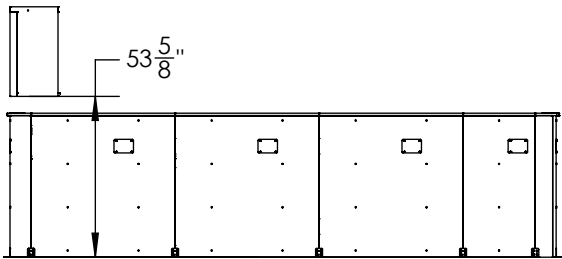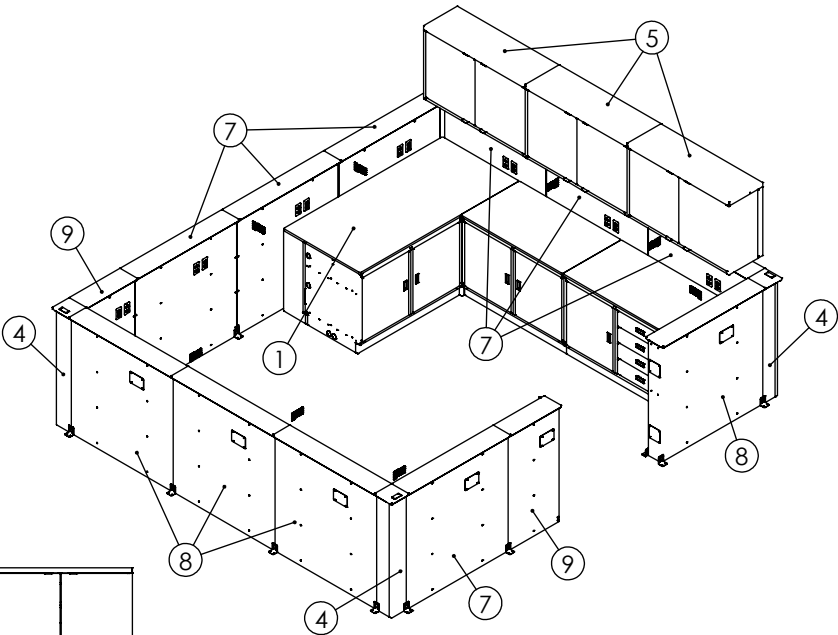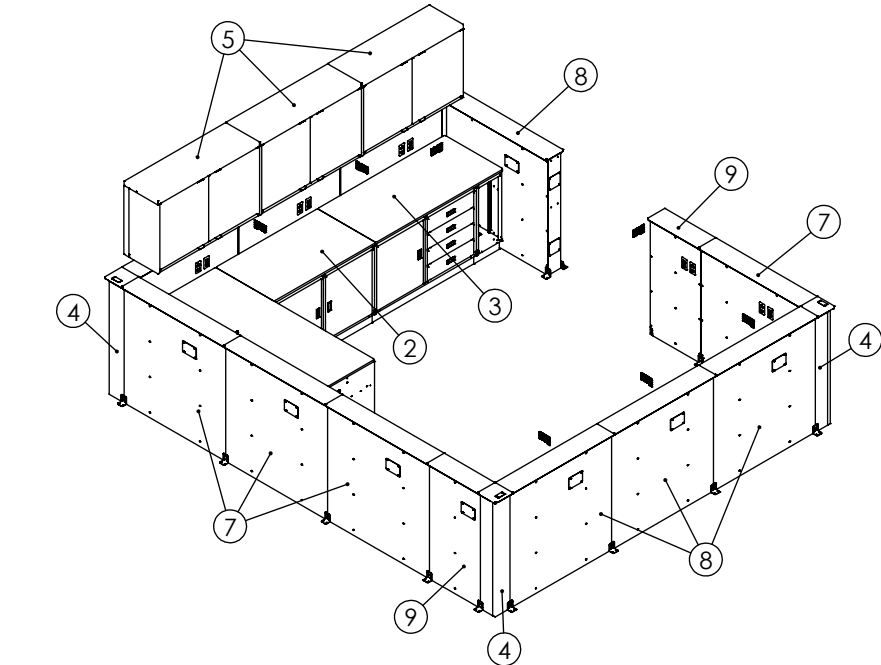


WALMART SAP#100582002
WALMART DESCRIPTION: PHOTO LAB DOUBLE PRINTER LH (258)

WALMART SAP#100609500
WALMART DESCRIPTION: PHOTO LAB DOUBLE PRINTER NO WALL CABS LH (258 FS)

ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	1	35355601	ASSY PHOTO CAB 75IN LH
2	1	35355301	ASSY PHOTO CAB 4FT
3	1	35355401	ASSY PHOTO CAB 5FT LH
4	4	53579500	ASSY, KNEEWALL CORNER
5	3	35356048	OVERHEAD CABINET ASSEMBLY
6	1	53581105	KIT, END COVER PANELS
7	9	35356100	PERIMETER WALL 48,W/ ELEC
8	4	35355900	PERIMETER WALL 48, NO ELEC
9	2	35356200	PERIMETER WALL 24,W/ ELEC

ITEM #8- OVERHEAD CABINETS ARE NOT INCLUDED IN SAP#100609500

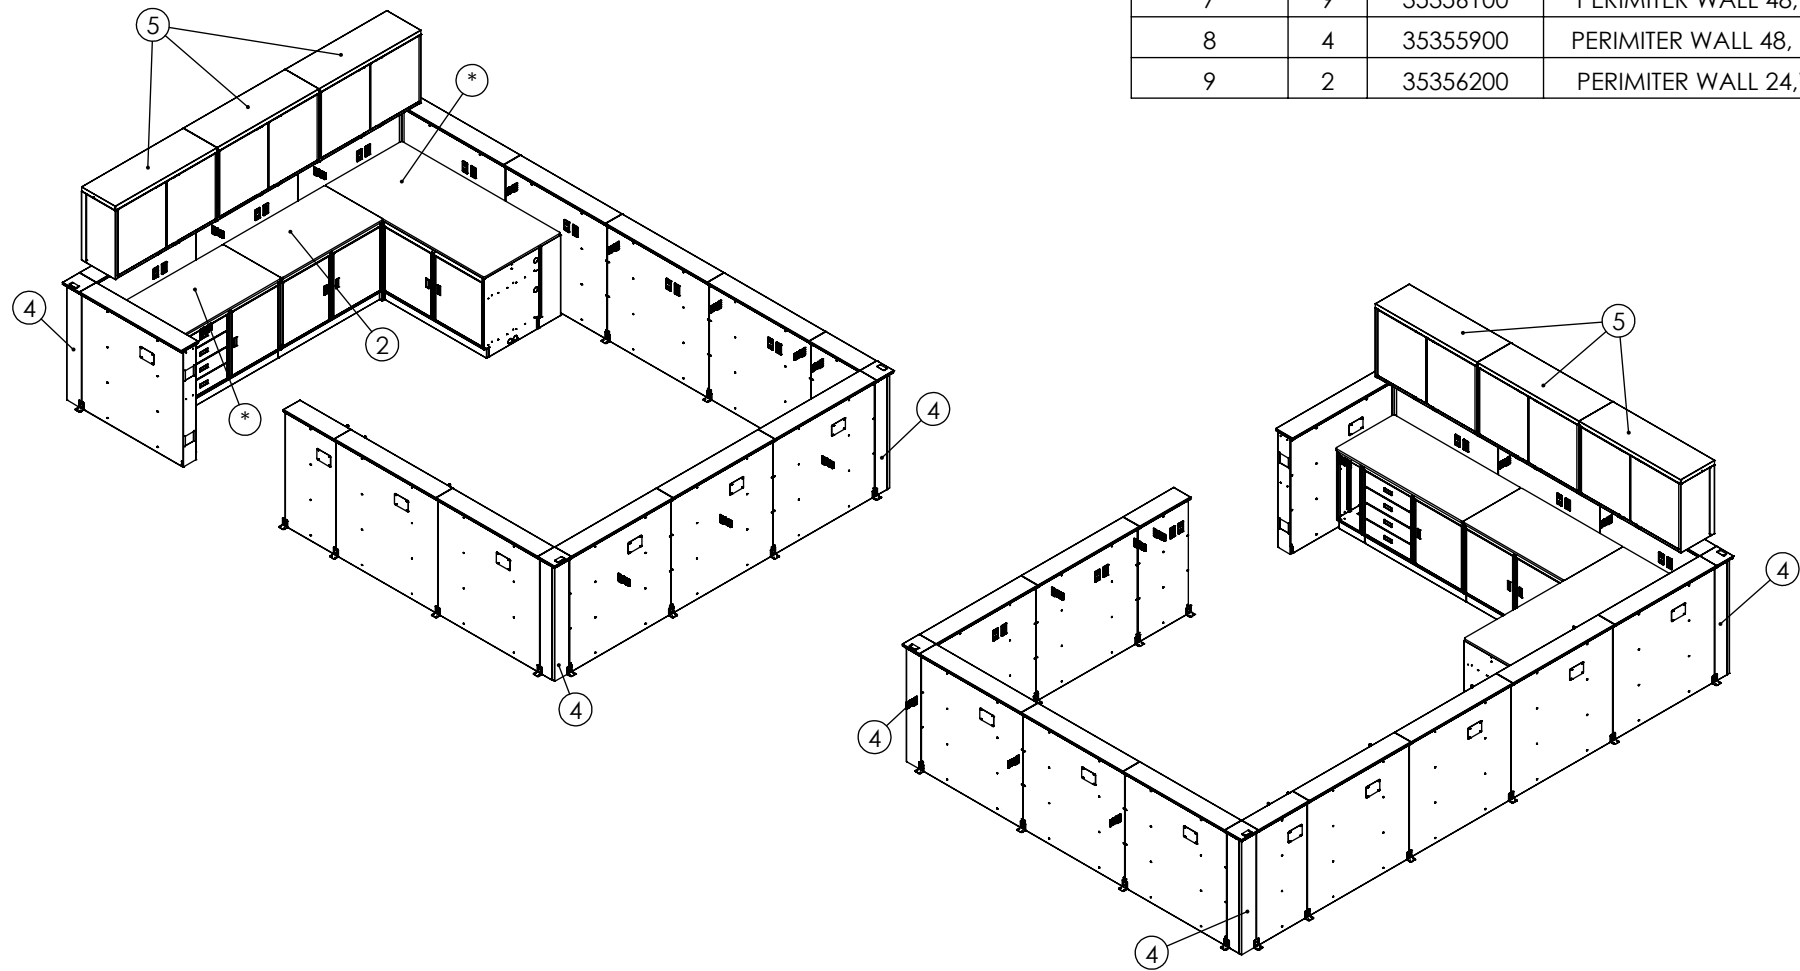


WALMART SAP#100582000
WALMART DESCRIPTION: PHOTO LAB DOUBLE PRINTER RH (258)

WALMART SAP#100609510
WALMART DESCRIPTION: PHOTO LAB DOUBLE PRINTER NO WALL CABS RH (258 FS)



ITEM #8- OVERHEAD CABINETS ARE NOT INCLUDED IN SAP#100609510

ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	1	35355701	ASSY PHOTO CAB 75IN RH
2	1	35355301	ASSY PHOTO CAB 4FT
3	1	35355501	ASSY PHOTO CAB 5FT RH
4	4	53579500	ASSY, KNEEWALL CORNER
5	3	35356048	OVERHEAD CABINET ASSEMBLY
6	1	53581105	KIT, END COVER PANELS
7	9	35356100	PERIMETER WALL 48,W/ ELEC
8	4	35355900	PERIMETER WALL 48, NO ELEC
9	2	35356200	PERIMETER WALL 24,W/ ELEC

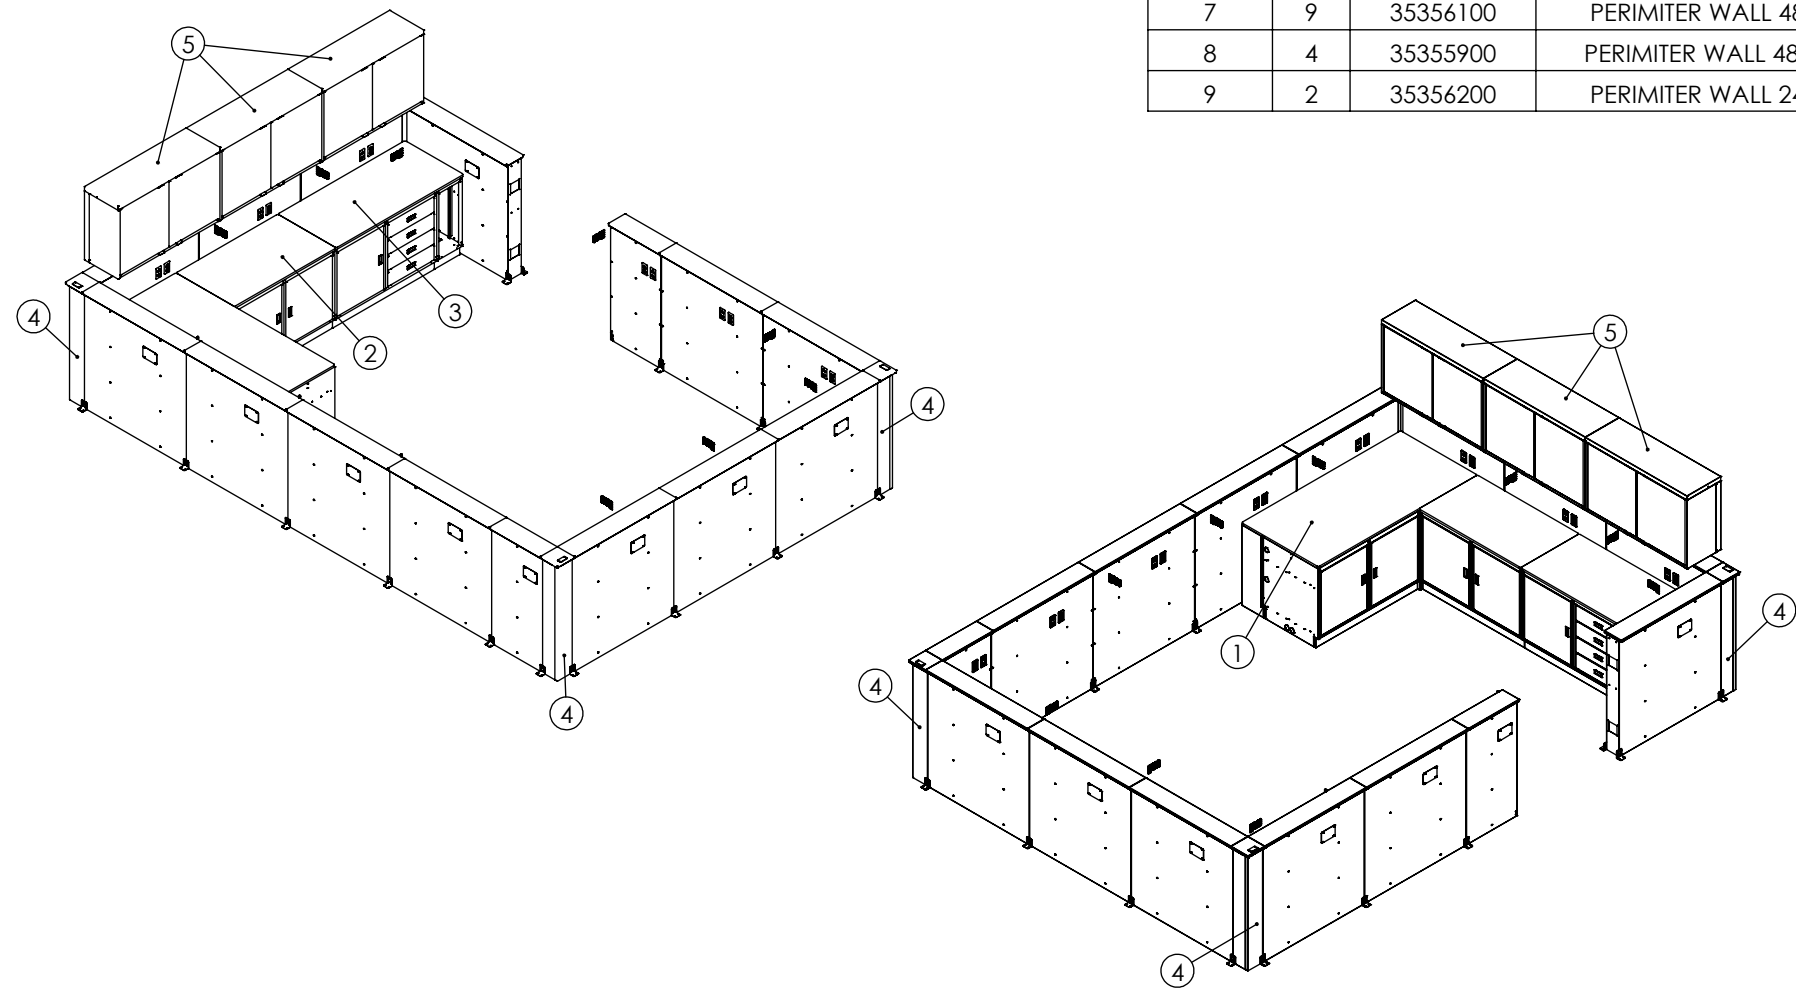



WALMART SAP#100582001
WALMART DESCRIPTION: PHOTO LAB BACKROOM LH

ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	1	35355701	ASSY PHOTO CAB 75IN RH
2	1	35355301	ASSY PHOTO CAB 4FT
3	1	35355501	ASSY PHOTO CAB 5FT RH
4	1	35355801	ASSY PHOTO CAB 2FT

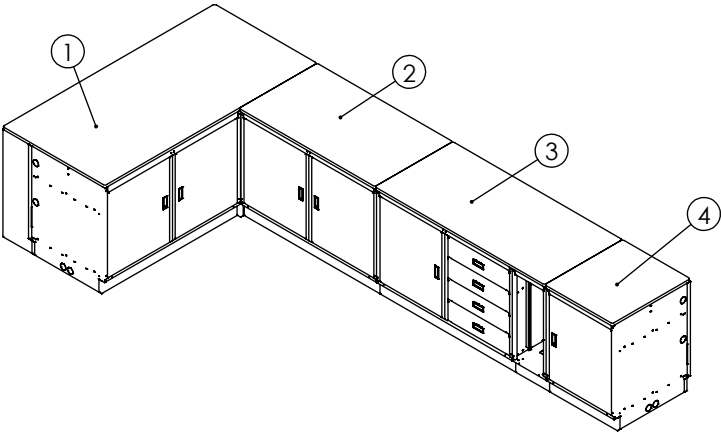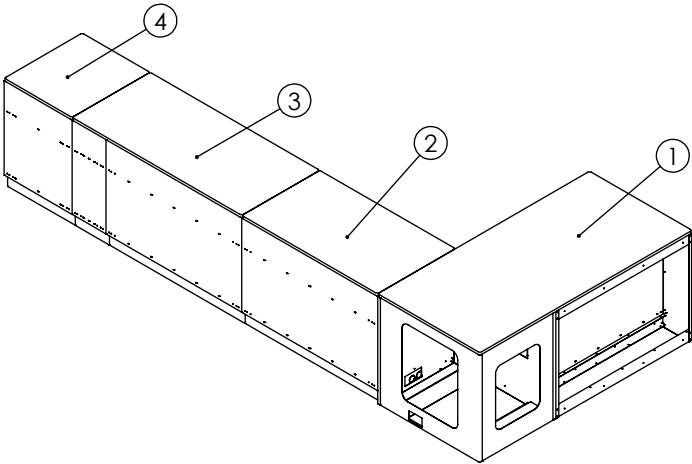


WALMART SAP#100581998
WALMART DESCRIPTION: PHOTO LAB BACKROOM RH

ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	1	35355701	ASSY PHOTO CAB 75IN RH
2	1	35355301	ASSY PHOTO CAB 4FT
3	1	35355501	ASSY PHOTO CAB 5FT RH
4	1	35355801	ASSY PHOTO CAB 2FT

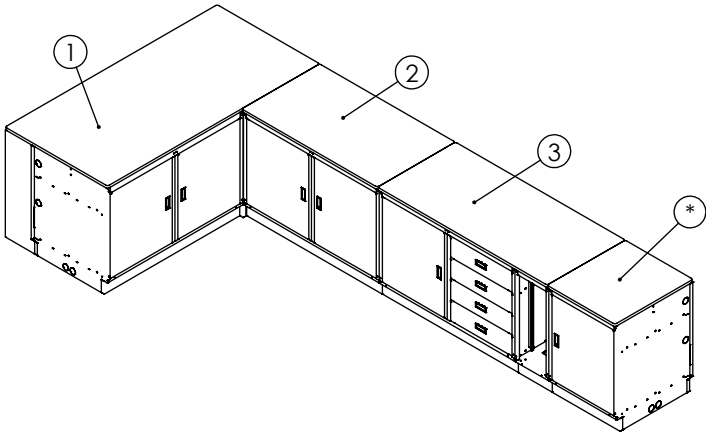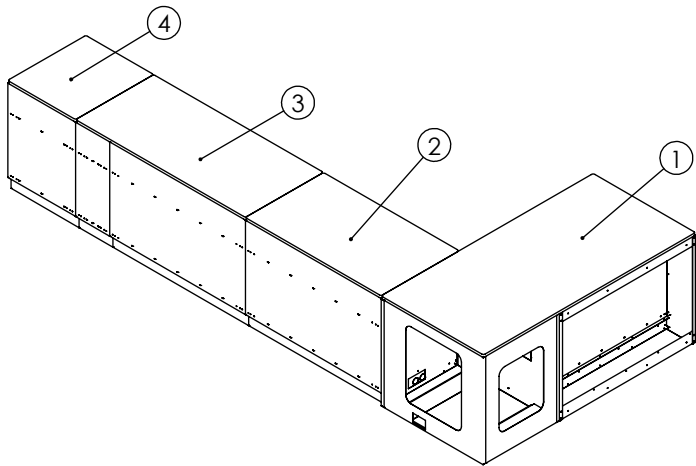

WALMART SAP#100621339
WALMART DESCRIPTION: PHOTO LAB METAL PC-150

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	2	53579500	ASSY, KNEEWALL CORNER
2	13	35356100	PERIMETER WALL 48,W/ ELEC
3	1	35355701	ASSY PHOTO CAB 75IN RH
4	1	35355301	ASSY PHOTO CAB 4FT
5	1	35355501	ASSY PHOTO CAB 5FT RH
6	1	53581105	KIT, END COVER PANELS
7	1	35353601	CENTER POS CABINET
8	1	35351301	POS CAB ASSY - RH

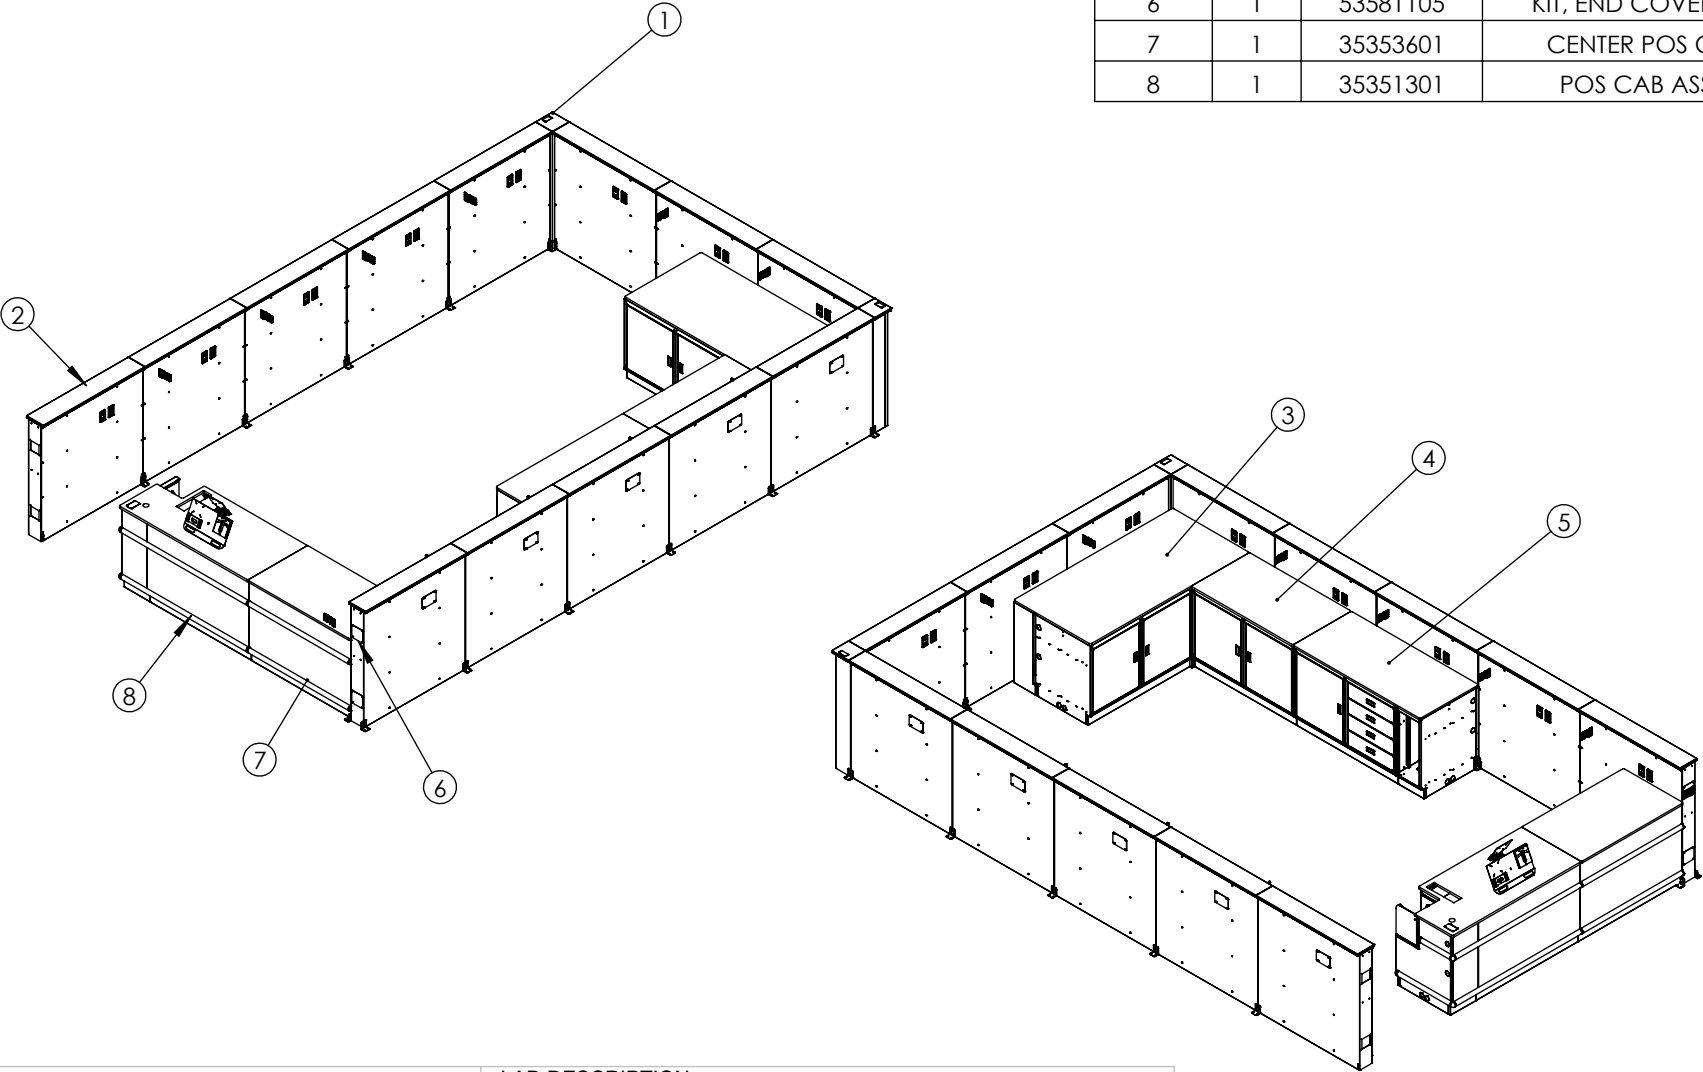

LA DARLING

REDEFINE. RETHINK. RETAIL SOLUTIONS.

LAD DESCRIPTION

PHOTO LAB ASSEMBLY INSTRUCTIONS

LAD PART NO.
353563IS

REV. BY DATE
1 CJS01/16/17

Customer Service 1-800-682-5730

PAGE
8 OF 11

ASSEMBLY STEP 1:

FOR LAYOUTS UTILIZING WALLS:

STEP 1: LOCATE ALL WALLS AND CONFIGURE PER FLOOR PLAN. NOTE THE

LAYOUT OF YOUR FLOOR PLAN AND ENSURE WALLS (WITH AND WITHOUT

ELECTRIC) ARE POSITIONED CORRECTLY BEFORE BOLTING WALLS TOGETHER.

STEP 2: IF ATTACHED, REMOVE TOP CAP FROM WALLS BY REMOVING SCREWS ON

LOWER SIDE.

STEP 3: BOLT WALL SECTIONS TOGETHER USING FOUR 1/4-20 BOLTS AND NUTS

THROUGH HOLES SHOWN BELOW.


STEP 4: ATTACH ANCHOR BRACKETS AT BASE OF WALL USING 1/4-20 BOLTS. (SEE

DETAIL A). NOTE! ANCHOR HARDWARE NOT INCLUDED.

STEP 5: INSTALL ELECTRIC AND DATA AS REQUIRED (CONTRACTOR INSTALLED)


STEP 6: REINSTALL TOP CAPS BACK ONTO TOP OF WALLS.

STEP 7: INSTALL COVER PLATES OVER SQUARE HOLES IN WALKTHROUGH.

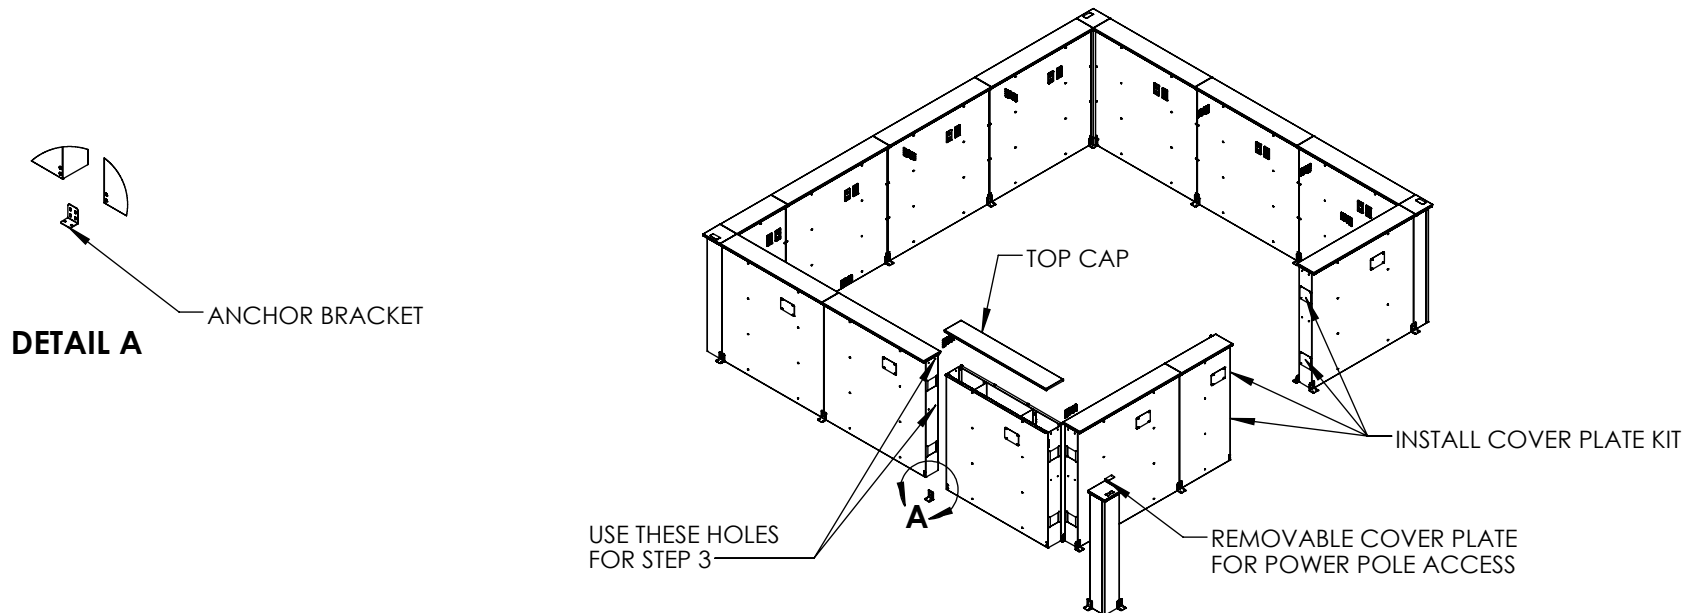

ASSEMBLY STEP 2:

FOR LAYOUTS UTILIZING WALLS or BACKROOM OPTIONS (METAL WALLS NOT USED):
STEP 1: LOCATE 3 CABINETS AND CONFIGURE PER FLOOR PLAN.
STEP 2: REMOVE ANY KNOCKOUTS NEEDED FOR CORD MANAGEMENT
STEP 3: ONCE CABINETS ARE IN POSITION, ATTACH TOGETHER USING SELF TAPPING
SHEET METAL SCREWS FROM HARDWARE KIT AS NEEDED.

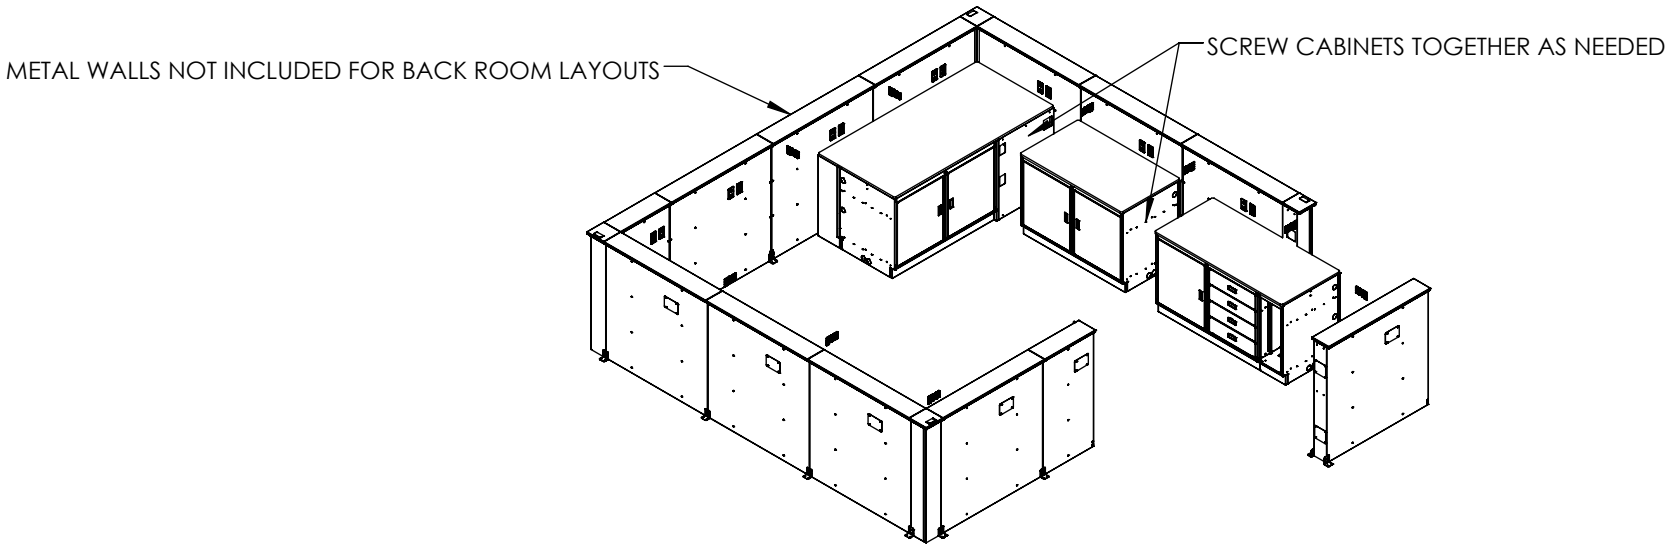

ASSEMBLY STEP 3:

FOR LAYOUTS UTILIZING OVERHEAD CABINETS:
STEP 1: POSITION CABINET ABOVE WALL SECTION AND MOUNT TO WALL USING
APPROPRIATE HARDWARE FOR WALL COMPOSITION. SEE BELOW FOR DETAILS ON
RECOMMENDED ELEVATION.

