Walmart Part No.	**100683294** **100683351** **100683360**

Walmart Description

TREND POD AO 3154x48
TREND POD STR 1EP 1EC 3154x66
TREND POD STR 2EP 3154x48

SAP # 100683294
TREND POD AO 3154x48

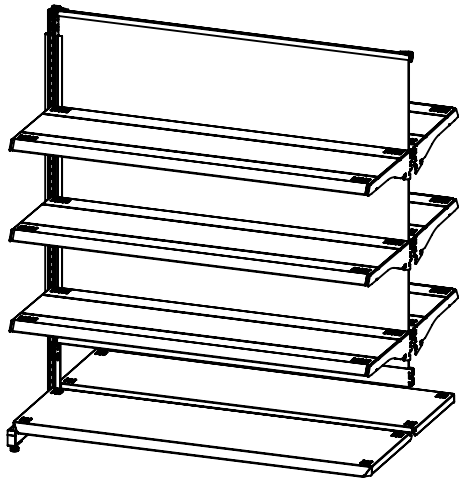

SAP # 100683351
TREND POD STR 1EP 1EC 3154x66

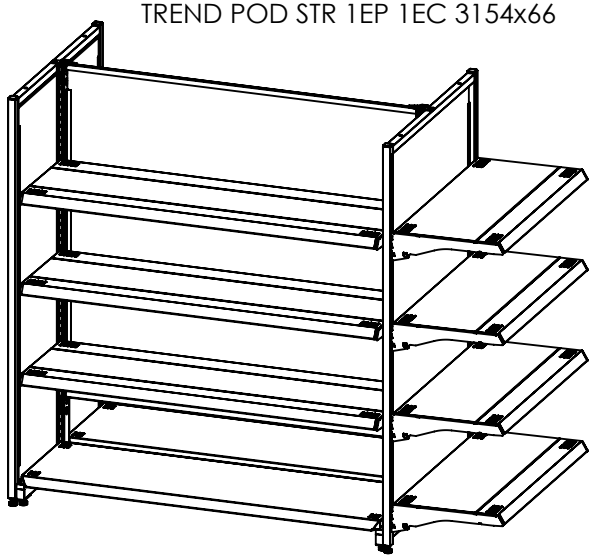

SAP # 100683360
TREND POD STR 2EP 3154x48

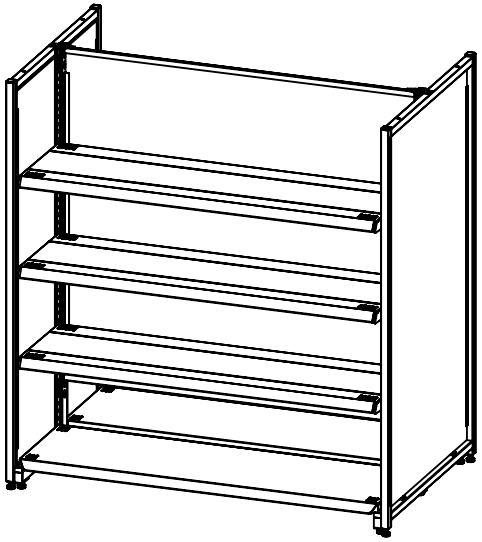

Scan QR code or visit www.ladarling.com/trend-pod/ for the latest copy of the instruction sheets.

LA DARLING
REDEFINE. RETHINK. RETAIL SOLUTIONS.

LAD DESCRIPTION
TREND POD STARTERS AND ADD-ONS

LAD PART NO.	REV.	BY	DATE
354401IS	1	RP	8/30/22

Customer Service 1-800-682-5730

Step 1: Hold uprights about 48" apart with levelers resting on the floor and the channels facing each other.

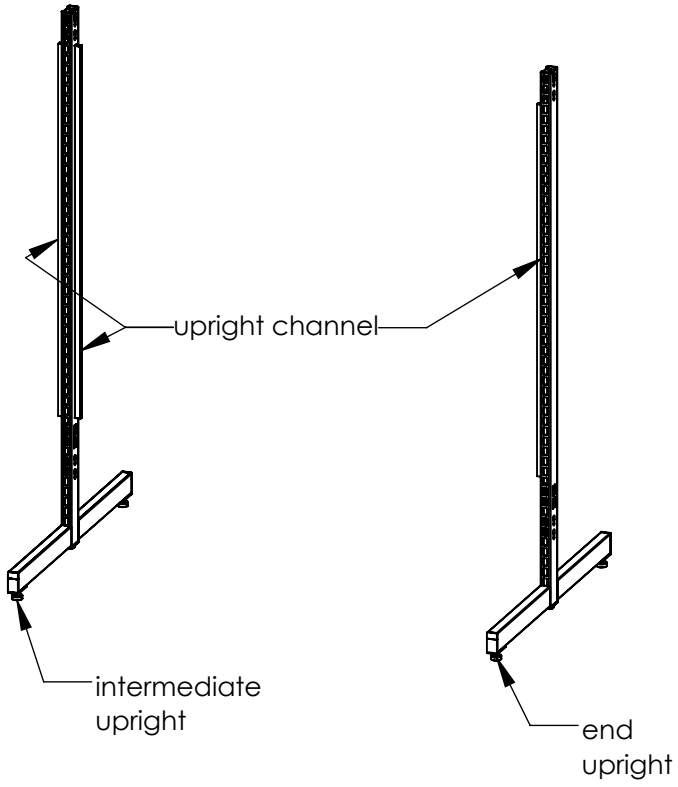

Step 2: Insert tabs of cross channel into slots at bottom of uprights. Seat in place by tapping on each end of cross channel.

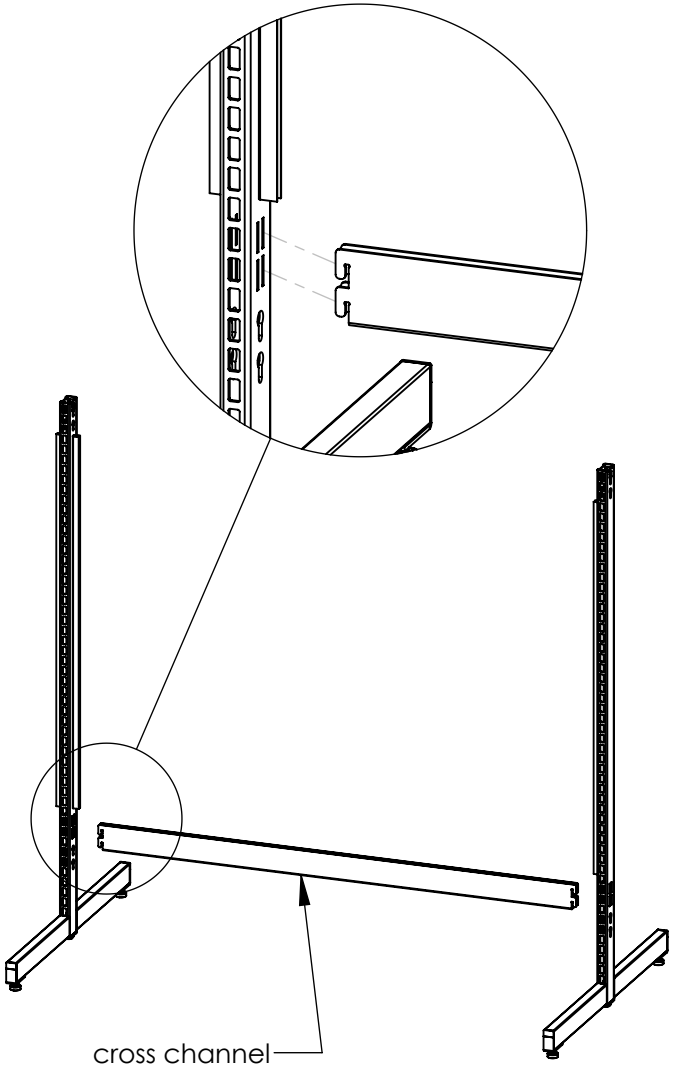

Step 3: Slide corrugated panel into channels on uprights and cross channel.

Step 4: Assemble top panel retainer between uprights, ensuring corrugated panel fits into channel. Push down until the projections "pop" onto uprights.

Step 5: Continue building full length of trend pod. Last upright installed should be an end upright.

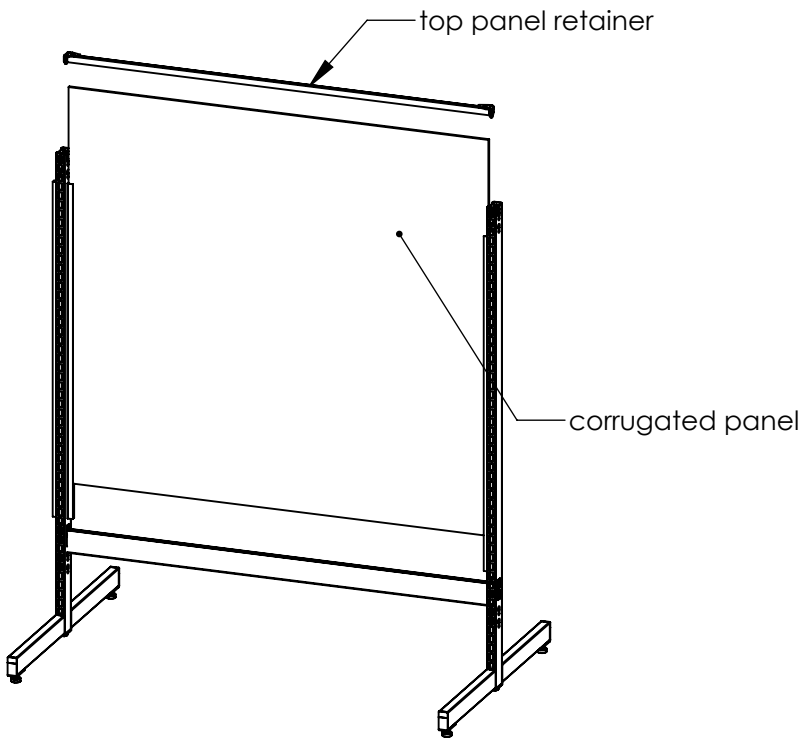

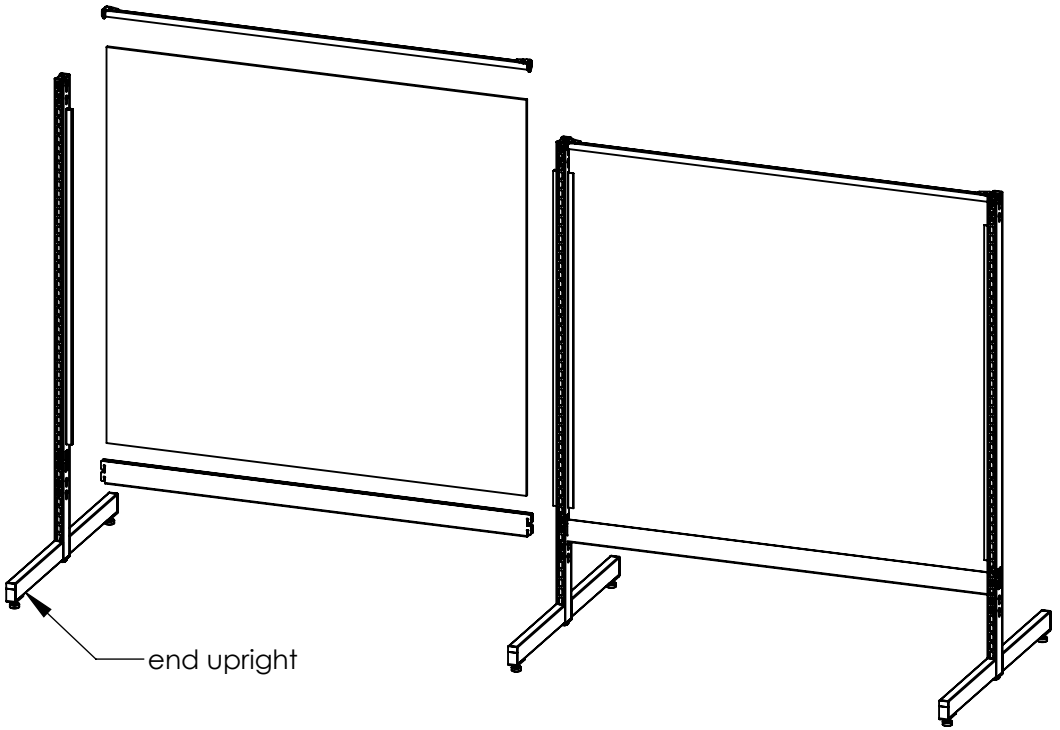

Step 6: Insert corrugated panels in channels on end frames.

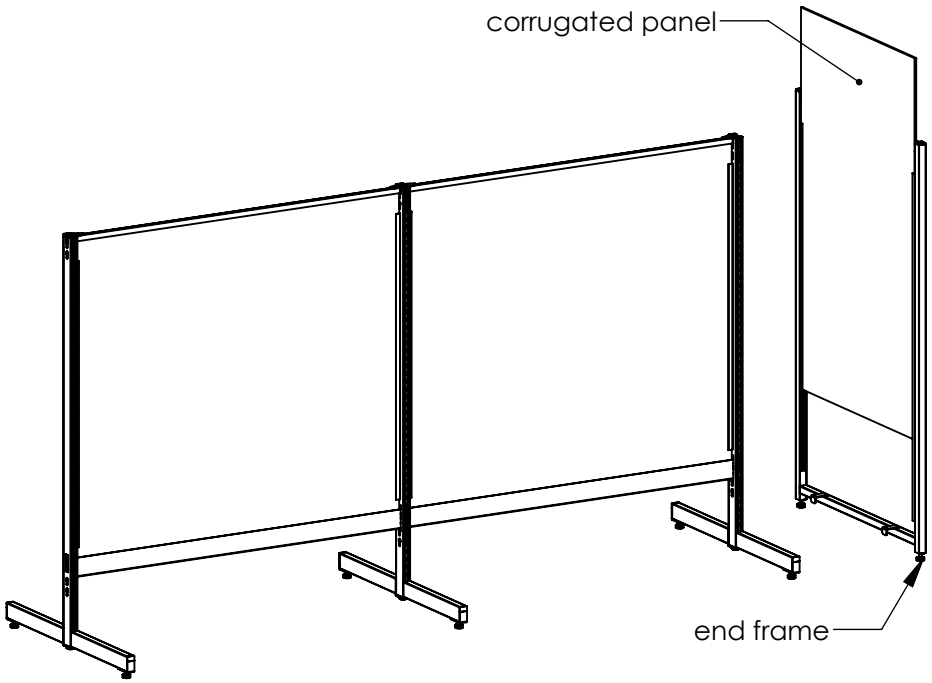

Step 7: Attach end frames to end uprights by hooking top tab into top of upright and bottom tabs over upright base legs.

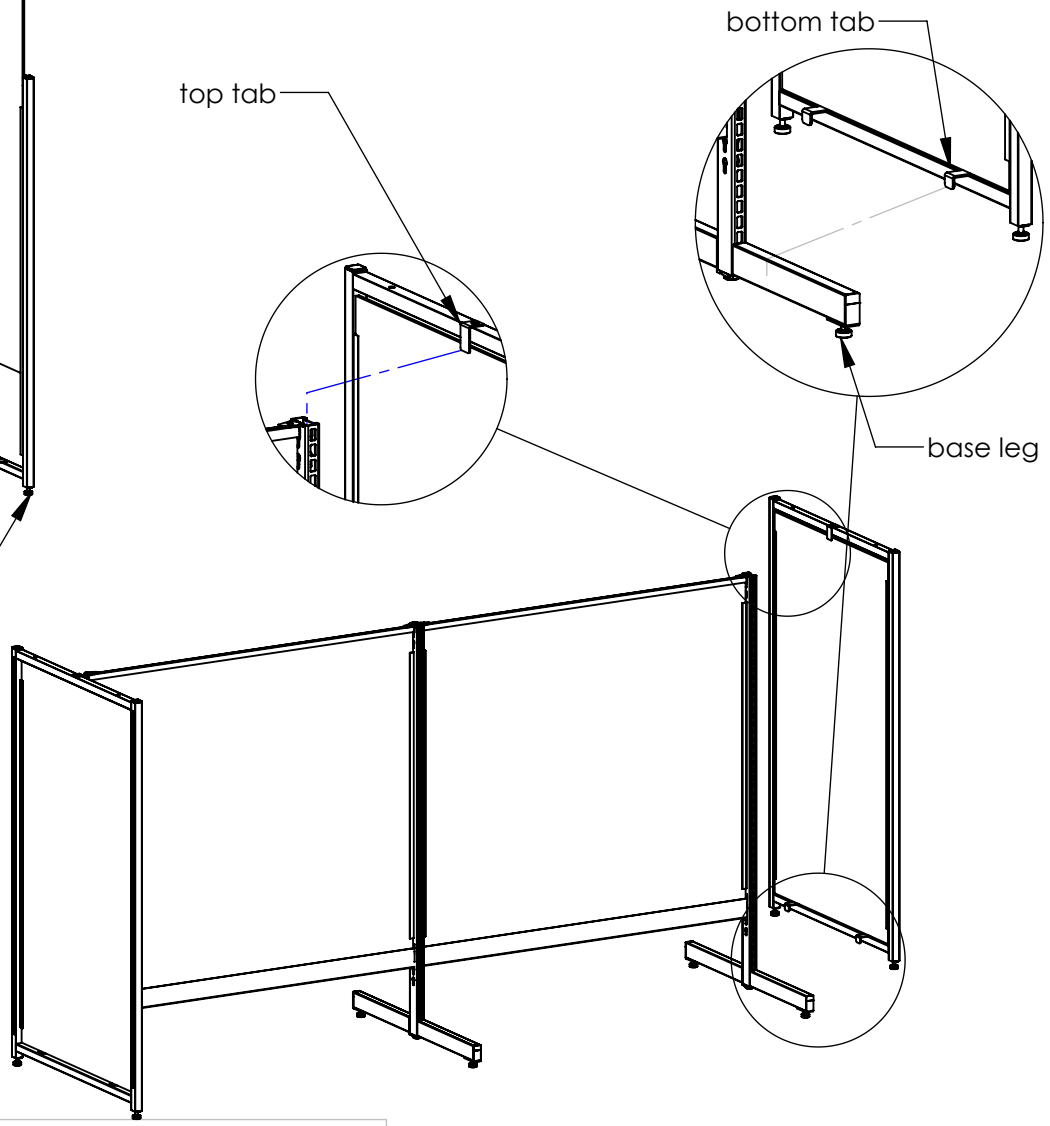

Step 8: Install side decks on both sides of Trend Pod by tilting deck up to insert hook into slot just above base leg. Lower deck to rest on base legs.

Step 9: Install shelves where needed by inserting hooks at back of shelf into slots on upright or end frame face.

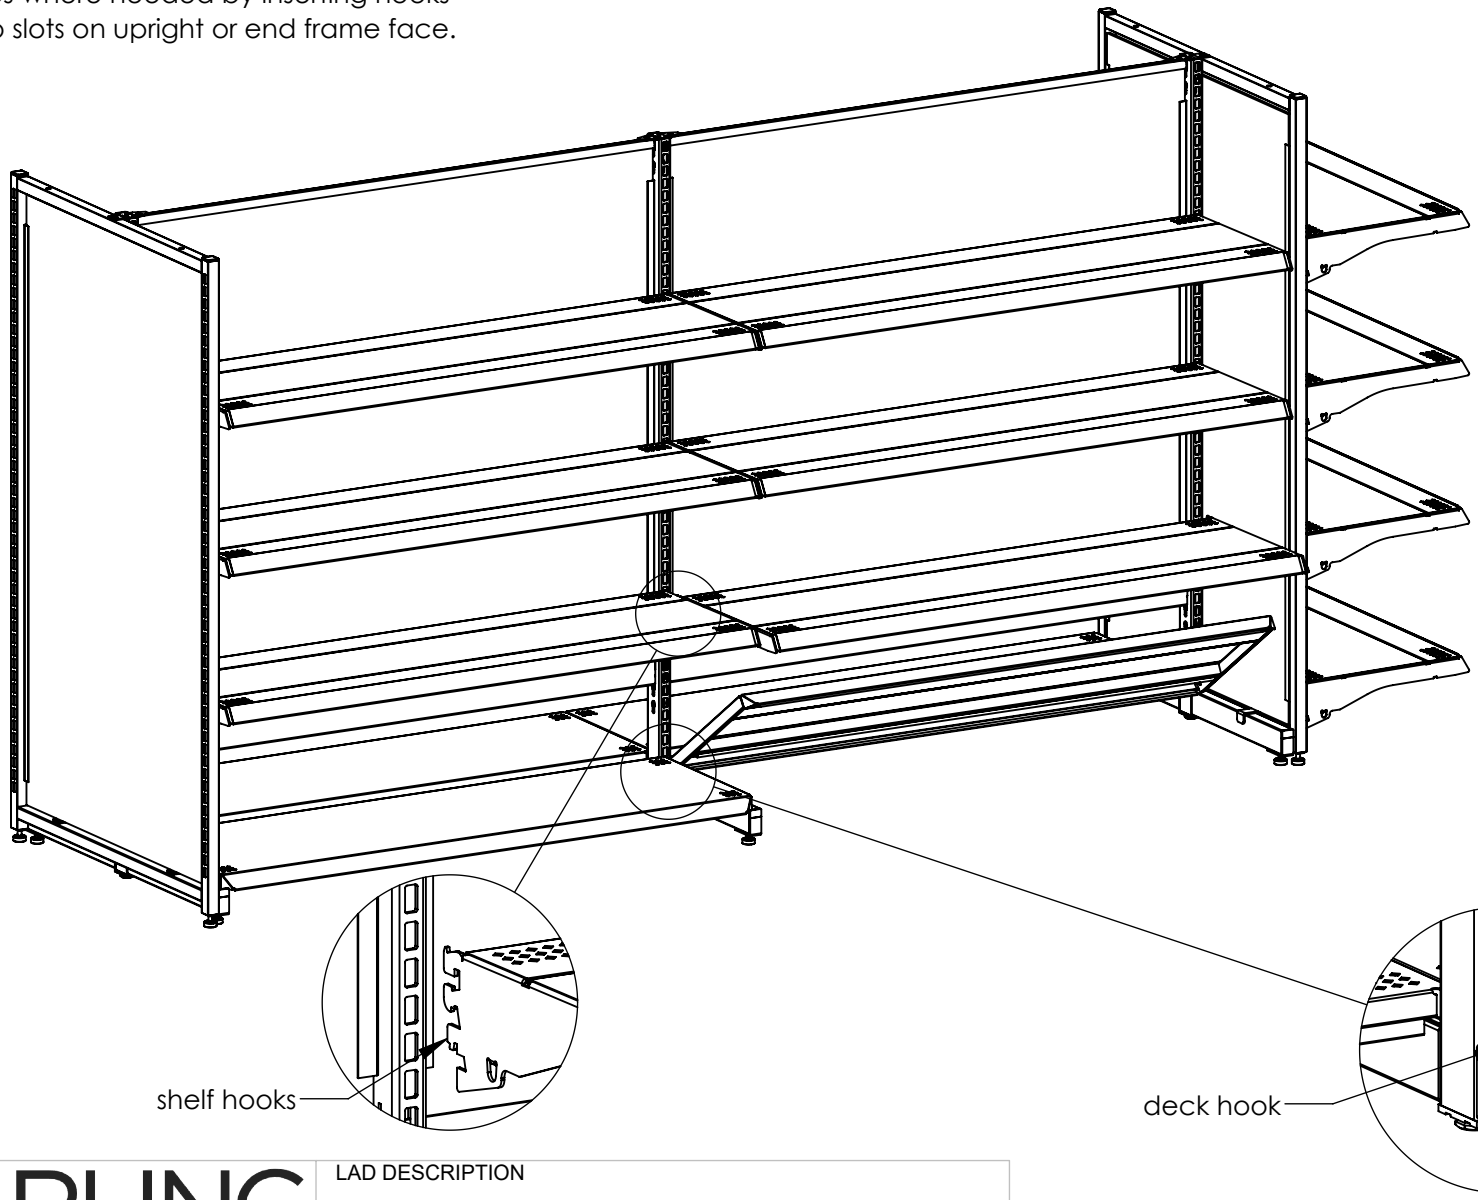

LA DARLING
REDEFINE. RETHINK. RETAIL SOLUTIONS.

LAD DESCRIPTION
TREND POD STARTERS AND ADD-ONS

LAD PART NO.	REV.	BY	DATE
354401IS	1	RP	8/30/22

Customer Service 1-800-682-5730